#### RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack companyowned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage. EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do

not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell 9/94

#### RADIO SHACK A Division of Tandy Corporation Fort Worth, Texas 76102

7A5

## Printed in Hong Kong

# **Radio Shac**k

# Sports AM/FM Radio

n Extended Bass Boost n 10-Station Memory n Earphone Jack

### **Owner's Manual**

Cat. No. 12-749

**Important:** You need a pair of headphones (available at your local Radio Shack store) to listen to your radio.

### **Listening Safely**

Extended high-volume listening can lead to permanent hearing loss. To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and is illegal in some areas.

### **FCC Statement**

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- · Moving your radio from the receiver
- Contacting your local Radio Shack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

#### Caring for Your Radio

To enjoy your radio for a long time:

- · Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local Radio Shack store for assistance.

## **INSTALLING BATTERIES**

Use two AAA batteries (we recommend alkaline batteries, such as Cat. No. 23-555, not supplied).

**Note:** You must remove the belt clip before you remove the battery cover.

**Caution:** Match the batteries' polarity symbols (+ and –) with the polarity symbols marked inside the battery compartment.

# **USING THE RADIO**

**TUNING** — press to select your favorite station; press and hold to quickly scan the selected band.

1–5 and +5 — press to select a stored station

E-BASS ON/OFF — set to ON to enhance the bass sound

STEREO/MONO — switch to STEREO for stereo sound or to MONO for monaural sound on FM stations

© 1995 Tandy Corporation. All Rights Reserved. Radio Shack is a registered trademark used by Tandy Corporation.

**VOLUME** — adjusts the volume (see "Listening Safely")

 $\ensuremath{\mathsf{ON/OFF}}$  — turns the radio on and off

FM/AM — selects the band

 $\ensuremath{\text{MEM}}$  — use for storing stations

SPECIFICATIONS

| AM           | 530–1710 kHz  |
|--------------|---|
| FM           | 87.5–108 MHz  |
| Power Source | 2 AAA Batteries<br>(Cat. No. 23-555)                            |
| Dimensions   | 4 <sup>1</sup> /2 ξ 2 <sup>11</sup> /16 ξ 1 <sup>5</sup> /16 In |
| Weight       | 4.23 Oz.  |
| Accessory    | Belt Clip   |
|              |   |

**STORING STATIONS** 

2. Press MEM.

store the station.

1. Tune to the desired AM/FM station.

3. While MEMORY flashes, press 1-5 to

press +5 before pressing 1-5.

Note: To store five more stations,

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com