




12-888

Digital AM/FM/WX Radio

Thank you for purchasing your Digital AM/FM/WX (Weather) Radio from RadioShack. It provides excellent AM and FM radio reception and local weather information. You can store up to 20 radio stations and access them with the touch of a button.

STATION PRESETS — To hear a preset station, press the **STATION PRESET** button corresponding to a frequency saved in that location. Press the button twice to access stations 6-10.

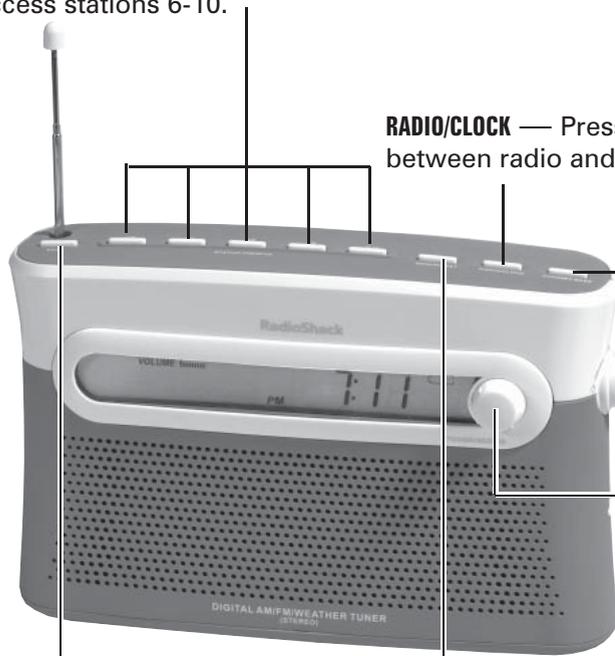

RADIO/CLOCK — Press to toggle between radio and clock mode.

DYNAMIC BASS — Press to activate the dynamic bass (DBS). *DBS* appears on the display when DBS is on.

VOLUME — Turn clockwise until it clicks to turn on the radio. Then, rotate to your desired listening level.

TUNER/SEEK — Rotate to adjust the hour and minutes in clock mode. Rotate to search for a radio station in radio mode.

BAND — Press to listen to AM, FM, or WX radio.

MEMORY SET — Hold down to enter clock setting mode. Then, press to confirm your hour and minutes settings. In radio mode, tune to the desired frequency, and then hold down **MEMORY SET** to save the frequency in a desired location (1-10).

setting your clock


The clock is the default display. *PM* appears for afternoon time.

1. Hold down **MEMORY SET** until you hear a beep. The hour digits flash.
2. Rotate **TUNER/SEEK** to adjust the hour, and press **MEMORY SET** to confirm. The minutes flash.
3. Rotate **TUNER/SEEK** to adjust the minutes, and then press **MEMORY SET** to confirm. A beep sounds to confirm the time is set.

powering your radio

You can power your radio with AC power or with batteries. The attached AC power cord's plug is polarized and fits into AC power outlets only one way. If the plug does not fit your outlet, turn the plug over and try reinserting it. If it still does not fit, contact a qualified electrician to change your outlet, or use a different AC outlet.

1. Remove the battery compartment cover.

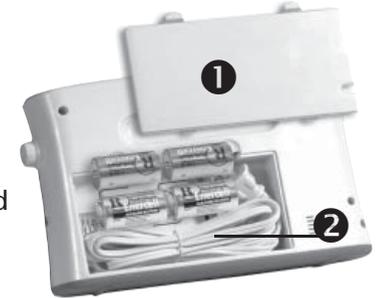

2. Extend the AC power cord and plug it into a standard 120V AC outlet. Or, insert four size C batteries according to the polarity markings in the compartment.
3. Replace the cover.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



RISK OF ELECTRIC SHOCK. DO NOT OPEN.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

what's included

radio

user's guide

Please read this user's guide before installing, setting up and using your new product
www.radioshack.com

Note: Actual product may vary from the images found in this document.

using headphones

You can use headphones (not supplied) to listen to your radio privately. Insert the headphone's plug into the jack on the side of your radio.

Listening Safely

Follow these guidelines when you use headphones.

- Set volume to its lowest level before listening. After you begin listening, adjust volume to a comfortable listening level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume, so a volume level that does not cause discomfort might still damage your hearing.

FCC information

Declaration of Conformity

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product: Digital AM/FM/WX Radio
Model: 12-888
Responsible Party: RadioShack
100 Throckmorton
Fort Worth, TX 76102
Phone: 817-415-3200

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your radio. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

using your radio

1. Turn on your radio. The display lights blue if you are using AC power. The display lights for a few seconds if using battery power.
2. Extend the antenna and adjust for best reception.
3. Press **BAND** to select AM or FM or WX band.
4. Rotate **VOLUME** to a comfortable listening level.
5. Rotate **TUNER/SEEK** to tune to a radio station. Or, hold down **TUNER/SEEK** until a beep sounds to automatically search for stations (AM/FM only). *STEREO* appears on the display when you tune to an FM station broadcasting in stereo.
6. Rotate **VOLUME** counterclockwise until it clicks to turn off the radio.

presetting stations

1. Turn on your radio.
2. Press **BAND** to select AM or FM band.
3. Tune to the desired station.
4. Hold down **MEMORY SET** until a beep sounds. A number (1-10) flashes on the display.
5. Press a **STATION PRESET** button to save the station in that location.
6. Press **MEMORY SET**. A beep sounds to confirm. If no button is pressed within 15 seconds of the beep, the station will not be stored.
6. To listen to preset stations, press the corresponding **STATION PRESET** button.

specifications

Frequency range:

AM 530 to 1710Khz
FM 87.5 to 108.1MHz
Weather (Wx) 162.4 to 162.55 MHz
Power supply: 120V AC 60Hz
DC6V (4 C size batteries)
Headphone: 3.5mm diameter
Speaker max. output:250mW per channel

limited go-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>