### 40-1440

# 25W RMS/50W Max. POWERHORN



# **Mounting**

- 1. Remove the nuts, washers, and screws from the base then remove the speaker.
- 2. Attach the powerhorn's base to the mounting location and fix with six suitable screws (Dia.4.0x25.0~30.0mm) and nuts (screws and nuts not supplied).
- 3. Place the speaker back onto the base and secure with nuts, washers and screws.
- 4. Adjust the powerhorn's speaker to the desired angle.

### Cautions:

- Be sure to tilt the powerhorn's speaker slightly downward to prevent water collecting inside.
- Mount the powerhorn away from heat sources.



Protect the environment by recycling used

www.radioshack.com

electronics. Go to www.ecyclingcentral.com to find a recycle location near you.

Thank you for purchasing your 25W RMS/50W Max. Powerhorn from RadioShack. Please read this user's guide before installing, setting up and using your new powerhorn.

## What's Included

Powerhorn User's Guide

# **Specifications**

Power Handling	25 Watts (RMS)
Maximum Power	50 Watts
Voice Coil Impedance	8 Ohms
Frequency Response	
Horn Diameter	4 × 6 Inches
	$(102 \times 153 \text{ mm})$
Overall Length	8 in (203 mm)
Weight	26.4 oz (750 g)
Specifications are subject to change and	
improvement without notice. Actual product may vary from the images found in this	
may vary from the images to	ound in this
document	

# **Limited Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from *RadioShack* company-owned stores and authorized *RadioShack* franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT. SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you

In the event of a product defect during the warranty period, take the product and the *RadioShack* sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor: (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a *RadioShack* Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

12/99

RadioShack Customer Relations 300 RadioShack Circle

Fort Worth, TX 76102

07A08

40-1440

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com