

® RadioShack

Portable Folding Amplified Speaker System 40-1441

Thank you for purchasing the RadioShack Portable Folding Amplified Speaker System. It is ideal for use with your notebook computer or personal stereo. The dual 2 1/4-inch (57 mm) full-range speakers are for use near a notebook computer. The built-in cable allows easy connection and cable storage. And, for your convenience, the speakers fold to fit into the supplied carrying pouch.



Operation

1. Slide power to **OFF** and turn the volume down.
2. Place the opened speakers on a level surface.
3. Insert the stereo plug into the audio output jack of your notebook computer or personal stereo.
4. Slide power to **ON**.
5. Adjust the volume as desired.
6. To disassemble the speaker system, slide power to **OFF**. Then, disconnect the stereo plug from the audio output jack and route the speaker cable along the recess of the left speaker cabinet.
7. Place the stereo plug into the plug holder, and then close the speaker cabinets.

Powering the Speakers

Battery Power

1. Slide the power switch to **OFF**.
2. Remove the battery compartment cover.
3. Install three AA batteries, matching the polarity (+ and -) symbols marked inside the battery compartment.
4. Replace the battery compartment cover.
5. Slide the power switch to **ON**.

AC Power

You also can power the system using a 6V, 300mA AC adapter and a size M Adaptaplug (neither supplied). Both are available at your local RadioShack store.

To connect to an AC adapter:

1. Attach a size M Adaptaplug to the adapter, with its tip set to positive.
2. Slide the power switch to **OFF**. Then, connect the AC adapter's barrel plug to the portable system's DC 6V jack.
3. Plug the other end of the AC adapter into a standard AC outlet.


Vehicle Battery Power

1. Connect the DC adapter (not supplied) cord's barrel plug to the speaker system's DC 6V jack.
2. Unplug the cigarette lighter and plug the large end of the DC adapter into the cigarette lighter socket.

CAUTIONS:

- You must use a Class 2 power source that supplies 6V DC and delivers at least 300 mA. Its center tip must be set to positive and its plug must fit the system's DC 6V jack. Using an adapter that does not meet these specifications can damage the system or adapter.
- Do not leave the adapter plugged into the cigarette lighter socket or connected to the speaker system when you are not using it.



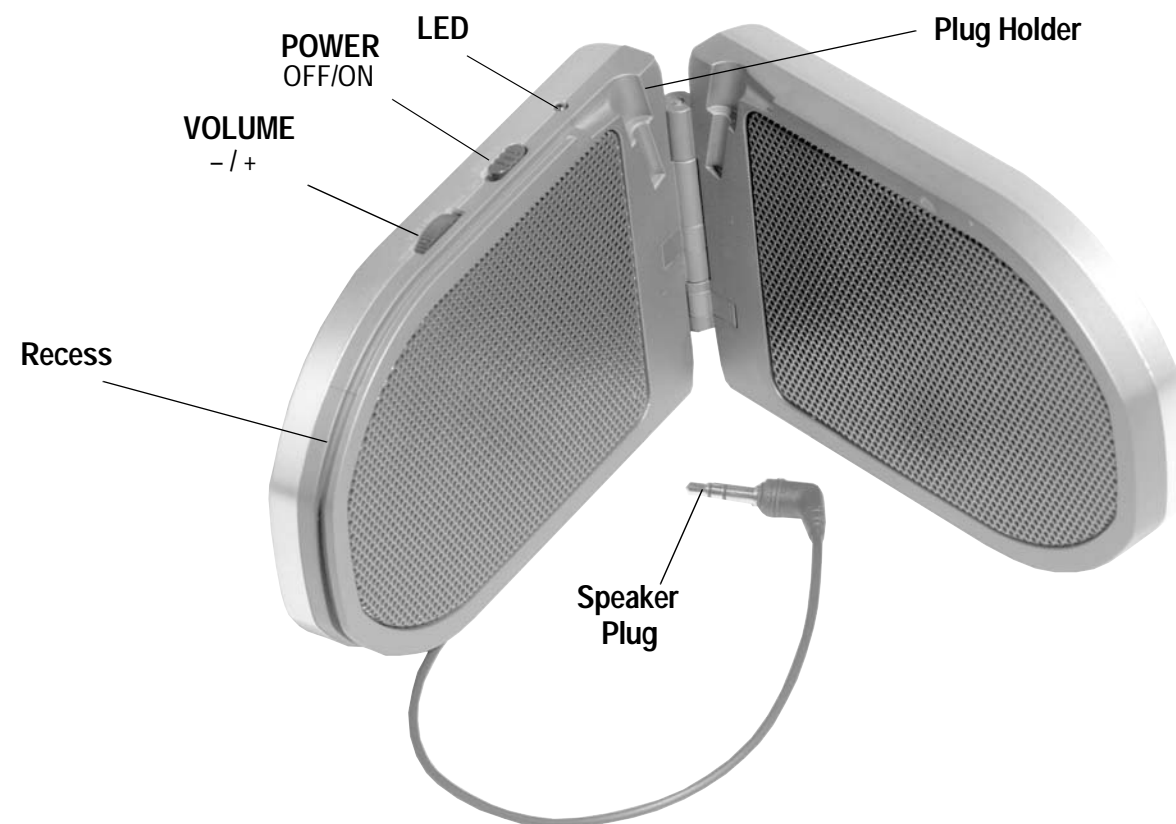

Battery Notes

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the system for more than two weeks, remove the batteries.
- Batteries can leak chemicals that may destroy electronic parts.

Specifications

Speaker	2 1/4-Inch (57 mm) Full Range Amplifier Speaker
Output Power.....	0.5W/Per Channel Maximum Power
Frequency Response	200-12,000 Hz
Speaker Plug.....	1/8-Inch (3.5 mm) Stereo Plug
Power Source.....	3 AA Batteries AC Adapter (Input 120V AC/Output 6V DC 300mA) DC Adapter (DC 6V 300mA)
Battery Life	About 22 Hours
Speaker Impedance	8 Ohms
Dimensions (WHD).....	5 5/32 x 3 3/16 x 2 1/4 Inches (131x81x57 mm)
Weight (without batteries).....	7.76 oz. (220g)

Specifications are typical; individual units may vary. Specifications are subject to change and improvement without notice.

Care

- Keep your speaker system dry; if it gets wet, wipe it dry immediately.
- Use and store your speaker system in room temperature environments only.
- Handle your speaker system carefully; do not drop it.
- Keep your speaker system away from dust and dirt.
- Wipe your speaker system with a dry cloth occasionally to keep it looking new.
- **Do not** use a vacuum cleaner to clean your speaker system. It might cause permanent damage.

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102 12/99

©2003 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

40-1441
Printed in China
10A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>