





 Use a Phillips screwdriver to loosen the two screws on the back of the wall plate. Connect the antenna cable/wires from inside the wall to the rear connectors on the plate, then retighten the screws.

**Warning:** Be sure the exposed portions of the cables/wires do not touch each other.

- 6. Use the two supplied short screws to secure the plate to the center holes of the brackets.
- 7. Use a flat-bladed screwdriver to loosen the screws at the back of the supplied three-prong cable plug. Connect the 300-ohm antenna wire from the audio and video outputs of the TV (or the left and right channels of the FM radio) to the plug, then retighten the screws.
- 8. Insert the plug into the wall plate's jack.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com