

**R** RadioShack®

Cat. No. 63-1029

## Indoor Analog Thermometer/Hygrometer/Clock Tower

Your RadioShack Indoor Analog Thermometer/Hygrometer/Clock Tower combines a clock, a Fahrenheit thermometer, and a hygrometer in a classic-looking compact acrylic cabinet. The Tower measures both the temperature and relative humidity in the room. It's great for helping you maintain an ideal environment in your home or office.


**Note:** This product is intended for indoor use only. It is not a precision instrument and actual measurements might vary.

### INSTALLING THE BATTERY

The clock requires one N size battery (not supplied) for power. We recommend a RadioShack battery.

**Caution:** Use only a fresh battery of the required size and recommended type.

Install the battery as indicated by the polarity symbols (+ and -) inside the battery compartment on the back of the clock.

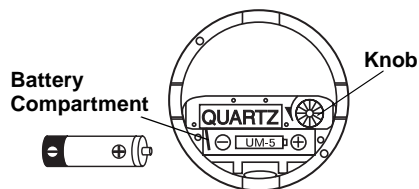

When the clock no longer accurately keeps time, replace the battery.

**Warning:** Dispose of the old battery promptly and properly. Do not burn or bury it.

**Note:** If you do not plan to use your clock for a month or more, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

### SELECTING A LOCATION

**Important:** The Tower is for indoor use only. Keep it away from direct sunlight, heat sources (such as kitchen ovens, fireplaces, or water heaters), or locations where the temperature reaches 120°F (48.89°C) or higher.

Place the Tower on a flat surface, vertically or horizontally. You can turn each dial by the recesses in its back so it is right side up in the position you selected.

### SETTING THE TIME

Turn the knob on the back of the clock counterclockwise or clockwise to set the current time. The thermometer and hygrometer are accurately calibrated at the factory. You do not need to adjust them.

© 1999 Tandy Corporation.  
All Rights Reserved.  
RadioShack is a registered trademark used by Tandy Corporation.

## CARE

To enjoy your RadioShack Indoor Analog Thermometer/Hygrometer/Clock Tower for a long time:

- Keep the Tower dry. If it gets wet, wipe it dry immediately.
- Handle the Tower gently and carefully. Don't drop it.
- Keep the Tower away from dust and dirt.
- Wipe the Tower with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Tower's internal components can cause a malfunction and invalidate its warranty. If your Tower is not performing as it should, take it to your local RadioShack store for assistance.

## SPECIFICATIONS

Clock Power Sources ..... One N Size Battery (Not Included)

Accuracy ..... ±0.67 Sec./Day

Battery Life ..... Approximately 8 Months

Temperature:

Range ..... 50° to 104°F (10° to 40°C)

Accuracy ..... ±4°F (2°C)

Resolution ..... 2°F (1°C)

Hygrometer:

Range ..... 30% to 60%

Accuracy within 68°–77°F (20°–25°C) :

Within the range 40%–65% ..... ±7%

Outside the range

40%–65% ..... ±12% or higher

Dimensions ..... 2<sup>7</sup>/<sub>8</sub> × 9<sup>1</sup>/<sub>16</sub> × 2<sup>7</sup>/<sub>8</sub> Inches  
(73 × 230 × 73 mm)

Weight ..... 6.88 oz (195 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

04/99

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>