



HINT

Before Using Your Thermometer

Remove the protection film from the display.

The thermometer also comes with a battery insulation sheet for saving the batteries during shipment. Pull this plastic strip out of the battery compartment.



WARNING

- Keep the batteries out of reach of children. Swallowing button-cell can be fatal.
- Dispose of the old battery promptly and properly. Do not burn or bury it.



CAUTION

- Use only a fresh battery of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline).



NOTE

LL may appear in the display when the relative humidity falls below 20%, regardless of the temperature range.

Memory Mode


The thermometer / hygrometer only retains temperature and humidity readings when the memory is active. Turning off the memory mode or removing the batteries clears all readings.

Installing the Batteries

If the thermometer does not operate after you install the batteries, simply remove and re-install the batteries.

MAX/MIN — Press to recall the highest and lowest temperatures and humidity readings.

Dual Display — Lets you read both the current temperature and humidity at the same time.

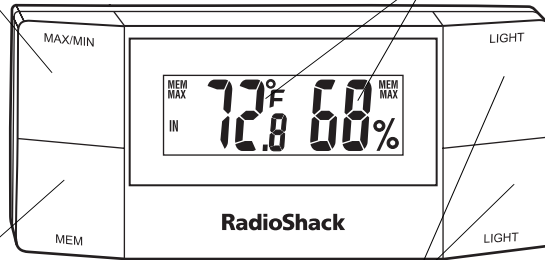

MEM — Press to turn memory on or off. Memory initializes maximum and minimum readings.

LIGHT — Press and hold down to engage the display's backlight. Release to extinguish the backlight.

Your RadioShack Digital Indoor Thermometer with Indoor Hygrometer is a useful addition to your home or office. It tells you the current indoor temperature as well as the highest and lowest temperature and humidity readings. The memory mode lets you recall and view temperature and humidity readings at any time. Its small size and fold-out stand let you place it almost anywhere for easy viewing.

MEMORY MODE

Press **MEM** to activate the memory mode. **MEM** appears in the display.

To view the highest temperature and humidity reading, press **MAX/MIN** until **MAX** appears in the display.

To view the lowest temperature and humidity reading, press **MAX/MIN** until **MIN** appears in the display.

To deactivate the memory mode, press **MEM** again. **MEM** disappears.


REPLACING THE BATTERIES

Your thermometer requires two LR 44 button cells batteries (supplied). Replace the batteries if the display or backlight dims or disappears. You may also need to replace the batteries if the thermometer stops working properly.

For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide open the battery cover in the direction of the arrow at back of the unit.

Battery Compartment

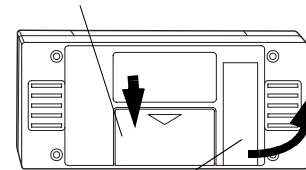

Fold-Out Stand – Lift up.

2. Install two LR 44 button cells batteries in the compartment with the positive (+) symbols facing upward.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- ! — Warning ⚡ — Caution ! — Important 💡 — Hint 📝 — Note

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

3. Replace the cover.

PLACING THE THERMOMETER

You can place your thermometer on a flat surface, or mount it on a wall.

To set your thermometer on a flat surface, pull the fold-out stand up and away from the back of the thermometer.

To mount your thermometer on a wall, peel off one side of the backing from the two-sided tape (supplied), and press it onto the back of your thermometer. Then peel off the other side of the backing, and press the thermometer onto a wall at the desired location.

CARE

Keep the thermometer dry; if it gets wet, wipe it dry immediately. Use and store the thermometer only in normal temperature environments. Handle the thermometer carefully; do not drop it. Keep the thermometer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your thermometer is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the thermometer's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATION

Power Source (button cells) 2 × LR 44

Temperature

Range.....32° F – 122° F
(+/-1.8F)

Resolution 0.1F

Sensing cycle 10 seconds

Humidity

Measuring Range..... 20% – 99% RH
(+/- 5%)

Resolution 1% RH

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>