

Infrared Ear Thermometer

63-1517

Step One

Installing Batteries

You will need...

Two AAA batteries

- Remove the battery compartment cover.
- Insert two batteries in the battery compartment, as indicated by the polarity symbols (+ and -) marked inside.
- Replace the battery cover and snap into place.



Step Two

Using the Infrared Ear Thermometer

- Press the button to turn on the thermometer. All display segments appear briefly, followed by beeps. ℘ appears and the LCD display lights for a moment.

- Insert the thermometer's probe into the ear canal as follows.

- **For children one year or older, and adults:** pull the ear slightly backward to straighten the ear canal. Then, insert the probe in the ear as far as it goes. Be sure the probe fully seals the ear canal. Hold this position until the measurement is completed.

- **For an infant less than one year old:** pull the ear straight back and insert the probe directly against the ear canal.

- Press the button until the ear thermometer sounds a long beep.

- Remove the thermometer from the ear canal and read measurement.



If you want to take another measurement, wait until the ℘ appears on the LCD display. If no additional measurements are taken within one minute, the thermometer turns off automatically. Protect the thermometer with the probe cap after each use.

Your Temperature

Err appears when you use the thermometer in atmospheres out of its operating temperature range of 59 - 104°F (15 - 40°C).

H displays if your temperature is higher than 109.2°F (42.9°C).

L displays when your temperature is lower than 89.6°F (32°C).

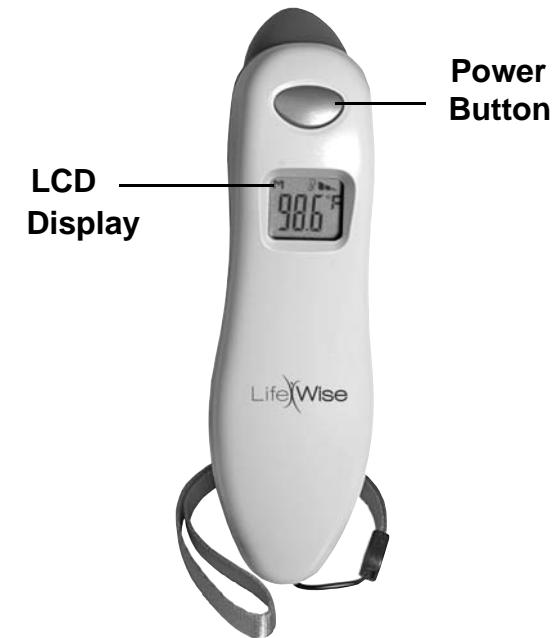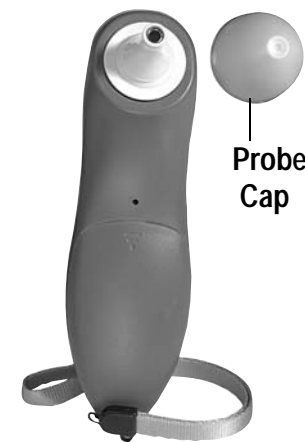

Step Three

Selecting the Degree Format

- Remove the battery compartment cover.
- Remove one battery from the battery compartment.
- Use tweezers to remove the black tab above the battery compartment to change from Fahrenheit to Celsius. Replace the tab to change from Celsius to Fahrenheit.
- Replace the battery and the battery compartment cover.
- Press the button to display the new format.


Do not throw the black tab away. Save for future use.

What's Included

Thermometer Carry Pouch
Strap Probe Cap

Troubleshooting

We do not expect you to have any problems with your thermometer; but, if you do, the following suggestions might help.

Problem	Suggestion
The display is blank after pressing the Power button.	Be sure the batteries are inserted properly.
You cannot get the measurement or an abnormal temperature appears in the display.	Be sure the tip of the probe is clean and has no damage. Clean any excessive wax that may be clogged in your ear. Then insert the probe again. See Step 2.
The ear thermometer does not work after pressing the button.	Be sure to start the thermometer after the  appears.


Care & Use

- Keep the thermometer dry. Never immerse it in water.
- Keep the thermometer away from direct sunlight, dust and dirt.
- Handle the thermometer carefully. Do not drop it.
- Use and store the thermometer in normal temperature environments.
- Wipe the thermometer occasionally with a damp cloth to keep it looking new.
- To prevent damage to the probe's lens, do not clean it with a paper towel or paper. Use a cotton swab, dipped in rubbing alcohol, to wipe it clean. Let it dry before use.
- Do not touch the probe with your finger. Protect the probe with the probe cap after each use.
- Do not disassemble the thermometer. If it does not work properly, take it to your local RadioShack store for assistance.

Hints & Tips

- To obtain a precise temperature measurement, first clean your ear of all excessive earwax.
- Your temperature may differ for each ear. To get an accurate reading, always take your temperature in the same ear.
- Take your temperature when you relax, and never take your temperature after exercise or a bath. Rest at least 20 minutes afterward.
- Do not use the thermometer if you suffer from ear diseases, or your ear canal is wet.
- Keep portable phones away from the thermometer to prevent malfunction.
- If you have hair in your ear, the measured temperature may be lower than your actual temperature.
- If the following conditions occur, we recommend you take your temperature at least three times and use the highest reading.
 - Infants under three months old.
 - Children under three years old who have a compromised immune system.
 - This is your first time using the thermometer. Practice until you get accurate and consistent readings.

Battery Notes

- Use only fresh batteries of the required size and recommended type. RadioShack alkaline batteries can be purchased at your local RadioShack store.
- Do not mix old and new batteries, different types of batteries (alkaline, standard, or rechargeable), or rechargeable batteries of different capacities.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use your thermometer for a month or more, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.
- When the display dims or battery weakens, the  appears on the display. Replace the batteries.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or re-installation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

63-1517
Printed in Taiwan
05A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>