 



Thank you for purchasing a pair of RadioShack 22-Channel GMRS/FRS Two-Way Radios. Your lightweight, palm-sized radios have 22 channels and 38 different quiet codes, and have auto-squelch so you will not hear anything on a channel unless someone is transmitting nearby on that channel. Your radios transmit and receive on General Mobile Radio Service (GMRS) and Family Radio Service (FRS) frequencies. See your Owner's Manual for licensing information.

**PACKAGE CONTENTS**

 Radios (2)

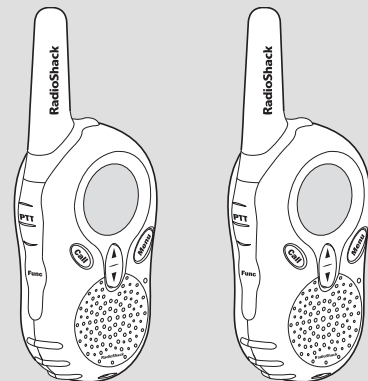


Dual Charger

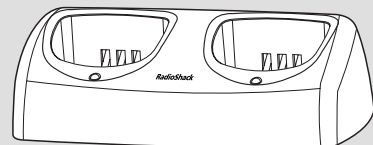

Rechargeable NiMH Batteries (8)



 9V 500 mA AC Adapter

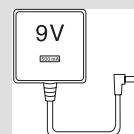

Owner's Manual (1)

Quick Start (1)


Belt Clip

**! IMPORTANT !**

 Do not open your radio to make any internal adjustments. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments made to your radio must be made by a qualified technician using the proper test equipment. Never open your radio's case. Never change or replace anything in your radio except the batteries.

**INSTALLING BATTERIES**

You can power each radio with four AAA Ni-MH batteries (supplied), or four AAA Ni-Cd batteries (not supplied), or four AAA alkaline batteries (not supplied). Batteries are available at your local RadioShack store or online at [www.radioshack.com](http://www.radioshack.com). You can recharge Ni-MH batteries while they are in the radio using the supplied dual charger. It takes about 10 hours for Ni-MH batteries to charge.

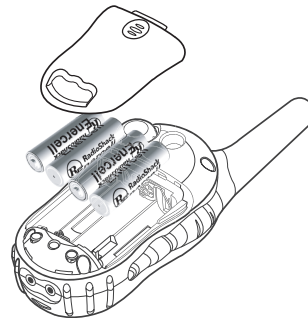

1. Pull down the latch on the battery compartment cover. Then remove the cover.
2. Set **CHARGE ON/OFF** to **ON** if you use rechargeable batteries or to **OFF**, if you use non-rechargeable batteries. Install the batteries according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and push the latch up until it clicks.

appears on the display to indicate the amount of battery power remaining. When flashes, replace alkaline batteries or recharge Ni-Cd or Ni-MH batteries.

**OPERATION**

**VOLUME/OFF**

Rotate **VOLUME/OFF** counterclockwise to turn the radio on or off and adjust the volume. Rotate **VOLUME/OFF** clockwise to turn the radio off.

**PTT**

1. Hold down **PTT** to talk.
2. Release **PTT** to receive.

If you hold down **PTT** for about two-minutes, the radio automatically stops transmitting to save power.



Press (Up) or (Down) to select a channel, quiet code, or use scan.

**Selecting Quiet Codes**

There are 38 codes to choose from. See your Owner's Manual for a listing of the Quiet Codes.

To select the desired quiet code, hold down **FUNC**. **FUNC** appears on the display. Repeatedly press or hold or until you see the code number you want to use.

 
To turn off the quiet code feature, hold down **FUNC** and repeatedly press or hold or at the same time until the quiet code number disappears.

**Using VOX**

Vox operation allows you to transmit a voice message without pressing any key. To activate Vox, continuously press **MENU** until **VOX** appears. Press or to select the desired sensitivity level (1-4), select **OFF** to turn Vox off. Press **PTT** to store the setting. When you do not press any key after about 20 seconds, while in the Menu, the radio exits the Menu without saving your settings.

**Using a Headset**

You can make or answer calls with handsfree convenience using an optional headset with a 3/32-inch plug (not supplied, available at your local RadioShack store). To connect a headset, insert the headset's plug into the **EAR/MIC** jack on the bottom of the radio.

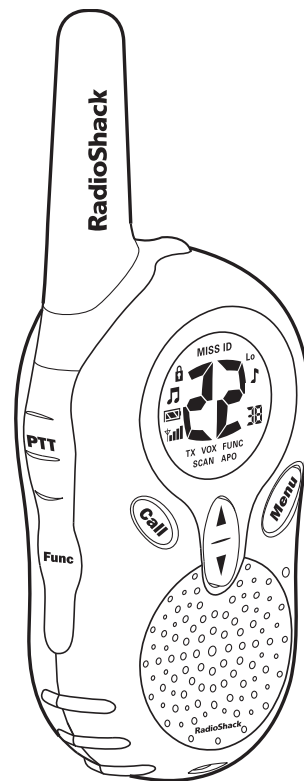

**Using Scan**

Hold down or to scan up or down to find the desired channel and quiet code. The radio automatically scans through the channels and pauses on each active channel. While scanning, press or to change the scanning direction. Press **PTT** to stop scanning.

**Using Keylock**

To lock or unlock the keypad, hold down **FUNC** and press **PTT** to lock or unlock the keys. appears when the keys are locked. When the keypad is locked, you can still transmit (press **PTT**), send a call (press **CALL**) or temporarily enable/disable Vox (press **PTT** when Vox level is 1-4).

**USING KEY TONE**

You can set the radio so it sounds a tone when you press any key except **PTT** or **FUNC**.

To turn on the key tone feature, hold down **MENU** for about 2 seconds. appears and **ON/OFF** flashes. **ON** appears when the key tone is on and **OFF** appears when it is off. Press (Up) or (Down) to turn the key tone on or off.

Press **PTT** to store the displayed setting.

**USING COURTESY TONE**

You can set the radio so the person you are communicating with will hear a tone when you finish transmitting.

To turn on the courtesy tone feature, hold down **MENU** for about 2 seconds. Then release **MENU**. Then repeatedly press **MENU** until appears and **ON/OFF** flashes. **ON** appears when the courtesy tone is on and **OFF** appears when it is off. Press (Up) or (Down) to turn the key tone on or off.

Press **PTT** to store the displayed setting.

 
**RESETTING THE RADIO**

If the radio's display locks up or the radio does not work properly after you turn it on, turn it off and then on again. If this does not correct the problem, remove the batteries, wait about ten minutes, then reinstall them.

**Using a Wrist Strap**

You can attach an optional wrist strap or pager chain (not supplied, available at your local RadioShack store) to the hole on the back of the radio.


**OPTIONAL ACCESSORIES**




Cigarette-Lighter Adapter



 Alkaline Batteries

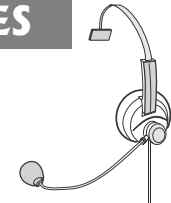

Headset with Mic

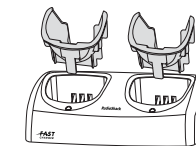 

Dual-Bay FAST Charger

**Battery Notes**

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the radio for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

**USING AC POWER/VEHICLE BATTERY POWER**

You can charge the radio's batteries using a standard 6V AC-DC adapter, or charge the radio's batteries and power the radio using a 6V DC-DC adapter (neither supplied) using the **DC 6V** jack on the bottom of the radio. Both are available at your local RadioShack store.

1. Turn off each radio by rotating **VOL/OFF** clockwise until it clicks.
2. Pull down the latch on the battery compartment cover. Then remove the cover.
3. Set **CHARGE ON/OFF** to **ON**.
4. Install the batteries according to the polarity symbols (+ and -) marked inside.
5. Replace the cover and push the latch up until it clicks. Turn on each radio by rotating **VOL/OFF** clockwise until it clicks.

**! WARNING !**

If you use non-rechargeable batteries, be sure to set **CHARGE ON/OFF** to **OFF**. Non-rechargeable batteries can get hot and explode if you try to recharge them.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>