
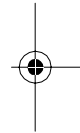




Cat. No. 19-1206
OWNER'S MANUAL

Please read before using this equipment.

BTX-127

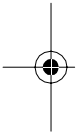

RadioShack®

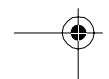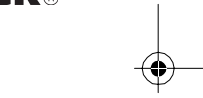

Features

Your RadioShack BTX-127 CTCSS • VHF/FM Business Band Transceiver is a portable, two-way business radio service transceiver that you can carry almost anywhere. The transceiver is compact and light, making it an ideal choice for your business needs.

Your transceiver has these features:

Programmable Frequencies — an authorized service facility can program the transceiver to any VHF business band frequency you have a license to use — no crystals to buy!

Note: Your local RadioShack store must send the transceiver to an authorized service facility to program the transceiver with a frequency. You must show your license to store personnel.

38-Tone CTCSS (Continuous Tone Control Squelch System) — helps reduce interference from other transceivers which are operating on the same frequency, in the same area.

Rechargeable Long-Life Battery Pack and Battery Charger — the supplied battery charger lets you conveniently recharge your transceiver's long-life battery pack while it is on the transceiver.

PLL-Controlled Circuitry — provides accurate and stable channel selection.

High/Low Power Switch — lets you increase the transmitted signal strength to increase the transceiver's range, or decrease it to save battery power.

Earphone/Speaker Jack and External Microphone Jack — let you connect an external earphone or speaker and an external microphone to help ensure understandable communications in noisy areas.

Built-In Modulation Limiter Circuit — automatically adjusts for a wide variety of voice levels to ensure an understandable transmission.

Battery Low Indicator — shows the battery pack's condition.

© 1998 Tandy Corporation.
All Rights Reserved.

Flexible Antenna — provides excellent reception.

Belt Clip — lets you attach the transceiver to your belt or waistband.

The transceiver's preset frequencies are:




- 151.625 MHz (red dot)
- 151.700 MHz
- 151.760 MHz
- 151.820 MHz
- 151.880 MHz
- 151.940 MHz
- 151.955 MHz (purple dot)
- 154.570 MHz (blue dot)
- 154.600 MHz (green dot)

Note: Some manufacturers identify some business band frequencies by color. These "dot" frequencies are shown above.

We recommend you record your transceiver's serial number here. The number is on the back of the transceiver.

Serial Number _____

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

		
RISK OF ELECTRIC SHOCK. DO NOT OPEN.		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

CONTENTS

FCC Regulations	5
FCC License Required	5
FCC Part 90 Rules	5
Additional FCC Regulations	7
Preparation	8
Installing the Battery Pack	8
Charging the Battery Pack	9
Connecting the Antenna	10
Connecting an Optional Antenna	11
Using the Belt Clip	11
Connecting an Earphone/External Speaker	11
Listening Safely	12
Traffic Safety	12
Using an External Speaker/Microphone	12
Setting Frequency Options	13
About CTCSS	13
Using a CTCSS Frequency	14
Operation	16
Operational Hints	17
Care and Maintenance	18
Specifications	19

-
- As licensee, you are responsible for proper operation of all transceivers operating under your license authority.
 - You can let unlicensed persons operate this transmitter, as long as you take precautions to prevent unauthorized transmissions.
 - You must use this transceiver only for the commercial use of your business, and only when other commercial channels (such as the telephone) are either not available or not practical.
 - You must always yield the operating frequency to communications that involve the safety of life or property.
 - You must take reasonable precautions to prevent harmful interference to other services operating on the same frequency.
 - You must not transmit program material of any kind used in connection with commercial broadcasting.
 - You must not provide a service that is normally handled by telephone or telegraph unless such broadcasts involve the safety of life or property or in emergencies such as an earthquake, hurricane, flood or a similar disaster where normal communication channels are disrupted.
 - During each transmission or exchange of transmissions, you must identify your station with the call sign issued to you by the FCC, or once each 15 minutes during periods of continuous operation.
 - You must keep a written record of any maintenance or modification made to the transceiver, and you must make this record available for inspection upon demand by the FCC.
- Violating any of the provisions of Part 90 can result in fines and/or confiscation of equipment.

Your transceiver might cause TV or radio interference even when it is operating properly. To determine whether your transceiver is causing the interference, turn off your transceiver. If the interference goes away, your transceiver is causing it. Try to eliminate the interference by:

- moving your transceiver away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your transceiver.

Additional FCC Regulations

The Business Radio Service is under the jurisdiction of the Federal Communications Commission (FCC). Any adjustments or alterations that would alter the performance of the transceiver so it no longer meets the original FCC type acceptance or would change the frequency-determining method are strictly prohibited.

Replacement or substitution of crystals, transistors, ICS, regulator diodes, or any other component that is of a unique nature with components other than those recommended can violate the technical regulations of the FCC rules or violate type acceptance requirement of the rules.

Before you operate the transceiver, you must obtain your license. It is illegal to transmit without the appropriate license, which you can get by submitting a completed FCC Form 600 to the FCC (or through the PCIA). Furthermore, you are required to understand Part 90 of the FCC Rules and Regulations prior to operating your transceiver. It is the user's responsibility to see that this unit is operating at all times in accordance with the FCC Rules and Regulations.

Preparation

Installing the Battery Pack

The supplied battery pack, when fully charged, provides power to your transceiver for up to 8 hours. You must install the battery pack in your transceiver, then charge it.

Caution: Do not remove the plastic wrap from the battery pack. Doing so can permanently damage the battery.

Follow these steps to install the battery pack.

1. Unlock the battery compartment cover by sliding both of the cover's latches toward the front of the transceiver as shown. Then slide the cover in the direction of the arrow and lift it off.

illus - show bat comp cover latches being released and cover being slid down

2. With the battery printing facing up, align the contacts on the battery pack with the contacts inside the battery compartment. Then, press

the battery pack into the compartment while applying slight pressure to the bottom of the battery pack.

illus - show battery pack being installed into compartment

3. Slide the battery cover back into place, then slide both of the latches toward the back of the transceiver to lock it.

To remove the battery pack, unlock the compartment, then turn the transceiver face down and gently tap it into your palm so the battery pack slides out.

Charging the Battery Pack

Before you use the battery pack for the first time, you must use the supplied battery charger to charge it for about 12 to 14 hours to bring it to a full charge.

You cannot use the transceiver while you charge the battery pack.

Caution: The supplied battery charger was designed specifically for your transceiver. Use only the supplied battery charger.

Follow these steps to charge the battery pack.

1. Turn **VOLUME** fully counterclockwise to **OFF** to make sure power is turned off.

illus -
show
VOLUME

other end of the charger into a standard AC outlet.

illus - show barrel plug/
charger. Show plug being
plugged into **CHRG** and
AC plug about to be
plugged into
an AC outlet

If the **RX/TX** indicator lights yellow when the transceiver's power is on and you press **PUSH TO TALK**, recharge the battery pack.

illus - show
PTT and
RX/TX lit on
front of
transceiver

2. Pull out the rubber cover over the **CHRG** jack on the side of the transceiver, and insert the charger's barrel plug into the jack. Then plug the

Notes:

- A nickel-cadmium battery pack lasts longer and delivers more power if you occasionally let it fully discharge. To do this, use the transceiver until the RX/TX indicator lights yellow when you press PUSH TO TALK.
- To prevent damaging a nickel-cadmium battery pack, never charge it in an area where the temperature is above 113°F (45°C) or below 32°F (0°C).

Important: At the end of a rechargeable battery pack's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area. Some options that might be available are: municipal curbside collection, drop-off boxes at retailers such as your local RadioShack store, recycling collection centers, and mail-back programs.

Connecting THE Antenna

Follow these steps to attach the supplied flexible antenna to your transceiver.

illus - show antenna being connected to transmitter

1. Align the slots around the antenna's connector with the tabs on the antenna jack on top of the transceiver.
2. While squeezing the base of the antenna, press the antenna down over the jack and turn the antenna's base clockwise until it locks into place.

Connecting an Optional Antenna

Although the supplied flexible antenna provides excellent local reception, you can connect an optional external mobile antenna or outdoor base station antenna to your transceiver for better reception of weak signals. The antenna jack on the top of the transceiver makes it easy to use the transceiver with a variety of antennas. Your local RadioShack store sells a variety of antennas.

Caution: Never connect an antenna that is not specifically tuned for the transceiver's frequency range.

Using the Belt Clip

The supplied belt clip lets you easily clip the transceiver to your belt.

Use a Phillips screwdriver to secure the clip to the transceiver's back with the supplied screws.

illus - show belt clip being attached to transceiver with screws

Connecting an Earphone/External Speaker

To listen privately or to hear better in a large area such as a warehouse, you can plug a monaural earphone or an external speaker with a 1/8-inch (3.5 mm) plug (not supplied) into the EAR jack on the top of the transceiver. This automatically disconnects the built-in speaker.

illus - show earphone/speaker being connected to EAR

Listening Safely

To protect your hearing, follow these guidelines when you use an earphone.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Traffic Safety

Do not use an earphone with your transceiver when operating a motor vehicle or riding a bicycle in or near traffic. Doing so can create a traffic hazard and could be illegal in some areas.

If you use an earphone with your transceiver while riding a bicycle, be very careful. Do not listen to a continuous broadcast. Even though some earphones let you hear some outside sounds when listening at normal volume levels, they still can present a traffic hazard.

Using an External Speaker/ Microphone

An external speaker/microphone can make it easier to use the transceiver when you clip it to your belt, so you do not have to lift the transceiver to your mouth each time you transmit. Plug the speaker/microphone's plug into the EAR jack and the MIC jack on top of the transceiver. This automatically disconnects the transceiver's built-in speaker and microphone.

illus - show ext. speaker/
mike being connected to
top of transceiver

Setting Frequency Options

Before you can use your transceiver, an authorized service facility must set your transceiver to a VHF business band frequency you have a license to use. Then, you can select a preset CTCSS (Continuous Tone Control Squelch System) frequency and set your transceiver to use it.

Here is what you need to do to set your transceiver to use a business band frequency and CTCSS.

1 Send your transceiver to an authorized service facility to have it set to a business band frequency.

2 Set the DIP switches for a CTCSS frequency (see "Using a CTCSS Frequency" on Page 14).

3 Set your transceiver to that CTCSS frequency.

4 Set a DIP switch to activate or deactivate CTCSS.

You can select one CTCSS frequency at a time. If you do not want to use a CTCSS frequency, skip Steps 2–4 above.

About CTCSS

CTCSS helps eliminate interference between different users of the same frequency, letting you talk and listen to people who are using other transceivers set to the same frequency and CTCSS code. This is like having a sub-channel within a channel, giving you greater communication flexibility. When you set a CTCSS code — there are 38 to choose from — and turn on your transceiver's CTCSS, the transceiver transmits a tone with your transmission, letting you communicate with anyone who has a transceiver set to the same frequency and code. This tone is too low for you to hear, but other transceivers can detect it.

If CTCSS is turned on and set to the same tone on the receiving transceiver, it only receives those transmissions that include the tone. If two different groups operate transceivers in the same area on the same frequency, they do not hear each other's broadcasts if they both use CTCSS and each select a different CTCSS tone. Your transceiver's default CTCSS tone is 100 Hz.

Using a CTCSS Frequency

Follow these steps to set your transceiver to a CTCSS frequency and then activate or deactivate CTCSS.

1. Turn VOLUME fully counterclockwise to make sure power is turned off.
2. Remove the battery compartment cover (see "Installing the Battery Pack" on Page 8). You do not have to remove the battery pack.
3. Choose a CTCSS code from the table on the right. Then use a pointed object such as a straightened paper clip to set the position of each DIP switch inside the battery compartment to 1 (up) or 0 (down) corresponding to the setting for that CTCSS code.

illus - show DIP switch inside battery compartment set to any setting

Dip Switch Setting Key:
 0 = down
 1 = up

CTCSS		DIP Switch Setting
Code	Freq (Hz)	
14		

CTCSS		DIP Switch Setting
Code	Freq (Hz)	
none		000000
1	67.0	000001
2	71.9	000010
3	74.4	000011
4	77.0	000100
5	79.7	000101
6	82.5	000110
7	85.4	000111
8	88.5	001000
9	91.5	001001
10	94.8	001010
11	97.4	001011
12	100.0	001100
13	103.5	001101
14	107.2	001110
15	110.9	001111
16	114.8	010000
17	118.8	010001
18	123.0	010010
19	127.3	010011
20	131.8	010100
21	136.5	010101
22	141.3	010110
23	146.2	010111
24	151.4	011000
Code	Freq (Hz)	DIP Switch Setting
25	156.7	011001

CTCSS		
26	162.2	011010
27	167.9	011011
28	173.8	011100
29	179.9	011101
30	186.2	011110
31	192.8	011111
32	203.5	100000
33	210.7	100001
34	218.1	100010
35	225.7	100011
36	233.6	100100
37	241.8	100101
38	250.3	100110

(up). To deactivate the code, set the switch to 0 (down).

6. Replace the battery compartment cover.

4. Hold down PUSH TO TALK, then turn VOLUME clockwise until it clicks. The transceiver sets the CTCSS code. Release PUSH TO TALK.

If the transceiver beeps once and RX/TX lights green for about 2 seconds, that means the CTCSS setting was successful.

If the transceiver beeps 3 times and RX/TX lights red for about 2 seconds, the CTCSS setting did not work. Start over at Step 1.

5. To activate the CTCSS code you set, set the first DIP switch to 1

Operation

Note: You can only communicate with another transceiver that is using the same channel and/or the same CTCSS code as your transceiver.

1. Turn VOLUME clockwise to turn on the transceiver, turn SQUELCH fully counterclockwise until you hear a hissing sound, then adjust the volume to a comfortable listening level.

illus - show VOLUME being adjusted

2. If you did not set the transceiver to use a CTCSS code, wait until there is no signal on the channel. Then turn SQUELCH clockwise until the background noise between signals stops.

illus - show SQUELCH being adjusted

3. To conserve battery power, slide HI/LO to LO. If the person you transmit to has trouble receiving your signal, slide HI/LO to HI.

illus - show HI/LO switch

4. To transmit, hold down PUSH TO TALK. Then hold the transceiver about 3 inches from your mouth and speak slowly in a normal voice. The RX/TX indicator lights red.

illus - show PUSH TO TALK and RX/TX indicator

5. Release PUSH TO TALK when you finish your transmission.

6. To turn off the transceiver, turn VOLUME counterclockwise until it clicks.

Operational Hints

Your transceiver's range varies depending on factors such as position, terrain, and battery condition. Buildings absorb transmitted signals and, if they contain metal, might completely block the signals. Trees and heavy cloud formations have a similar effect, though not as severe. If you are near a lake or the ocean, you might get excellent range.

To ensure maximum range, operate the transceiver with the battery pack fully charged. As the voltage decreases, the range decreases.

Care AND Maintenance

Your RadioShack BTX-127 CTCSS • VHF/FM Business Band Transceiver is an example of superior design and craftsmanship. The following suggestions will help you care for your transceiver so you can enjoy it for years.

- Keep the transceiver dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Use and store the transceiver only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.
- Keep the transceiver away from dust and dirt, which can cause premature wear of parts.
- Handle the transceiver gently and carefully. Dropping it can damage circuit boards and cases and can cause the transceiver to work improperly.
- Use only a battery pack of the required size and type. Battery packs can leak chemicals that damage your transceiver's electronic parts.
- Wipe the transceiver with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the transceiver.

Modifying or tampering with the transceiver's internal components can cause a malfunction and might invalidate your transceiver's warranty and void your FCC authorization to operate it. If your transceiver is not performing as it should, take it to your local RadioShack store for assistance.

Specifications

Frequency Range	150.775–157.740 MHz
Channels	1
Modulation Type	FM
Antenna Impedance	50 Ohm
Microphone	Condenser Type
Power Supply	7.2V 950 mAh Ni-Cd Battery Pack

Note: The supplied battery charger does not operate at temperatures below 32°F (0°C) or above 113°F (45°C).

Sensitivity at 12dB SINAD	0.5 μV
Bandwidth	12.5 KHz
Adjacent Channel Rejection	45 dB
Audio Output Power	200mW @ 8 ohm (10% distortion)
Audio Distortion	7 %
Transmit Power	Hi: 2W Lo: 600 mW
Harmonic Emission	55 dB
Dimensions (HWD)	$5\frac{1}{2} \times 2\frac{3}{8} \times 1\frac{9}{16}$ Inches (140 × 60 × 35 mm)
Weight (with battery pack)	14 oz (0.4 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

10A8

Printed in Hong Kong

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>