

UNIVERSAL GAMER REMOTE

Thank you for purchasing your 5-in-1 Universal Gamer Remote from **RadioShack**.

Please read this user's guide before installing, setting up, and using your new remote.

**What's Included**

Remote
User's Guide

www.radioshack.com

Contents

Introduction	3
Installing Batteries.....	4
Battery Notes.....	4
Key Charts	5
Programming a Device	7
Programming Notes.....	7
Searching for a Code	8
Checking the Codes.....	9
Volume Lock.....	9
Locking Volume Control to One Device.....	9
Unlocking Volume Control for a Single Device	10
Unlocking All Volume Controls.....	10
Learning	10
Learning Functions	10
Deleting a Learned Function.....	11
Programming Master Power	11
Troubleshooting.....	12
RF Emissions Information	13
Manufacturers Codes	14
Setup Codes For Audio - Amplifier (A).....	14
Setup Codes For Cable Set Top Box (C)	14
Setup Codes For Audio - Accessory (M)	18
Setup Codes For Video - Accessory (N)	18
Setup Codes For Audio - Receiver (R)	20
Setup Codes For Satellite Set Top Box (S) ..	23
Setup Codes For Television (T).....	25
Setup Codes For Video - VCR (V).....	37
Setup Codes For Video - DVD (Y)	45
Limited 90-day Warranty	52

Introduction

Your 5-in1 Universal Gamer Remote is designed to operate up to five home entertainment devices and has three dedicated modes to operate Media Center PCs, Play Station 2 and Microsoft X-Box 360 gaming systems.

- **Macros** – For programming Master Power control
- **Learning** – to capture unique functions from your devices' original remote controls
- **Direct Code Setup** – for easy device programming with setup codes
- **Innovative Code Search** – allows setup of your devices without looking up codes
- **Volume Lock** – to assign volume controls to individual devices or to one global device
- **Extensive Code Library** – largest and most efficient group of IR remote control codes for virtually every current brand on the market.

Xbox 360 is a trade mark of Microsoft Corp.

PlayStation is a registered trademark of Sony Computer Entertainment Inc.










 


Installing Batteries

 






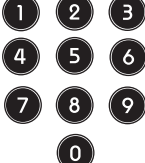


1. Open the battery compartment cover (located on the back of the remote)
2. Insert 2 AAA batteries (not included) in the compartment, mating the polarity symbols (+ and -) inside.
3. Replace the cover.

Battery Notes

- If your remote stops operating properly, replace the batteries. All settings will be restored.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (that is, standard, alkaline or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Key Charts

Press this key...	To...
	Enter programming features.
	Turn on or off the selected device. This key can also be programmed to turn on or off all of your programmed equipment.
	The LED (red light) blinks to show that the remote control is working and is sending signals.
	Select a desired home entertainment device to control.
	Select a desired media center or game console to control.
	Display your selected device's main menu.
	Display your selected device's program guide or setup menu.
	Exit from your selected device's guide or menu.
	Display the current channel and program information.
	Move the cursor in the program guide and menu screens.
	Choose options from your selected device's menu or guide.
	X-BOX 360: Y, X A and B Commands Playstation 2: Circle, X, Triangle and Square Command Media Center PC: Yellow, Blue, Green and Red Commands
	Raise (or lower) the sound volume.

Press this key...	To...
	Select the next or previous channel. Select the next or previous chapter on some DVD players and page up or down while viewing the Guide on a DIRECTV receiver.
	Recall the last channel being viewed on the selected device.
	Start the media on your game console or Media Center PC.
	Turn the sound on or off for the selected device
	Control the basic functions of your DVR, DVD, VCR, or VOD event (if available through your Cable or Satellite provider).
	Control the skip back and skip forward function of your DVR, DVD, or VCR.
	Turn backlight on and off.
	Directly enter channels (for example, 09 or 206) to be viewed.
	Directly input channel numbers on some TVs or make a selection in the devices menu.
	Cycle through the available inputs of the selected device.

Programming a Device

Your remote comes pre-programmed to operate SONY TVs, DVD players, VCRs, Audio Receivers and DIRECTV HD or HD with PVR satellite receiver. To control other brands, follow these steps to program your remote.

Before proceeding, find the codes for your devices in "**Manufacturers Codes.**"

1. Turn on the device (for example, DVD player) and, if needed, load media (for example, a DVD).
2. On the remote, press a device key (**TV, CBL/SAT, DVD, VCR or AUD**).
3. Press and hold **P** until the LED blinks twice, then release.
4. Enter the first five-digit code for your device. The LED blinks once as you enter each digit. If the code is correct, the LED blinks twice.

If the LED does not blink twice, repeat steps 2-4 and try entering the code again.

5. Aim the remote at the device and press **Power** (or **PLAY**, if the device does not have a **Power** key). The device should turn off. If it does not, repeat steps 2-5, trying each code for your brand until you find one that works. If you cannot find a code that works, perform the steps in "**Searching for Your Code.**"
6. Repeat steps 1 to 5 for each device you want to program.

Programming Notes

If no key is pressed within 10 seconds, the remote control exits the programming.

To program a TV/DVD, TV/VCR/DVD, or TV/VCR Combo, use the **TV, DVD, or VCR** device key.

If you have a VCR/DVD combo, you may need to set up both a **VCR** and **DVD** code.

You can assign any device key to work with any available device. For example, if you want to use **AUD** to control a second TV, simply follow the same steps listed in "**Programming a Device**" using the codes listed in "**Manufacturers Codes**" for your TV.

Searching for a Code

If your device does not respond to the remote after trying all codes listed for your brand or if your brand is not listed, try searching for your code.

Use the following device code digits to control a specific device:

Code Digit	Device
0	Cable / Satellite
1	TV
2	DVD, VCR, DVR/PVR
3	Audio, Misc Audio

1. Turn on your device and, if needed, load media (for example, a DVD).
2. On the remote control, press a device key (**TV, CBL/SAT, DVD, VCR** or **AUD**) once; it blinks once. Then press and hold **P** until the LED blinks twice.
3. Enter **9 9 1**. The LED blinks twice.
4. Press the code digit for your device. The device key blinks twice. Aim the remote control at the device and press **Power** once.
5. Press and release the **CH+** key continuously, then stop when the device turns off.

The remote is sending IR codes from its extensive library to the selected device, starting with the most popular code first.

6. Press **Power**. The device should turn on, then press **P** to lock in the code.

If the device does not turn on during step 6, slowly press and release **CH-** to go back through the codes, press and release **P** when the device turns on.

Checking the Codes

If you have set up the remote using the procedure in "**Searching for a Code**," you may want to know which five-digit code is operating your equipment.

1. On the remote control, press a device key once (**TV, CBL/SAT, DVD, VCR** or **AUD**); it blinks once. Then press and hold **P** until the device key blinks twice.
2. Enter **9 9 0**. The device key blinks twice.
3. To find the first digit of the code, press **1** once. Count the number of times the LED blinks and write down the number.

If the LED blinks once, the first digit is 1, if it blinks twice, the first digit is 2, etc. If a code digit is 0, the selected device key does not blink.

4. Repeat step 3 four more times for the remaining digits, pressing **2** to find the second digit, **3** to find the third digit, **4** to find the fourth digit, and **5** to find the fifth digit. Write down the rest of the code and keep it in a safe place.

Volume Lock

Your remote comes preset with the volume locked to the TV mode. This configuration allows you to control the volume of the TV while in the CBL/SAT, DVD or VCR modes.

However, you may change the Volume Lock setting to Global Volume Lock to a different mode so that volume control is always controlled through your audio receiver. After that, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation.

Locking Volume Control to One Device

1. Press and hold **P** until the LED blinks twice, then release.
2. Enter **9 9 3**. The LED blinks twice.
3. Press the device key for the device you wish to control volume (for example, TV). The LED blinks twice.

4. Now when you press **VOL+**, **VOL-**, or **MUTE**, the selected device (for example, TV) controls the volume regardless of the current mode.

Unlocking Volume Control for a Single Device

1. Press the device key for the device you wish to unlock (for example, TV).
2. Press and hold **P** until the LED blinks twice, then release.
3. Enter **9 9 3**. The LED blinks twice.
4. Press **VOL-**. The LED blinks four times.
5. Repeat Steps 1-4 for any other devices that you want to have independent volume control.

Unlocking All Volume Controls

1. Press and hold **P** until the LED blinks twice, then release.
2. Enter **9 9 3** and then press **VOL+**. The LED blinks four times. You can now independently control volume for all programmed devices.

Learning

You can program any non-used key on your remote to learn a function that is unique to your home entertainment devices (for example, **EJECT** for a **DVD**).

If no key is pressed within 10 seconds, the remote control exits the programming.

Have your original remote controls handy before beginning.

Learning Functions

1. Hold down **P** until the red light blinks twice.
2. Press **9 7 5**. The red light blinks twice.
3. Press the device key that corresponds with the desired device's remote (**TV**, **CBL/SAT**, **DVD**, **VCR** or **AUD**).
4. Press the desired learning key. The red light blinks rapidly.
5. Place the device's remote control head-to-head (about 2 inches apart) with the

Gamer Remote.

6. On the device's remote control, hold down the key to be learned until the red light on the Gamer Remote blinks twice. If the red light does not blink twice, repeat Steps 1–5.
7. To lock in learned functions on the Gamer Remote, hold down **P** until the red light blinks twice.
8. To test a learned function, press the learned key on the Gamer Remote and use the function as usual.

Deleting a Learned Function

1. Hold down **P** until the red light blinks twice.
2. Press **9 7 6**. The red light blinks twice.
3. Press the device key that corresponds with the desired device's remote (**TV**, **CBL/SAT**, **DVD**, **VCR**, or **AUD**).
4. Press the key for the learned function you want to delete twice. The LED blinks twice.

Programming Master Power

1. Press the device key for the device you wish to start the Power Macro (for example, **CBL/SAT**).
2. Press and hold **P** until the LED blinks twice, then release.
3. Enter **9 9 5**. The LED blinks twice.
4. Press **Power**. The LED blinks once.
5. Press the **CBL/SAT** key followed by **Power**, press **TV** then **Power**, press **DVD** then **Power**, press **VCR** then **Power**, press **AUD** then **Power**.
6. To finish, Press and release the **CBL/SAT** key.
7. Press and hold in **P** until the LED blinks twice.

Step 5 can be modified to only include the device you want associated with the Master Power.

Troubleshooting

Problem	Solution
LED does not blink when you press a key.	Replace batteries with two (2) new AAA alkaline batteries.
LED blinks when you press a key, but device does not respond.	Make sure the remote is aimed at your device and is not more than 15 feet away.
LED blinks one long blink.	An entry error has occurred (for example, wrong key). Try entry sequence again.
Remote does not control devices or commands are not working properly.	Try all listed codes for the device. Make sure the device operates with an infrared remote control.
CH+, CH-, and LAST do not work for your RCA TV.	Due to RCA design from 1983 to 1987, only the original remote control operates these functions
No volume on a second TV.	See " Changing Volume Lock. "
Channels do not change properly.	If the original remote control required you to press Enter or OK to change channels, press Enter or OK on this remote after entering the channel number.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Manufacturers Codes

Setup Codes For Cable Set Top Box (C)

Códigos de configuración para decodificadores de cable

Brand	Codes
A-Mark	00008, 00144, 00056
ABC	00237, 00003, 00008, 00014, 00007, 00017
Accuphase	00003, 00014, 00007, 00017
Acorn	00237
Action	00237
Active	00237
Aim	00015
Allegro	00153, 00315
Amino	01822
Antronix	00022, 00207
Archer	00237, 00022, 00039, 00153, 00207, 00797
BCC	00276
Belcor	00022, 00056
Bell & Howell	00014
Betavue	00022
British Telecom	00003
Cable Star	00056
Cabletenna	00022, 00039
Cableview	00022
Century	00008, 00153, 00315
Citation	00017
Citizen	00153, 00315
Clearmaster	00883
ClearMax	00883
Cool Box	00883
Coolmax	00883
Curtis Mathes	00015
Digeo	01187
Director	00476
Emerson	00014, 00015, 00303, 00797
Everquest	00015

Cable Set Top Box (C) Continued	
Fosgate	00276
Garrard	00153
GC Electronics	00056, 00207
GE	00144, 00021
Gemini	00015, 00797
General Instrument	00476, 00810, 00276, 00003, 00012, 00014, 00015
Gibraltar	00003
GMI	00883
GoldStar	00144
Goodmind	00797
Hamlin	00015
Hitachi	00003, 00008
Hytek	00007
Hytex	00007
Insight	00476, 00810
Jasco	00015, 00153, 00315
Jebsee	00014
Jerrold	00476, 00810, 00276, 00003, 00012, 00014, 00015
Magnavox	00797
Mellenium	00153
Memorex	00000
Mitsubishi	00003
Motorola	01376, 00476, 00810, 00276, 01187, 00014, 01106
Multitech	00883
Myrio	01822
Nova Vision	00008
Novaplex	00008, 00017
NSC	00012, 00022
Oak	00007, 00017, 00303
Optimus	00021
Pace	01877, 00877, 00237, 00008
Panasonic	00000, 00008, 00144, 00107, 00021
Paragon	00000, 00008, 00525
Penney	00000
Philips	01305, 00317, 00153

Cable Set Top Box (C) Continued	
Pioneer	01877, 00877, 00144, 00533
Prism	00012
Pulsar	00000
Quasar	00000
RadioShack	00015, 00153, 00303, 00315, 00797, 00883
RCA	00021, 00797
Realistic	00153, 00207
Recoton	00153
Regal	00276
Rembrandt	00022, 00153
Runco	00000
Samsung	00003, 00144
Scientific Atlanta	01877, 00877, 00477, 00237, 00003, 00000, 00008, 00012, 00017, 00021
Signal	00015
Sony	01006
Sprucer	00144, 00021
Starcom	00003, 00014, 00015
Stargate	00014, 00015, 00797
Starquest	00015
Supercable	00276
Supermax	00883
Tandy	00258
Tocom	00012
Torx	00003
Toshiba	00000
Tristar	00883
Tusa	00015
Uniden	00022
Unika	00022, 00153, 00207
United Artists	00007
United Cable	00276, 00003, 00014
Universal	00022, 00039, 00056, 00153, 00207, 00315
US Electronics	00276, 00003, 00008, 00017
V2	00883

Cable Set Top Box (C) Continued	
Videoway	00000
Viewmaster	00883
Viewstar	00258
Vision	00883
Vortex View	00883
Zenith	00000, 00525, 00017, 00039, 00153, 00315

Setup Codes For Audio - Accessory (M)

Códigos de configuración para accesorios de audio

Brand	Codes
Accurian	31106
Altec Lansing	30607, 31056
Apple	31115, 31644
D-Link	31522
DLO	31155, 31218
GPX	32113
Griffin	31891
iDeck	31106
iHome	32152
iLive	32113
Insten	32151
iPort	31917, 32042
Monitor Audio	31106
NaviPod	31644
Netgear	31785
Sonance	31917, 32042
SSI	31522
Xitel	32123, 32139
Yamaha	32021

Setup Codes For Video - Accessory (N)

Códigos de configuración para accesorios de video

Brand	Codes
ABS	01272
Accurian	01653
Alienware	01272
Amino	01481, 01615
AT&T	00858
Buffalo	01739
CyberPower	01272
D-Link	01554, 01731
Epson	01563
Gateway	01272
Hewlett Packard	01272
Howard Computers	01272
HP	01272
Hush	01272
iBUYPOWER	01272
KoolConnect	01481
LG	01415
Linksys	01272, 01365
Media Center PC	01272
Microsoft	01272, 02049
Mind	01272
Motorola	00858, 01363
Niveus Media	01272
Northgate	01272
Panasonic	01120
Pioneer	01010
Ricavision	01272
Samsung	01190, 01490
Scientific Atlanta	00858
Sharp	01010
Sony	01272, 01324
Stack 9	01272
SureWest	01481

Video - Accessory (N) Continued	
Sylvania	01563
Systemax	01272
Tagar Systems	01272
Toshiba	01272
Touch	01272
Viewsonic	01272
Voodoo	01272
Xbox	02049
ZT Group	01272

Setup Codes For Audio - Receiver (R)

Códigos de configuración para receptores de audio

Brand	Codes
Accurian	32098
ADC	30531
Admiral	30182
Aiwa	31405, 30121, 31388, 31641
Akai	30076, 30115, 30440
Alco	31390
AMC	31077
Anam	31609, 31074
Anam National	30609
Apex Digital	31257, 31430
Arcam	31189
Audiotronic	31189
Audiovox	31390, 31627
Bose	31229, 30639, 31253, 31933
Capetronic	30531, 30690
Carver	31189, 30042, 30121, 30360, 31289
Casio	30195
Clarinette	30195
Classic	31352
Clatronic	30797
Coby	31263, 31389
Compaq	31136

Audio - Receiver (R) Continued	
Criterion	31420
Curtis	30797, 31263
Curtis Mathes	30014, 30080
Daewoo	31250
Delphi	31414
Denon	31360, 30121, 31142, 31434, 32857
Emerson	30195, 30531
Fisher	30042, 30219, 30360, 30797, 31801
Garrard	30286, 30440, 30744
Gateway	31517
Glory Horse	31263
Go Video	31532
Goodmans	30797
GPX	30744
Hanwah	30741
Harman/Kardon	31289
Hitachi	31801
Initial	31426
Insignia	31077
Integra	30842, 31298
Jensen	30754
JVC	31058, 31263, 31374, 31495, 31811
Kansai	30440
Kawasaki	31390
Kenwood	31313, 31570, 31569, 30042, 30186, 30239, 30313, 30314
KLH	31390, 31412
Koss	30744, 31366, 31497
LG	31293
Liquid Video	31497
Lloyd's	30195
LXI	30181, 30744
Magnavox	31189, 31269, 30195, 30364, 30531, 31514
Marantz	31189, 31269, 31289
McIntosh	31289

Audio - Receiver (R) Continued	
Memorex	30335, 31024
Micromega	31189
Modulaire	30195
Myryad	31189
Nakamichi	31313
Nikko	30609
Norcent	31389
Nova	31389
NTDE Geniesom	30744
Onkyo	30842, 31298, 31531
Optimus	31023, 31074, 30849, 30803, 30801, 30797, 30754, 30744, 30738, 30690, 30670, 30622, 30531, 30440, 30286, 30229, 30219, 30195, 30186, 30182, 30181, 30178, 30177, 30163, 30121, 30115, 30080, 30042, 30025, 30014, 30001
Orient Power	30744
Oritron	31366, 31497
Panasonic	31308, 31518, 31288, 31316, 31548, 31633, 31763, 31764
Penney	30195, 30744
Philco	31562, 31838
Philips	31189, 31269
Pioneer	31023, 30014, 30080, 30531, 30801, 31122, 31123, 31384
Polaroid	31508
Polk Audio	31289, 31414
Proscan	31254
RadioShack	31609, 30181, 30744, 31263
RCA	31023, 31609, 31254, 30080, 30360, 30531, 31074, 31122, 31123, 31390, 31511
Realistic	31609, 30001, 30025, 30042, 30121, 30163, 30177, 30178, 30181, 30182, 30186, 30195, 30440, 30534, 30622, 30803
Saba	31519
Samsung	31295, 31500
Sansui	31189

Audio - Receiver (R) Continued	
Sanyo	30219, 30360, 30801, 31469, 31801
Schneider	30364
Scott	30163, 30418
Sears	30195
Sharp	30186, 31286
Sharper Image	30797, 31263
Sherwood	31077, 31517, 31653
Shinsonic	31426
Sirius	31627, 31811
Sonic Blue	31532
Sontec	30068
Sony	31058, 31441, 31258, 31759, 31622, 30415, 30474, 31349, 31406, 31442, 31558, 31658, 31758, 31858
Soundesign	30670
Stereophonics	31023
Sunfire	31313, 30313, 30314
Sylvania	30797
Symphonic	30182
Teac	30163, 31074, 31390, 31528
Technics	31308, 31518, 30208, 31633
Techwood	30364, 30609, 30690
Thorens	31189
Toshiba	30080, 30842, 31123
Venturer	30849, 31390
Waitec	31352
Wards	30014, 30042, 30080
Wharfedale	30440
XM	31406, 31414
Yamaha	31023, 30176, 30186, 31176, 31276, 31331, 31375
Yorx	30195
Zenith	30622, 30744, 31293

Setup Codes For Satellite Set Top Box (S)

Códigos de configuración para
decodificadores de satélites

Brand	Codes
AlphaStar	00772
Bell ExpressVu	00775, 01170
Chaparral	00216
Crossdigital	01109
DirecTV	01377, 00392, 00566, 00639, 01639, 01142, 00247, 00749, 01749, 00724, 00819, 01856, 01076, 01108, 00099, 01109, 01414, 01442, 01609, 01392, 01640
Dish Network System	01505, 01005, 00775, 01170, 01775
Dishpro	01505, 01005, 00775, 01775
Echostar	01505, 01005, 00775, 00218, 00269, 01170, 01775
Expressvu	00775, 01775
Funai	01377
GE	00392, 00566
General Instrument	00869
GOI	00775, 01775
Hitachi	00749, 00819
Houston	00775
HTS	00775, 01775
Hughes Network Systems	01142, 00749, 01749, 01442
Innova	00099
Jerrold	00869
JVC	00775, 01170, 01775
Legend	00269
LG	01414
Magnavox	00724, 00722
McIntosh	00869
Memorex	00724, 00269
Mitsubishi	00749
Motorola	00869, 00856
Netsat	00099

Satellite Set Top Box (S) Continued	
Next Level	00869
Optimus	00724
Panasonic	00247, 00701
Paysat	00724
Philips	01142, 00749, 01749, 00775, 00724, 00819, 01076, 00722, 00099, 01442
Pioneer	01142, 01442
Primestar	00869
Proscan	00392, 00566
RadioShack	00566, 00775, 00869, 00051, 00052, 00269
RCA	00392, 00566, 01142, 00775, 00855, 00143, 01392, 01442
Realistic	00051, 00052
Samsung	01377, 01142, 01276, 01108, 01109, 01442, 01609
SKY	00856, 00099
Sony	00639, 01639, 01640
Star Choice	00869
Star Trak	00772, 00869
Thomson	00392, 00566
Tivo	01142, 01442
Toshiba	00749, 01749, 00790, 01285
UltimateTV	01392, 01640
Uniden	00724, 00722, 00052
Voom	00869
Zenith	00856, 01856

Setup Codes For Television (T)

Códigos de configuración para TV

Brand	Codes
A-Mark	10047, 10054, 10003, 10020, 10032, 10039, 10165
Abex	10032
Accurian	11803
Accuscan	10047, 10018, 10135

Television (T) Continued	
Action	10030, 10003, 10019, 10052, 10185
Admiral	10047, 10054, 10017, 10051, 10093, 10463, 10180, 10016, 10018, 10165, 10179
Advantz	10282
Advent	10761, 10783, 10815, 10817, 10842
Adventuri	10000
Adyson	10032, 10217
Agna	10150
Aiko	10092
Aiwa	10032
Akai	10060, 10812, 10702, 10030, 10145, 10038, 10056, 10151, 10672, 11675, 11676
Alaron	10170, 10179
Alba	10032, 10038, 10218
Albatron	10700
Alfide	10672
Alleron	10030, 10170
Ambassador	10150, 10177
America Action	10180
American High	10000, 10060
Ampro	10751
Amstrad	10171, 10039, 10177
Amtron	10000, 10180
Anam	10180
Anam National	10055
AOC	10180, 10030, 10003, 10019, 10032, 10038, 10039, 10052, 10185, 11365
Apex Digital	10156, 10748, 10879, 10765, 10185, 10767, 10890
Archer	10003
Asuka	10218
Audinac	10180
Audio-Technica	10019
Audiovox	10451, 10180, 10092, 10003, 10179, 10623, 10710, 10802, 10875, 11284, 11937

Television (T) Continued	
Aventura	10171
Axion	11937
Basic Line	10218
Baycrest	10032, 10186
Baysonic	10180
Beaumarck	10017, 10178, 10030, 10019, 10179
Belcor	10030, 10019
Bell & Howell	10054, 10154, 10093, 10016, 10179
Boots	10217
Boxlight	10893
Bradford	10180
Brick	10039
Brockwood	10178, 10030, 10019, 10056
Broksonic	10236, 10463, 10180, 10003, 10039, 10177, 11911
Candle	10030, 10039, 10056, 10186
Capehart	10017, 10178, 10030, 10092, 10003, 10019, 10032, 10052
Carnivale	10030
Carver	10054, 10170
CCE	10217
Celebrity	10000
Celera	10765
Changhong	10156, 10765, 10767, 10783
Cinego	11986
Cineral	10451, 10092
Citek	10047, 10032
Citizen	10054, 10000, 10451, 10463, 10180, 10060, 10030, 10171, 10092, 10020, 10032, 10039, 10019, 10056, 10186, 10280, 10282, 10016, 10003
Civet	10185
Clairtone	10185
Clarion	10180
Classic	10030, 10092, 10019, 10056

Television (T) Continued	
Colortyme	10047, 10054, 10017, 10060, 10178, 10030, 10018, 10019, 10032
Colt	10019
Commercial Solutions	11447, 10047
Concerto	10056
Conic	10178
Contec	10180, 10185
Craig	10180, 10171, 10179, 10282
Crosley	10054, 10000, 10180, 10030, 10171, 10096, 10187
Crown	10093, 10180, 10039, 10056, 10672
Crown Mustang	10672
Curtis Mathes	10047, 10054, 10154, 10000, 10051, 10451, 10093, 10180, 10060, 10702, 10178, 10030, 10145, 10166, 11347, 11147, 10747, 10466, 10016, 10179, 10018, 10019, 10056, 10032, 10038, 10039
CXC	10180
Daewoo	10451, 10178, 10092, 11661, 11756, 10019, 10020, 10039, 10623, 10661, 10672, 11755
Dayton	10092
Daytron	10178, 10030, 10092, 10019, 10032, 10039, 10056
Decca	10217
Dell	11080, 11178
Denon	10145, 10038, 10055, 10511
Denstar	10628
Dick Smith Electronics	11261
Dumont	10017, 10180, 10178, 10016, 10019, 10032
Durabrand	10463, 10180, 10178, 10171, 11034, 10003
Dwin	10093, 10747, 10774
Dynatech	10217
Dynex	11463
Eaton	10060

Television (T) Continued	
Electroband	10000, 10185
Electrograph	11755
Electrohome	10154, 10000, 10463, 10150, 10178, 10030, 10019, 10032, 10039, 10056, 10151, 10185, 10381, 10409
Elite	10218
Emerald	10178, 10177
Emerson	10047, 10154, 10451, 10236, 10463, 10180, 10150, 10178, 10171, 11913, 11911, 11394, 10623, 10282, 10280, 10185, 10179, 10177, 10170, 10146, 10135, 10039, 10038, 10032, 10019
Envision	10030, 10019, 10032, 10039, 10813, 11365
Epson	10833, 10840
ESA	10812, 10171
Fisher	10054, 10154, 10000, 10159, 10217
FlexVision	10710
Fortress	10093
Fujitsu	10179, 10186, 10217, 10683, 10809, 10853
Funai	10000, 10180, 10171, 10039, 10179, 11271, 11904
Futuretech	10180
Gateway	11756, 11755
GE	11447, 10047, 10000, 10051, 10451, 10060, 10178, 10030, 10038, 10052, 10055, 10135, 10282, 10021, 10747, 11147, 11347, 10018, 11922
Gemini	10047
Gibraltar	10017, 10000, 10030, 10019
Go Video	10886
Go Vision	11937
GoldStar	10047, 10054, 10178, 10030, 10018, 10019, 10032, 10039, 10056, 10409, 11154
Goodmans	10360
GPX	10179
Gradiente	10053, 10056, 10170

Television (T) Continued	
Gran Prix	10179
Granada	10032
Grundig	10706, 10672, 10683
Grundy	10180, 10179
Grunpy	10180, 10179
Haier	11034
Hallmark	10236, 10180, 10178, 10019, 10135, 10179, 10187
Hannspree	11348
Harley Davidson	10000, 10180, 10060, 10178, 10030, 10019, 10179, 11904
Harman/Kardon	10054
Harvard	10180
Havermy	10093
Heathkit	10017
Helios	10865
Hello Kitty	10451
Hikone	10218
Hisense	10748
Hitachi	10047, 10054, 10017, 10000, 10051, 11145, 10145, 10018, 10032, 10038, 10039, 10016, 10055, 10056, 10151, 10179, 10185, 10409, 11904
Hyundai	10849, 10865
Ima	10236, 10180, 10178, 10179
Infinity	10054
Insignia	10171
Inteq	10017, 10145
JBL	10054
JCB	10000
Jensen	10761, 10815, 10817
JIL	10030, 10019
Jutan	10030, 10019
JVC	10054, 10053, 10030, 10055, 10650, 10731, 11253, 11774
Kamp	10017, 10180, 10019, 10185, 10217
Kawasho	10030, 10019, 10185
Kaypani	10052

Television (T) Continued	
KEC	10180, 10060
Kenmore	10146
Kenwood	10180, 10030, 10019
KLH	10156, 10180, 10765, 10767
Kloss	10030, 10024
KMC	10003, 10032
Konka	10180, 10080, 10218, 10628, 10707
KTV	10463, 10180, 10030, 10039, 10185, 10217, 10280
Lark	10154
LG	10054, 11265, 10060, 10178, 10030, 11758, 10019, 10056, 10442, 10700, 10856, 11154, 11178, 11423, 11663
Lloyd's	10236, 10180, 10030, 10032, 10039, 10056, 10179, 11904
Loewe	10136
Logik	10236, 10180, 10016, 10056, 10179
Lumatron	10217
Luxman	10056
LXI	10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10135, 10146, 10159, 10165, 10179, 10280, 10747, 10096, 10056, 10055, 10039, 10038, 10032, 10024, 10021, 10020, 10019, 10018, 10016
Macy	10039, 10186
Magnasonic	10054, 10000, 10156, 10093, 10030, 10092, 10003, 10019, 10056, 10179, 11913
Magnavox	10047, 11454, 10054, 10154, 10000, 10250, 10051, 10180, 10060, 10030, 10171, 10092, 10706, 11913, 11904, 11755, 10019, 11365, 11254, 10802, 10386, 10282, 10020, 10187, 10186, 10024, 10179, 10096
Majestic	10017, 10016
Marantz	11454, 10054, 10030, 10704, 10855, 11154

Television (T) Continued	
Matsui	10039, 10056, 10177, 10217
Matsushita	10250, 10051, 10650
Maxent	11756, 11755
Megapower	10700
Megatron	10047, 10178, 10145, 10003, 10056, 10151
MEI	10185
Memorex	10154, 10463, 10180, 10150, 10178, 10030, 10016, 10032, 10039, 10056, 10165, 10179, 11911, 11920, 11924, 11927
MGA	10150, 10178, 10030, 10019
MGN Technology	10178
Micro Genius	10150
Midland	10047, 10017, 10051, 10018, 10019, 10032, 10039, 10056, 10135, 10747
Minutz	10021
Mitsubishi	10154, 10093, 11250, 10150, 10178, 10030, 10019, 10836, 10868
Monivision	10700
Motorola	10054, 10051, 10093, 10150, 10055
MTC	10180, 10060, 10030, 10092, 10019, 10032, 10039, 10056, 10185, 10282
Multitech	10180, 10179, 10217
NAD	10156, 10178, 10166, 10019, 10056, 10866, 11156
NEC	10047, 10178, 10030, 10016, 10019, 10056, 10170, 10497, 10704, 10882, 11704
NetTV	11755
New Tech	10056
Nikko	10178, 10030, 10092
Nikkodo	10178, 10030, 10092
Nishi	10030, 10018
Norcent	10748, 10824, 11365
Noshi	10018
NTC	10092
Nyon	10000

Television (T) Continued	
Olevia	11144, 11240, 11331, 11610
Onwa	10180
Optimus	10154, 10250, 10093, 10180, 10150, 10178, 10030, 10166, 11927, 11924, 11913, 10650, 10165, 10056, 10039, 10032, 10016
Optoma	11348, 11673
Optonica	10093, 10165
Orion	10017, 10236, 10463, 10180, 10178, 11463, 10019, 10177, 10179, 11911
Pace	10092, 10019
Palsonic	10779
Panasonic	10054, 10000, 10156, 10250, 10051, 10236, 10030, 10052, 10024, 10055, 10018, 10650, 11310, 11410, 11480, 11924, 11927
Panda	10706
Pausa	10179
Paxonic	10060, 10030, 10019, 10032, 10039
PCE	10156, 10060, 10179
Penney	10047, 10000, 10156, 10250, 10051, 10060, 10178, 10030, 11347, 10747, 10159, 10135, 10056, 10039, 10038, 10032, 10021, 10019, 10018, 10016, 10003
Petters	11523
Philco	10054, 10463, 10030, 10145, 10019, 10020, 10024, 10038, 10096, 10179, 10186, 10187, 10786, 11029
Philips	11454, 10054, 10030, 10171, 10056, 10096, 10186, 10187, 10690, 11154, 11254, 11744
Pilot	10051, 10060, 10178, 10030, 10019, 10039, 10052, 10056
Pioneer	10166, 10038, 10055, 10679, 10866
Polaroid	10765, 10865, 11276, 11314, 11327, 11328, 11341, 11523
Portland	10451, 10092, 10003, 10019, 10032, 10039

Television (T) Continued	
Precision	10236, 10180, 10177, 10185, 10282
Prima	10761, 10783, 10815, 10817
Princeton	10700, 10717
Prism	10250, 10051, 10055
Proscan	11447, 10047, 10018, 10135, 10466, 10747, 11347, 11922
Protec	10217
Proton	10178, 10003, 10039, 10052, 10466
Pulsar	10017, 10092, 10016, 10019
Pulser	10178, 10092, 10019
Quartz	10150, 10178
Quasar	10250, 10051, 10016, 10024, 10055, 10165, 10650, 11924
Rabbit	10047
RadioShack	10047, 10154, 10180, 10150, 10178, 10030, 10019, 10032, 10039, 10056, 10165, 10409, 10747, 11904, 11920
RCA	11447, 10047, 10054, 10000, 10051, 10093, 10178, 11948, 11922, 11547, 10018, 11347, 11247, 11147, 11047, 10774, 10747, 10679, 10019, 10165, 10135, 10021, 10090, 10038
Realistic	10047, 10154, 10180, 10150, 10178, 10030, 10003, 10016, 10019, 10032, 10039, 10056, 10165
Rhapsody	10185
Road Authority	10282
Runco	10017, 10060, 10030, 10016, 10497
Sampo	10047, 10030, 11756, 10032, 10039, 10052, 11755
Samsung	10047, 10054, 10017, 10154, 10060, 10812, 10702, 10178, 10030, 10039, 10032, 10055, 10056, 10019, 10217, 10482, 10766, 10814, 11060
Samsux	10038, 10039
Sanky	10060, 10030, 10019, 10038, 10039, 10280

Television (T) Continued	
Sansui	10463, 10060, 10030, 10019, 10165, 11904, 11911
Sanyo	10047, 10054, 10154, 10000, 10463, 10171, 10088, 10146, 10159, 10799, 10893, 11755
Saville	10060
Sceptre	11360
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10030, 10019, 10039, 10177, 10179, 11711
Sears	10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10146, 10159, 10165, 10179, 10280, 10747, 11904, 10135, 10096, 10056, 10055, 10039, 10038, 10032, 10024, 10021, 10020, 10019, 10018, 10016
Seimitsu	10019
Sharp	10054, 10093, 10180, 10019, 10032, 10039, 10165, 10179, 10386, 10491, 10688, 10689, 10818, 10851
Sheng Chia	10093
Shivaki	10178
Shogun	10019
Siemens	10145, 10032
Signature	10047, 10093, 10030, 10016, 10165, 10179, 10187
Silver	10019
Simpson	10178, 10030, 10186, 10187
Singer	10060, 10092
Solar Drape	10000, 10032
Sole	10813
Sony	10017, 10154, 11100, 10000, 10150, 10053, 10080, 10834, 11904
Soundesign	10180, 10178, 10019, 10056, 10179, 10186
Spectravision	10156, 10178, 10159, 10179, 10186

Television (T) Continued	
Spectricon	10003, 10032
Squareview	10171
SR2000	10154, 10171
SSS	10180, 10019
Standard Components	10218
Starlite	10236, 10180, 10019
Superscan	10093, 10864
Supre-Macy	10039, 10186
Supreme	10000
SV2000	10054
SVA	10748, 10865, 10870
Sylvania	10047, 10054, 10154, 10000, 10051, 10178, 10030, 10171, 10092, 11904, 11394, 11314, 11271, 10381, 10187, 10186, 10179, 10159, 10096, 10056, 10024, 10020
Symphonic	10000, 10180, 10178, 10171, 10179, 11904, 11913
Syntax	11144, 11240, 11331, 11610
Tandy	10093, 10039, 10165, 10217, 10218
Tatung	10000, 10051, 11756, 10003, 10038, 10055, 10217
Teac	10154, 10706, 10146, 10159, 10282, 10689
Technics	10054, 10250, 10051, 10055
Technol Ace	10179
Technovox	10030, 10217
Techwood	10250, 10051, 10060, 10003, 10055, 10056
Teknika	10054, 10463, 10180, 10150, 10060, 10178, 10092, 10016, 10019, 10032, 10039, 10056, 10179, 10186
Telecolor	10017
Telefunken	10702, 10056
Teleton	10186
Thomas	10047, 10178, 10019, 10039, 10056, 11904
Thomson	11447, 10047

Television (T) Continued	
TMK	10236, 10180, 10178, 10056, 10177
TNCi	10017
Tocom	10156
Tomashi	10282
Toshiba	10154, 11256, 10156, 10150, 11265, 10060, 11145, 10145, 10166, 12006, 11704, 11656, 11356, 11156, 10845, 10832, 10650
Tosonic	10185
Totevision	10051, 10039
Toyomenka	10178
Truetone	10250, 10051, 10055
TVS	10463
Uher	10019
Ultra	10092, 10019, 10039
Unitech	10039
Universal	10047, 10021, 10135
Universum	10032, 10146, 10170, 10177, 10217
V	11756, 10864, 10885, 11755
Vector Research	10030
Victor	10053
Vidikron	10054
Vidtech	10178, 10019
Viewsonic	10857, 10864, 10885, 11542, 11627, 11755
Viking	10060
Vizio	11756, 11758, 10864, 10885, 11499, 11755
Wards	10047, 10054, 10017, 10154, 10000, 10051, 10093, 10236, 10178, 10030, 10166, 10187, 10186, 10179, 10866, 11156, 10165, 10151, 10096, 10080, 10056, 10039, 10038, 10021, 10020, 10019, 10018, 10016
Waycon	10156
Welton	10178, 10019
Westinghouse	10000, 10451, 10885, 10889, 10890, 11092, 11282, 11577, 11712

Television (T) Continued	
White Westinghouse	10451, 10236, 10463, 10179, 10623, 10889
World	10451, 10236, 10463, 10180
Wyse	11365
XR-1000	10154, 10180, 10171, 10016, 10096, 10179
Yamaha	10030, 10019, 10769, 10833, 10839
Yorx	10030
Zenith	10047, 10017, 10000, 10093, 10463, 11265, 10812, 10178, 10030, 11145, 10145, 10171, 10092, 11911, 11904, 10146, 10039, 10016
Zonda	10003

Setup Codes For Video - VCR (V)

Códigos de configuración para VCR

Brand	Codes
A-Mark	20037, 20240, 20000, 20046
ABS	21972
Admiral	20060, 20048, 20039, 20047, 20104, 20209, 20062, 20479
Adventura	20037, 20240, 20000
Aiwa	20037, 20000, 20307, 21137
Akai	20041, 20175
Alba	20209
Alienware	21972
Allegro	20039, 21137
American High	20035, 20081
Amstrad	20000
Asha	20240
Astra	20035, 20240
Audio-Technica	20058
Audiovox	20037
Avis	20000
Beaumarck	20240
Bell & Howell	20035, 20048, 20039, 20000, 20104, 20046, 20479

Video - VCR (V) Continued	
Broksonic	20184, 20121, 20209, 20002, 20479, 21479
Calix	20037
Candle	20037
Canon	20035
Capehart	20002, 20062
Carrera	20240
Carver	20035, 20081
CineVision	21137
Citizen	20035, 20037, 20240, 20000, 20209, 20479, 21278
Classic	20037
Colortyme	20060, 20035, 20045
Colt	20000
Craig	20037, 20047, 20240
Criterion	20000
Crosley	20035, 20081, 20000, 20149
Curtis Mathes	20060, 20035, 20162, 20240, 20000, 20041, 20432, 20454, 21035
Cybernex	20240
CyberPower	21972
Daewoo	20037, 20045, 20046, 21137, 21278
Daytron	20037
Dell	21972
Denon	20081, 20042
Derwent	20041
DirecTV	20739
Dual	20000
Durabrand	20039
Dynatech	20240, 20000
Electrohome	20060, 20037, 20240, 20000, 20043, 20209
Electroponic	20037
Emerald	20184, 20121
Emerex	20032

Video - VCR (V) Continued	
Emerson	20037, 20184, 20240, 20000, 20121, 20043, 20209, 20002, 20202, 20479, 20593, 21278, 21479, 21593
ESA	21137
Fisher	20039, 20047, 20000, 20104, 20046, 20066
Fuji	20035, 20033
Fujitsu	20000
Funai	20037, 20000, 20593, 21593
Garrard	20000
Gateway	21972
GE	20060, 20035, 20048, 20240, 20000, 20149, 20202, 20807, 21035, 21060
Gemini	20060
Genexxa	20037, 20000
Go Video	20240, 20432, 20614, 20619, 21137
GoldStar	20035, 20037, 20039, 20000, 20480, 21137, 21237
Goodmans	20037, 20081, 20000, 20062
Gradiente	20000
Granada	20081, 20042
Grundig	20081
Harley Davidson	20000
Harman/Kardon	20081
Headquarter	20046
Hewlett Packard	21972
HI-Q	20035, 20047, 20000
Hitachi	20035, 20037, 20045, 20000, 20042, 20041, 20089
Howard Computers	21972
HP	21972
Hughes Network Systems	20042, 20739
Humax	20739
Hush	21972
Hytek	20047, 20000
iBUYPOWER	21972

Video - VCR (V) Continued	
ITT Nokia	20240, 20041, 20268
Janeil	20240
Jensen	20067, 20041
JVC	20067, 20041, 20058, 21162
KEC	20037
Kenwood	20067, 20041, 20046
Kodak	20035, 20037
KTV	20000
LG	20037, 20240, 20480, 21037, 21137
Linksys	21972
Lloyd's	20240, 20000
Loewe	20081
Logik	20240, 20000
Luxor	20046
LXI	20037, 20000, 20042, 20067
M Electronic	20240
Magnasonic	20037, 20240, 20000, 20593, 21278
Magnavox	20035, 20037, 20048, 20039, 20081, 20240, 20000, 20149, 20563, 20593, 20618, 21593, 21781
Magnin	20240
Marantz	20035, 20081, 20062
Marta	20037
Matsui	20037, 20209
Matsushita	20035, 20162, 20081, 20454, 21162
Media Center PC	21972
MEI	20035
Memorex	20035, 20162, 20037, 20048, 20039, 20047, 20240, 20000, 20104, 20209, 20062, 20046, 20268, 20299, 20307, 20454, 20479, 21037, 21162, 21237, 21262
Metz	20037
MGA	20060, 20240, 20043
MGN Technology	20240
Microsoft	21972

Video - VCR (V) Continued	
Midland	20240
Mind	21972
Minolta	20042
Mitsubishi	20060, 20048, 20047, 20000, 20042, 20067, 20043, 20041, 20807
Motorola	20035, 20048
MTC	20240, 20000
MTX	20000
Multitech	20039, 20000
NAD	20240, 20104, 20058
NEC	20104, 20067, 20041
Nikko	20037
Nikkodo	20037
Nishi	20240
Niveus Media	21972
Noblex	20240
Northgate	21972
Olympus	20035, 20162, 20104
Onkyo	20222
Optimus	21062, 20035, 20162, 20037, 20048, 20047, 20240, 20000, 20104, 20062, 20058, 20432, 20454, 20568, 20593, 20619, 21048, 21162, 21262
Optonica	20062
Orion	20184, 20240, 20000, 20104, 20121, 20209, 20002, 20479, 21479
Panama	20035
Panasonic	21062, 20035, 20162, 20000, 20225, 20454, 20614, 20616, 21035, 21162, 21262
Penney	20035, 20162, 20037, 20047, 20081, 20240, 20000, 20042, 20067, 21035, 21237
Pentax	20042
Philco	20035, 20081, 20000, 20209, 20479
Philips	20035, 20162, 20048, 20081, 20045, 20000, 20209, 20062, 20616, 20618, 20739, 21081, 21181

Video - VCR (V) Continued	
Pilot	20037
Pioneer	20162, 20081, 20042, 20067, 20058
Polk Audio	20081
Presidian	21593
Profitronic	20240
Proscan	20060, 20202, 21060
Protec	20000
Pulsar	20039, 20240
Pulser	20240
Quarter	20046
Quartz	20035, 20047, 20046
Quasar	20035, 20162, 20002, 20454, 21035, 21162
RadioShack	20035, 20162, 20037, 20048, 20047, 20240, 20000, 20104, 20046, 20062, 20066, 20268, 20299, 21037, 21162
Radix	20037
Randex	20037
RCA	20060, 20035, 20048, 20240, 20045, 20000, 20042, 20149, 20058, 20202, 20619, 20807, 20880, 21035, 21060
Realistic	20035, 20162, 20037, 20048, 20047, 20240, 20000, 20104, 20121, 20046, 20062, 20066, 20299, 21162
ReplayTV	20614, 20616
Ricavision	21972
Rio	21137
Runco	20039
Samsung	20060, 20240, 20045, 20000, 20432, 20739, 21014
Samtron	20240
Sanky	20048, 20039
Sansui	20240, 20000, 20067, 20209, 20041, 20002, 20479, 21479
Sanyo	20047, 20240, 20000, 20104, 20046, 20268, 20479
Scott	20184, 20045, 20121, 20043

Video - VCR (V) Continued	
Sears	20060, 20035, 20162, 20037, 20048, 20039, 20047, 20033, 20045, 20000, 20042, 20104, 20067, 20043, 20209, 20041, 20046, 20058, 20066, 21237
Sharp	20048, 20047, 20032, 20000, 20062, 20807, 20848
Shintom	20039, 20240, 20000
Shogun	20240
Siemens	20037, 20104
Signature	20060, 20035, 20037, 20048, 20000, 20149, 20046, 20066, 20479
Singer	20037, 20240
Sonic Blue	20614, 20616, 21137
Sonographe	20046
Sony	20035, 20047, 20032, 20033, 20000, 20067, 20046, 20636, 21032, 21232, 21972
Soundmaster	20000
Stack 9	21972
STS	20042
SV2000	20000
SVA	20000
Sylvania	20035, 20081, 20000, 20043, 20593, 21593, 21781
Symphonic	20240, 20000, 20002, 20593, 21593
Systemax	21972
Tagar Systems	21972
Tandy	20000, 20104
Tatung	20048, 20081, 20000, 20067, 20041
Teac	20000, 20067, 20041
Technics	20035, 20162, 20037, 20000
Teknika	20035, 20037, 20000
Telecorder	20240
Telefunken	20041
Tevion	20479
Thomas	20000, 20002
Thomson	20060, 20041, 20202

Video - VCR (V) Continued	
Tivo	20618, 20636, 20739, 21996
TMK	20240, 20000
TNIX	20037
Tocom	20240
Toshiba	20240, 20045, 20000, 20043, 20209, 20041, 20062, 20066, 20845, 21008, 21145, 21972, 21996
Totevision	20037, 20240
Touch	21972
Trix	20037
Ultra	20045
Unitech	20240
Vector	20045
Vector Research	20184
Victor	20067, 20041
Video Concepts	20045
Videomagic	20037
Videosonic	20240, 20000
Viewsonic	21972
Villain	20000
Voodoo	21972
Wards	20060, 20035, 20037, 20048, 20047, 20081, 20033, 20240, 20045, 20000, 20042, 20043, 20041, 20149, 20046, 20058, 20062, 20479
Wharfedale	20593
White Westinghouse	20000, 20209, 20479
World	20209, 20002, 20479
XR-1000	20035, 20240, 20000
Yamaha	20041
Zenith	20037, 20039, 20033, 20000, 20209, 20041, 20479, 21137, 21139, 21479
ZT Group	21972

Setup Codes For Video - DVD (Y)

Códigos de configuración para reproductores de DVD

Brand	Codes
3D LAB	20503, 20539
Accurian	20675, 20677, 20678, 20757, 20814, 20858, 21072, 21416, 21737
Aiwa	20641
Akai	20143, 20695, 20705, 20899
Alba	20672, 20717
Allegro	20869
Anam	21913
Apex Digital	20533, 20672, 20717, 20795, 20830, 21020, 21061
Arrgo	21023
Aspire Digital	21407
Audiovox	20717, 21071, 21072, 21121, 21122
Axion	21071, 21072
Blaupunkt	20717
Blue Parade	20571
Blue Sky	20695
Broksonic	20695, 20868
California Audio Labs	20490
Celestial	21020
Centrex	20672
Cinea	20831
Cinego	21399
CineVision	20876, 20833, 20869
Citizen	21003, 20695
Clairtone	20571
Coby	20778, 21086, 21107
Craig	20831
Creative	20503, 20539
CyberHome	20816, 20874, 21019, 21023, 21024
Cytron	20705
Daewoo	20784, 20705, 20833, 20869, 21169, 21172, 21234, 21242
Denon	20490, 20634
Denver	20778

Video - DVD (Y) Continued	
Desay	21407
DigitalMax	21738
Digitrex	20672
Disney	20675, 21270
DiViDo	20705
Dual	20675, 21068, 21085
Durabrand	21127
DVD2000	20521
Electrohome	21003
Emerson	20591, 20675, 20821, 21268
Enterprise	20591
Entivo	20503, 20539
ESA	20821, 21268
Funai	20675, 21268, 21334
Gateway	21158
GE	20522, 20815, 20717
Go Video	20573, 20744, 20717, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304
Go Vision	21071, 21072
GoldStar	20741, 20869
Gradiente	20490
Greenhill	20717
Grundig	20539, 20705
Hello Kitty	20831
Hitachi	20573, 20664, 21247
Hiteker	20672
iLo	21348
Initial	20717
Insignia	21268
Integra	20571, 20627
IRT	20783
JMB	20695
JVC	20558, 20623, 20867
Kenwood	20490, 20534
KLH	20717, 21020, 21149
Kloss	20533

Video - DVD (Y) Continued	
Koss	21061
Lasonic	20627
Lecson	21533
Lenoxx	21127
LG	20591, 20741, 20869
LiteOn	21058, 21158, 21416, 21738
Loewe	20741
Logix	20783
Magnasonic	20675
Magnavox	20503, 20539, 20646, 20675, 20821, 21268
Marantz	20503, 20539, 20675
McIntosh	21533
Memorex	20695, 20831, 21270
Microsoft	20522, 21708
Minato	20752
Mintek	20839, 20717
Mitsubishi	21521, 20521
NAD	20741
NEC	20785, 20869
Nesa	20717
NexxTech	21402
Norcent	21003, 21107
Onkyo	20503, 20627, 21769
Oppo	20575, 21525
Optimus	20571
Palsonic	20672
Panasonic	20503, 20490, 20571, 20703, 21362, 21462, 21490, 21641, 21762
Philco	20675, 20733, 20862
Philips	20503, 20539, 20646, 20675, 20854, 21260, 21267, 21354, 22056, 22084
PianoDisc	21024
Pioneer	20525, 20571, 20142, 20631
Polaroid	21020, 21061, 21086
Polk Audio	20539
Presidian	20675, 21072, 21738

Video - DVD (Y) Continued	
Proceed	20672
Proscan	20522
ProVision	20778
Radionette	20741
RadioShack	20571
RCA	20522, 20571, 20717, 20822, 21022, 21132, 21769, 21913, 21974
Realistic	20571
Reoc	20752
Rio	20869
Rotel	20623
Saba	21977
Sampo	20752
Samsung	20490, 20573, 20744, 20199, 20820, 20899, 21044, 21075
Sansui	20695
Sanyo	20675, 20695, 20873, 21334
Schneider	20783
Schwaiger	20752
Sensory Science	21158
Sharp	20630, 20675, 20752, 21256
Shinsonic	20533, 20839
Slim Art	20784
Sonic Blue	20573, 20715, 20783, 20869, 21099
Sony	20533, 21533, 20864, 20772, 21033, 21431, 21516
Sova	21122
Superscan	20821
SVA	20717
Sylvania	20675, 20821, 21268
Symphonic	20675, 20821, 21268, 21334
Teac	20571, 20717
Technics	20490, 20703
Theta Digital	20571
Thomson	20522

Video - DVD (Y) Continued	
Toshiba	20503, 20573, 20539, 20695, 21045, 21154, 21510, 21515, 21606, 21769
Universum	20591
Urban Concepts	20503, 20539
US Logic	20839
V	21064, 21226
Vizio	21064, 21226
Xbox	20522, 21708
Yamaha	20490, 20539, 20545
Zenith	20503, 20591, 20741, 20869
Zeus	20784

Notes

Notes

Limited 90-day Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. For complete warranty details and exclusions, check with your local **RadioShack** store.

RadioShack Customer Relations
300 RadioShack Circle,
Fort Worth, TX 76102

04/04

15-133
Printed in China
11A07

©2007. **RadioShack** Corporation.

All rights reserved. **RadioShack** and **RadioShack.com** are trademarks used by **RadioShack** Corporation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>