



49-1010

Campus Security Kit

doorstop alarm



trigger anchor

window alarm



UV proof window decals (2)



keychain alarm with light



double-sided adhesive tape (1)



Thank you for purchasing your Campus Security Kit from RadioShack.

what's included

doorstop alarm

keychain alarm

window alarm

UV proof window decals (2)

double-sided adhesive tape (1)

using your doorstop alarm

The door stop alarm is for indoor use only.



ON/OFF

1. Remove battery compartment cover, and insert one 9V battery (not supplied) as shown. Slide **ON/OFF** to **ON**.

2. Insert the alarm at the base of your door, making sure the non-skid pad on the bottom of the alarm is in firm contact with the floor. When the door is opened, the alarm's metal plate is depressed, which presses down the trigger anchor and sounds the alarm.



3. To silence the doorstop alarm, turn it **OFF**.
4. Press down on the metal wedge so that it is positioned where it will depress the trigger anchor.

using your window alarm

Your window alarm comes with four LR44 button-cell batteries installed. Before use, test the batteries as follows:

1. Slide to **Lo** or **Hi**.
2. Push this button. If the red LED lights, the batteries are good. If the LED does not light, replace the
3. Slide off the battery cover to replace the batteries.



Mounting your Alarm

1. Mount your window alarm indoors, on a window pane.
2. Apply the supplied adhesive tape onto a window pane, with the side labeled "ACTIVE" facing outside for external visibility. Then, firmly press the window alarm onto the adhesive tape.
3. Slide to **Hi** or **Lo** to arm. **Hi** provides more sensitivity for a larger area; **Lo** is suitable for use in a smaller area.
4. Apply the UV proof window decal on the window.
5. Slide to **OFF** to disarm the unit.

Please read this user's guide before installing, setting up and using your new product

www.radioshack.com


using your keychain alarm

Your keychain alarm comes with three LR44 button-cell batteries installed. If the alarm stops working, grasp and remove the cover to replace the batteries.



1. Grasp the keychain and pull the chain to remove the pin. This sounds the alarm.

2. Re-insert the pin to silence the alarm.

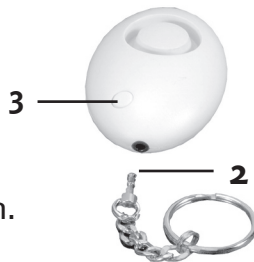

3. To turn on the light, hold down this button.

specifications

Power Source:

Door Stop Alarm One 9V Battery

Window Alarm 4 LR44 Button-Cell Batteries

Keychain Alarm 3 LR44 Button-Cell Batteries

Operation Voltage:

Door Stop Alarm 9V (7V Min.)

Window Alarm 6V (4.5V Min.)

Keychain Alarm 4.5V (3V Min.)

Operating Temperature 32°F to 113°F
(0°C to 45°C)

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
12/99

battery notes

Warning: Keep away from small children. If swallowed, promptly see doctor.

Dispose of old batteries promptly and properly.

Do not burn or bury batteries.

Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Use only fresh batteries of the required size and recommended type.

If you do not plan to use the alarm for several weeks, remove the batteries. Batteries can leak chemicals that can damage electronic parts.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>