

Thank you for your purchasing the RadioShack Thermometer Watch. It functions as a watch with dual timekeeping, alarm, timer, stopwatch, and thermometer.

OPERATION

Remove the protective film from the display before use. To view the display in the dark, press **SPLIT/RESET**. The backlight turns on for about three seconds.

SETTING THE TIME AND TEMPERATURE

1. Repeatedly press **MODE** until the time, day, and date appear. ✓
2. Press **ADJUST**. The second digits flash. ✓
3. Press **ST./STP.** to reset the seconds to zero.
4. Repeatedly press **MODE** to set the hour, minutes, year, month, date, and temperature (Celsius versus Fahrenheit), then repeatedly press and hold down **ST./STP.** to set the digits as desired. ✓
5. Press **ADJUST** when you are finished setting the time.



Current Time Mode



Dual Time Mode

7. Repeat steps 5 and 6 to preset a date for the alarm if desired.
8. Press **ADJUST** when you are finished setting the alarm. The alarm sounds about 20 seconds at the set time. ✓

SETTING THE DUAL TIME

This feature allows you to view time for a city in another time zone. The time shown on the upper half of the display is the current local time; the time on the lower half of the display is the dual time. If you do not press a button within two minutes, the watch returns to dual time mode.

 
1. Press **MODE** until **DT** appears.
2. Press **ADJUST**. The hour digits flash.
3. Repeatedly press or hold down **ST./STP.** to set the hour. ✓
4. Press **MODE** to confirm.
5. Repeat steps 3 and 4 to set the minutes.
6. Press **ADJUST** when you are finished setting the dual time.

USING THE TIMER AND STOPWATCH

In Timer Mode

The timer function enables you to set a time to count down from (up to 23 hours, 59 minutes, 59 seconds). If you do not press a button within two minutes, the watch returns to timer mode.

1. Repeatedly press **MODE** until **T'R** appears.
2. Press **ADJUST**. The hour digits flash.
3. Repeatedly press **ST./STP.** to change the selected digits to your desired setting.
4. Repeatedly press **MODE** to select the minutes and seconds. ✓
5. Press **ADJUST** to exit.
6. Press **ST./STP.** to start your timer. To stop the timer, press **ST./STP.** again.




Timer Mode

SETTING THE ALARM

You can set the alarm to sound daily at a preset time, or on a specified date at a preset time. If you do not press a button within two minutes, the watch returns to alarm mode.

 1. Repeatedly press **MODE** until **AL** appears.
2. Repeatedly press **SPLIT/RESET** to turn on or off the alarm or hourly chime. **AL** appears for the alarm, **AL** appears for the hourly chime. When the hourly chime is on, the watch beeps twice every hour on the hour.
3. Press **ADJUST**. The alarm hour flashes.
4. Repeatedly press or hold down **ST./STP.** to set the alarm hour.
5. Press **MODE** to confirm.
6. Repeatedly press or hold down **ST./STP.** to set the alarm minutes.



Alarm Time Mode

NOTE

Setting the Time and Temperature

- Press **ST./STP.** to toggle between day and temperature.
- When you enter setting mode, the weekday or temperature display changes to year.
- Repeatedly press **SPLIT/RESET** while in time setting mode to select 12- or 24-hour time format. **PM** appears for a PM hour in 12-hour time, **24H** appears for 24-hour time.
- You can set the year from 1985 to 2029.
- For the most accurate temperature readings, keep your watch away from warm surfaces.
- If you do not press a button within about two minutes while in time/temperature setting mode, the clock returns to time mode.

Setting the Alarm

The alarm sounds for about 20 seconds at the set time. Press any button to silence the alarm.

Setting the Dual Time

Repeatedly press **SPLIT/RESET** to select 12- or 24-hour time format.

Using the Timer and Stopwatch

- In setting mode, press **SPLIT/RESET** to toggle between normal counting and repeated counting. Normal counting begins from the time you set, and counts down to zero. Repeated counting begins from the time you set, counts down to zero, then repeats the countdown sequence. **AUTO** appears on the display when in repeated counting mode.
- If **00:00:00** appears on the display, the clock will count down from 23:59:59 automatically after you press **ST./STP.**

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

✓ — Note

- To reset your timer to your set time, press **SPLIT/RESET** after you stop the timer. ☑

In Stopwatch Mode

The stopwatch function enables you to count time up to 23 hours, 59 minutes, 59 seconds.

- Repeatedly press **MODE** until **ST** appears.




- Press **ST/STP.** to start the stopwatch. To stop, press **ST/STP.** again. The elapsed time appears on the display.

- To split the stopwatch, press **SPLIT/RESET** when the stopwatch is running. ☑

- To reset the stopwatch, press **ST/STP.** Then press **SPLIT/RESET.**

- Remove the insulation sheet from the battery.
- Use a pointed object, such as tweezers, to unlock the battery plate and remove the old battery.
- With the watch face down, place a new battery in the compartment with its positive (+) side face up.

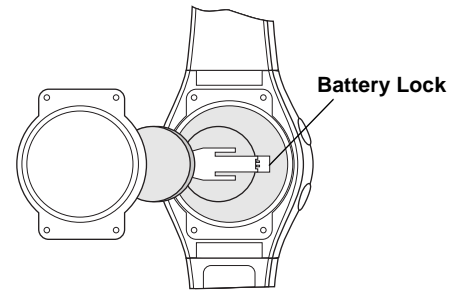

- Replace the battery plate and insulation sheet.
- Secure the back cover with the screws.

CARE

Keep the watch dry; if it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

REPLACING THE BATTERY

Your watch comes with one CR2032 battery for power. You can take your watch to a RadioShack store for battery replacement. ☑

- Use a Philips screwdriver to remove the four screws from the back of the watch. Then remove the cover.

SPECIFICATIONS

Power	1 x CR2032 (supplied)
Battery Life	About 2 years
Water Resistance	100 M
Thermometer Range	15.8°F to 158°F -9°C to 70°C
Thermometer Resolution	1°F (1°C)
Thermometer Accuracy:	
32°F to 104°F (0°C to 40°C)	±2°F (1°C)
Other Range	±4°F(2°C)

Specifications are typical; individual units might vary. Specifications are subject to change and improve without notice.

NOTE

- When you split the stopwatch, the time at which you presses **SPLIT/RESET** remains on the display. The stopwatch continues counting internally. Press **SPLIT/RESET** again to view the the current countup time.
- OH** on the upper display represents the stopwatch hour.

BATTERY NOTES

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only a fresh battery of the required size and recommended type.
- If you do not plan to use the watch for several weeks, remove the battery. Batteries can leak chemicals that can damage electronic parts.
- Replacing the battery resets the watch.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>