

RCA

Universal
Remote
Control

RCU4GLW

NITEgloTM
LIGHTS UP **for** NIGHT USE



This Universal Remote Control is compatible with most models of infrared controlled Televisions, VCRs and Cable Boxes manufactured after 1989. Please retain this guide for future reference.

TABLE OF CONTENTS

Button Description.....	2-3
Battery Installation.....	3
Programming Your Universal Remote	
TV.....	4
TV Codes.....	4-5
VCR.....	6
VCR Codes.....	6-7
Cable Box.....	8
Cable Box Codes.....	9
AUX.....	10
Code Search.....	11
Code Retrieval.....	11
Sleep Feature	12
NiteGlo Feature.....	12
Trouble Shooting.....	13
Helpline.....	13
Additional Accessories.....	14
Warranty.....	Inside Card

NiteGlo is a trademark of
Thomson Consumer Electronics

IJ1146-Z Rev 12.96

Button Description

CODE SEARCH
Used to program the remote or to search through codes.

SLEEP
The SLEEP button allows you to set a time to turn off the TV automatically.

 
0-9
The number buttons operate the same as on your original remote, and are used for entering device codes.

INDICATOR LIGHT
The light flashes red to show that the remote is working.

TV, VCR, CABLE, AUX
The TV, VCR, CABLE and AUX buttons are used to select the device you want to control.

REW, PLAY, FWD, REC, STOP, PAUSE
The REW (Rewind), PLAY, FWD (Fast Forward), REC (Record), STOP, and PAUSE buttons operate the same as on your original VCR or remote. **You must press the REC button twice to begin recording.**

TV•VCR
The TV•VCR button operates the TV•VCR function of your VCR.

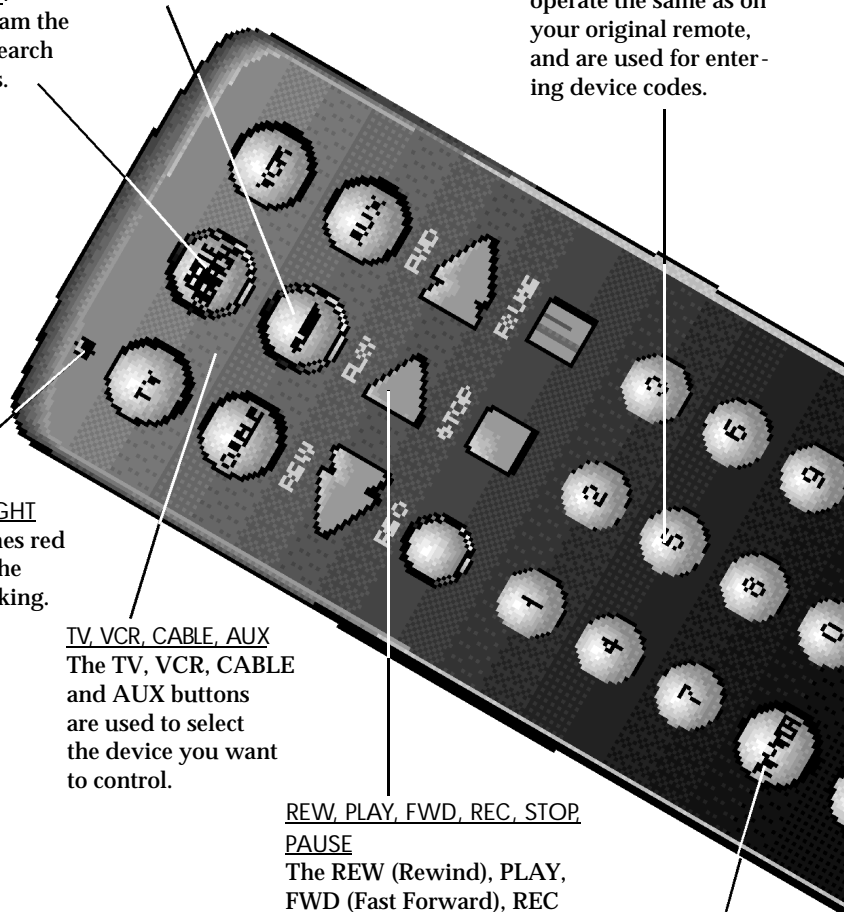

Button Description

ENTER

The ENTER button operates the same as on your original remote.

PRE CH

The PRE CH (Previous Channel) button operates the same as on your original remote.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons operate the same as on your original remote.

MUTE

The MUTE button operates the same as on your original remote.

POWER

 
The POWER button operates the same as your original remote (note: some RCA, GE and Proscan models require you to press the device key to turn the device on and the power key to turn the device off).

Battery Installation

Your remote requires four (4) new AAAalkaline batteries. To install the batteries:

1. Turn the remote over and push down on the arrow and slide the cover off.
2. Insert the batteries, matching the battery to the + and - marks inside the battery case.
3. Press the battery cover back into place.

Note: Removing the batteries may require you to reprogram the unit.

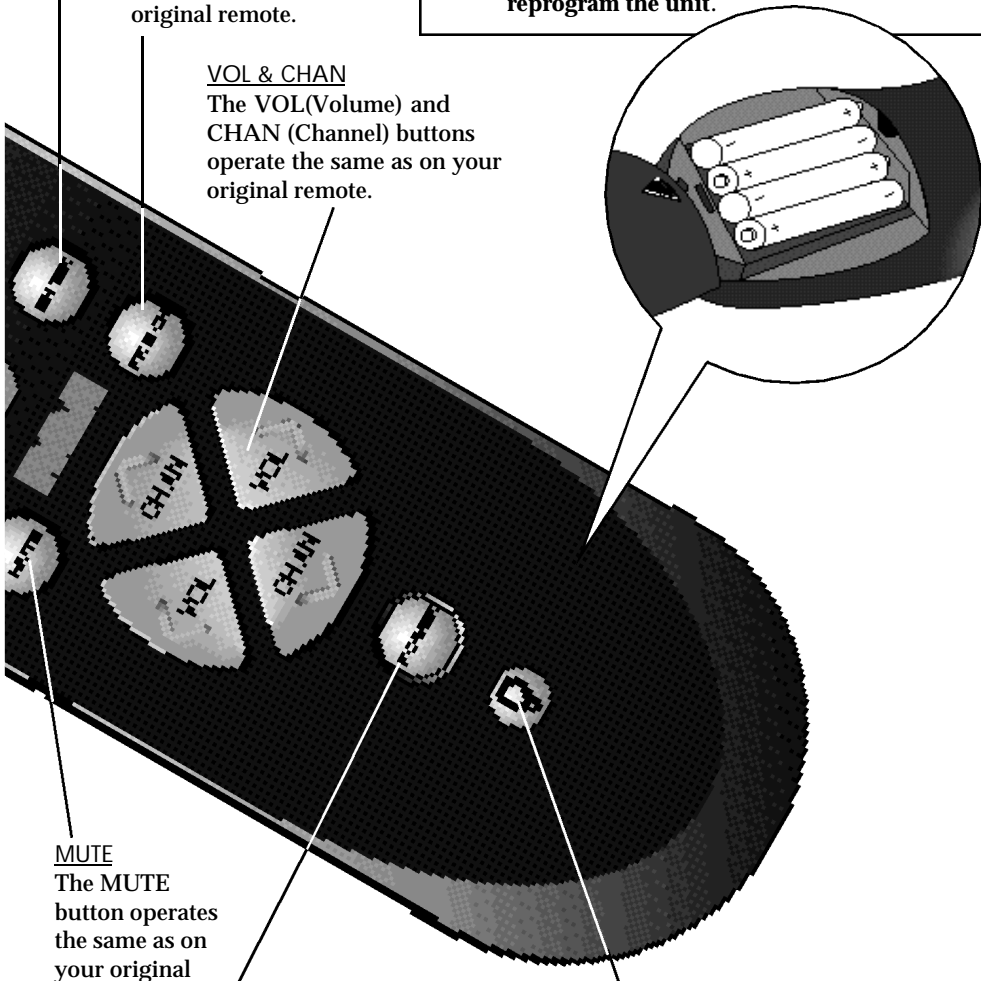

LIGHTBULB

The LIGHTBULB button is used to control lighting the keypad and conserving battery power. Press the button and hold until the remote lights up. The remote will then light at the touch of any button. To turn off the feature, press the LIGHTBULB button a second time.

Programming Your Universal Remote For TV

 
1. Manually turn on the TV.
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **TV** button (the **INDICATOR LIGHT** will blink then remain lit).



4. Find the three digit code for your TV in the code list starting below and enter it using the Number Buttons.

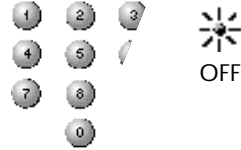

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your TV and press the **POWER** button. Your TV should turn off.



Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your TV on, press **CHANNEL UP**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.

TV CODE

--	--	--

TV Code List

Abex.....	172	Curtis Mathes.....	000, 004, 006, 015
Admiral.....	001, 173		105, 162, 171
Adventura.....	174	CXC	038
Aiko	016	Daewoo.....	004, 005, 006, 016, 017
Alleron.....	046		018, 126, 127, 171
Amtron	038	Daytron.....	004, 006, 171
Akai	002	Dimensia.....	000
Anam National.....	003, 038	Dumont.....	004, 151
AOC.....	004, 005, 006	Dynatech.....	178
	007, 175, 176	Electroband.....	002, 176
Audiovox	038	Electrohome	003, 004, 006
Belcor.....	004		019, 020, 021, 022
Bell & Howell.....	001, 083, 162	Emerson	004, 006, 012, 014, 023, 024
Bradford	038		025, 026, 027, 028, 029, 030
Brokwood	004		031, 032, 033, 034, 035, 036
Candle.....	004, 006, 008, 174		037, 038, 039, 040, 041, 042
Capehart	175		043, 044, 045, 046, 047, 123
Celebrity	002		124, 162, 163, 171, 176, 177, 179
Centurion	009	Envision.....	004, 006
Citizen.....	004, 006, 008, 016, 038	Fisher.....	048, 049, 050, 051, 162, 180
	105, 171, 174, 177	Fujitsu	046
Clairtone	176	Funai	038, 046
Colortyme.....	004, 006, 010	Futuretec	038
Concerto	004, 006	GE	000, 003, 004, 006
Contec/Cony	011, 012		022, 052, 053, 054
	013, 014, 038, 176		055, 087, 163, 164
Craig	038		165, 166, 167, 168, 181
Crown	038, 171	Gibraltar	004, 151

TV Code List Continued

Goldstar	004, 005, 006, 012, 019, 056 057, 058, 155, 156, 171, 172	Price Club	105
Grundy	038, 046, 171	Prism	054
Hallmark	004, 006	ProScan	000, 181
Harvard	038	Proton	004, 006, 012, 093, 186, 175
Hitachi.....	004, 006, 011, 012, 013, 053 059, 060, 061, 135, 136, 137 138, 139, 140, 141, 142, 143 144, 145, 146, 147, 148, 150, 179	Pulsar.....	151
IMA	038	Pulser.....	004
Infinity.....	062	Quasar.....	003, 054, 070, 094
Janeil	174	Radio Shack	000, 004, 006, 011, 012 038, 049, 095, 162, 171, 172
JBL	062	Realistic.....	000, 004, 006, 011, 012 038, 049, 095, 162, 171, 172
JCB	002	RCA.....	000, 003, 004, 005, 006, 007 019, 096, 098, 099, 100, 101 102, 103, 129, 179, 181, 187, 188
JC Penny.....	000, 004, 005, 006, 008, 022 052, 054, 058, 063, 064, 072 087, 105, 128, 171, 172, 181	Rhapsody	176
Jensen.....	004, 006	Runco.....	151
JVC.....	011, 012, 013, 054, 060, 065, 066 067, 089, 157, 158, 159, 182	Sampo	004, 006, 171, 172, 175
Kawasho	002, 004, 006	Samsung	004, 005, 006, 011, 012 015, 019, 020, 104, 105 106, 171, 172
Kaypani.....	175	Samsux	171
Kenwood.....	004, 006, 019, 020	Sanyo.....	004, 048, 049, 050, 080, 107 108, 162, 169, 180
Kloss Novabeam	068, 069, 174, 183	Scotch.....	006
KTV	038, 070, 171, 176, 177	Scott.....	004, 006, 012, 024, 035, 038, 046
Loewe	062	Sears	000, 004, 006, 013, 019, 020 046, 048, 049, 050, 051, 066, 071 072, 109, 110, 162, 180, 181, 189
Logik	083	Sharp	004, 006, 012, 029, 095, 111 112, 113, 114, 122, 171, 173
Luxman.....	004, 006	Shogun.....	004
LXI.....	000, 006, 049, 062, 071, 072 073, 162, 181	Signature	001, 083, 115
Megatron.....	006, 059	Simpson.....	008
Magnavox.....	004, 006, 008, 019, 062, 068 069, 074, 075, 076, 077, 088 089, 130, 131, 132, 133, 134, 183, 184	Sonic.....	176
Majestic	083	Sony.....	002
Marants	062	Soundesign.....	004, 006, 008, 038, 046
Marantz.....	004, 006, 062, 078	Squareview.....	189
MEI.....	176	SSS	004, 038
Memorex.....	001, 006, 082, 083, 162	Starlite	038
MGA	004, 005, 006, 019, 020, 021 022, 051, 079, 080, 082	Supre-Macy.....	174
Midland	054, 151, 171, 172, 181	Supreme	002
Minutz.....	052	Sylvania	004, 006, 008, 019, 062, 068 069, 074, 075, 076, 077, 088 116, 161, 183, 184
Mitsubishi.....	004, 005, 006, 019, 020 021, 022, 051, 079, 080 081, 082, 082, 125	Symphonic	033, 038, 189
Montgomery Ward	083	Tandy.....	173
Motorola	003, 173	Tatung	003, 178
MTC.....	004, 005, 006, 105, 176, 178	Technics.....	054
Multitech.....	038, 178	Techwood	004, 006, 054
Multivision	084	Teknika	004, 005, 006, 008, 012 013, 016, 038, 046, 076, 082 083, 105, 170, 171
NAD	006, 071, 072, 185	Telecaption	117
NEC.....	003, 004, 005, 006, 020, 085, 089	Tera.....	186
Nikko.....	006, 016	TMK.....	004, 006
NTC	016	Toshiba	049, 071, 072, 089, 105 109, 117, 118, 160, 162
Onwa.....	038	Totevision	171
Optimus.....	185	Universal.....	052, 053, 087
Optonica	095, 173	Victor.....	066, 182
Orion	035	Vidtech	004, 005, 006
Panasonic	003, 054, 062, 170	Viking	174
Philco.....	003, 004, 005, 006, 008 012, 019, 062, 068, 069 074, 075, 077, 183, 184	Wards	000, 001, 004, 005, 006, 019 024, 033, 046, 052, 053, 062 068, 069, 074, 075, 076, 083 087, 088, 095, 119, 120, 184
Philips.....	003, 004, 008, 012, 019, 046 047, 062, 068, 069, 074, 075 076, 086, 087, 088, 089	Yamaha	004, 005, 006, 019, 020
Pilot	004, 171	Zenith	083, 121, 151, 152, 153, 154
Pioneer	004, 006, 090, 091, 092, 179, 185		
Portland	004, 005, 006, 016, 171		

Programming Your Universal Remote For VCR

1. Manually turn on the VCR.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **VCR** button (the **INDICATOR LIGHT** will blink then remain lit).



4. Find the three digit code for your VCR in the code list starting below and enter it using the Number Buttons.

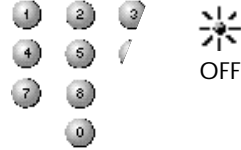

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your VCR and press the **POWER** button. Your VCR should turn off.



Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your VCR on, press **CHANNEL UP**. If the VCR responds, no further programming is required.



7. Enter your code here for easy reference.

VCR CODE

--	--	--

VCR Code List

Admiral.....	001	Craig	013, 014, 023, 061
Adventura.....	026	Curtis-Mathes	000, 002, 009, 013, 016
Aiko	027		018, 021, 022, 024, 115
Aiwa	002, 026	Cybernex.....	013
Akai.....	003, 004, 005, 006, 007	Daewoo.....	015, 017, 019, 025
	008, 111, 112, 113		026, 027, 028, 110
American High.....	021	Daytron	110
Asha.....	013	DBX	009, 010
Audio Dynamics	009, 010	Dimensia.....	000
Audiovox	014	Dynatech.....	002, 026
Bell & Howell.....	011	Electrohome	014, 029
Beaumarck	013	Electroponic	014
Broksonic.....	012, 025	Emerson	002, 006, 012, 014, 015
Calix.....	014		021, 024, 025, 026, 029, 030
Candle.....	013, 014, 015, 016		031, 032, 033, 034, 035, 036
	017, 018, 019		037, 038, 039, 040, 041, 042
Canon.....	021, 022, 114		043, 044, 045, 046, 047, 065
Capehart	020, 110		105, 113, 116, 117
Carver	062	Fisher.....	011, 023, 048, 049
CCE	027, 061		050, 051, 052, 118
Citizen.....	013, 014, 015, 016	Fuji	021, 119
	017, 018, 019, 027	Funai	002, 026
Colortyme.....	009	Garrard	026
Colt.....	061		

VCR Code List Continued

GE	000, 013, 021, 022 053, 115, 120	RCA.....	000, 003, 013, 021, 055, 056, 082 083, 084, 085, 086, 087, 088, 089 090, 091, 107, 115, 120, 125
Goldstar	009, 014, 018, 054, 121	Radio Shack	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096
Gradiente	026	Realistic.....	001, 002, 011, 013, 014, 021 022, 023, 026, 029, 049, 050, 096
Harley Davidson	026	Radix	014
Harman Kardon.....	009, 068	Randex.....	014
Harwood.....	061	Ricoh	128
Headquarter	011	Runco.....	104
Hitachi.....	002, 055, 056, 057 107, 111, 120, 122	Samsung	005, 013, 015, 033, 053, 112
HI-Q.....	023	Sanky.....	001, 104
Instant Replay	021	Sansui.....	010, 092, 111, 123
JCL	021	Sanyo.....	011, 013, 023
JC Penney	009, 010, 011, 013, 014 021, 022, 055, 056, 058 059, 060, 107, 118	Scott.....	012, 015, 025, 032, 038 065, 093, 116
Jensen.....	111	Sears.....	011, 014, 021, 023, 048, 049 050, 051, 055, 056, 107, 118
JVC.....	009, 010, 011, 018, 058, 111, 123	Sharp.....	001, 002, 017, 029, 094, 095, 096
Kenwood.....	009, 010, 011, 016 018, 058, 111, 123	Shintom.....	004, 056, 061, 098
KLH	061	Shogun.....	013
Kodak	014, 021	Signature	002
Lloyd	002, 026	Singer.....	021, 061
Logik	061	Sony.....	004, 098, 099, 119, 128
LXI	014	STS	021, 107
Magnavox.....	021, 022, 062, 063 104, 108, 124	Sylvania.....	002, 021, 022, 026 062, 063, 065, 124
Magnin	013	Symphonic	002, 026
Marantz.....	009, 010, 011, 016, 018 021, 058, 062, 064	Tandy.....	002, 011
Marta	014	Tashiko.....	014
Masushita	021	Tatung	058, 111
MEI.....	021	Teac	002, 026, 058, 085, 111
Memorex.....	001, 002, 011, 013, 014 021, 023, 026, 104	Technics.....	021, 109
MGA	029, 065, 113	Teknika	002, 014, 021, 100, 129, 026
MGN Technology.....	013	Toshiba	015, 049, 051, 055 065, 093, 116
Midland.....	053	Totevsiion.....	013, 014
Minolta.....	055, 056, 107	TMK.....	013, 024, 047
Mitsubishi.....	029, 055, 056, 065, 066 067, 068, 069, 070, 071 072, 073, 074, 106, 113, 123	Unitech	013
Montgomery Ward	001, 075	Vector Research	009, 010, 015, 016
Motorola	001, 021	Victor	010
MTC.....	002, 013, 026	Video Concepts	009, 010, 015, 016, 113
Multitech.....	002, 013, 026, 053, 061	Videosonic.....	013
NEC.....	009, 010, 011, 016, 018 058, 064, 076, 077, 078 079, 111, 123	Wards	001, 002, 013, 014, 015, 021 023, 026, 029, 055, 056, 061 096, 101, 102, 103, 107, 116
Nikko.....	014	XR-1000.....	021, 026, 061
Noblex.....	013	Yamaha	009, 010, 011, 018, 058, 111
Olympus	021	Zenith	004, 098, 104, 119, 128
Optimus	001, 014		
Optonica	096		
Panasonic	021, 022, 109, 125, 126, 127		
Pentax	016, 055, 056, 016, 107, 120		
Pentex research.....	018		
Philco.....	021, 022, 062, 063		
Philips	021, 062, 096, 124		
Pilot	014		
Pioneer	010, 055, 080, 081, 123		
Portland.....	016, 017, 019, 110		
ProScan	000		
Protec.....	061		
Pulsar.....	104		
Quarter	011		
Quartz	011		
Quasar.....	021, 022, 125		

Programming Your Universal Remote For Cable Box

1. Manually turn on the Cable Box.
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **CABLE** button (the **INDICATOR LIGHT** will blink then remain lit).



BLINK/ON

4. Find the three digit code for your Cable Box in the code list starting on the following page and enter it using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.



OFF

5. Aim the remote at your Cable Box and press the **POWER** button. Your Cable Box should turn off.



Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

6. With your Cable Box on, press **CHANNEL UP**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

CABLE BOX CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

Cable Box Code List

ABC.....	001, 002, 003, 004 005, 006, 007
Antronix	008, 009
Archer.....	008, 009, 010, 011
Cabletenna	008
Cableview.....	008
Century.....	011
Citizen.....	011
Colour Voice.....	012, 013
Comtronics.....	014, 015
Contec.....	016
Eastern	017
Garrard	011
GC Electronics.....	009
Gemini.....	018, 019
General Instrument.....	003
Hamlin	020, 021, 022, 035
Hitachi.....	003
Hytex.....	002
Jasco.....	011
Jerrold.....	001, 003, 005, 007 018, 023, 024
Magnavox.....	025
Memorex.....	026
Movie Time	002, 027
NSC.....	002, 027
OAK	002, 016, 029
Panasonic	000, 048
Paragon.....	026
Philips.....	011, 012, 013, 019, 025 030, 031, 032
Pioneer	033, 034
Pulsar	026
RCA.....	000, 047
Realistic.....	009
Regal	022, 035
Regency.....	017
Rembrandt	003
Runco	026
Samsung.....	014, 034
Scientific Atlanta.....	006, 036, 037, 038
Signal.....	014, 018
Signature.....	003
SLMarx.....	014
Sprucer	000
Standard Components	039
Starcom.....	001, 007, 018
Stargate.....	014, 018
Starquest.....	018
Tandy.....	040
Televue	014
Texscan	039
Tocom	004, 023, 041
Toshiba	026
TUSA.....	018
TV86	027
Unika.....	008, 009, 011
United Artists.....	002
United Cable	001
Universal	008, 009, 010, 011, 042
Videoway	044
Viewstar	015, 025, 027, 040
Zenith	026

The AUX Button

The AUX Button allows you to assign another TV, VCR or Cable Box to be controlled.

1. Manually turn on the the device you wish to assign to the AUX button (TV, VCR or Cable Box).
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.
3. Press and release the **AUX** button. The **INDICATOR LIGHT** will blink.
4. Press **TV**, **VCR** or **CAB** (depending on which device you wish to program). The **INDICATOR LIGHT** will blink again then remain lit.
5. Find the three digit code for the device you wish to program in the code list

<u>Device</u>	<u>Page</u>
TV.....	4-5
VCR	6-7
Cable Box	9

Enter the code using the **Number Buttons**.

After your code is entered, the **INDICATOR LIGHT** will turn off.



6. Aim the remote at your device and press the **POWER** button. Your device should turn off.

Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

7. With your device on, press **CHANNEL UP**. If the device responds, no further programming is required.
8. Enter your code here for easy reference.



AUX CODE		

Programming With Code Search

If your TV, VCR, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



3. Press and release the device button for the device you are programming (**TV**, **VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once.



For AUX, press **AUX** then the device button you are assigning to AUX.

4. Press and release **POWER** until your device turns off.



Important: You may have to press **POWER** up to 200 times.

5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will turn off.



Getting Codes From Your Universal Remote

If you need to find the three-digit code for your TV, VCR or Cable Box after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



2. Press and release the device button for the device's code you are retrieving (**TV**, **VCR** or **CABLE**). The **INDICATOR LIGHT** will blink once.



For AUX, press **AUX** then the device button for the code you are retrieving.

3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.



4. Starting with **0** on the keypad press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

6. Repeat step 4 until you have retrieved all three numbers in the code.

Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:

1. Press and hold the **SLEEP** button.
INDICATOR LIGHT will stay lit.

Release the **SLEEP** button.

2. Enter time in minutes using the numerical key pad.
(Minutes 1 thru 9: press **0** before the actual number - maximum: 99 minutes).



3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and the clock reset to zero by either of the following:

Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **POWER** button, turning TV OFF.



Niteglo Feature

The Lightbulb button is used to control lighting the keypad.

Press the **LIGHTBULB** button and hold until the remote lights up.



The entire keypad will light and go off after 5 seconds.

Every time a button is pressed the Keypad will light, and remain lit until the command is completed.

Do not press the lightbulb unless you want to completely deactivate the keypad light.

To deactivate the Keypad light press the **LIGHTBULB** button.

To save battery power, do not activate the NiteGlo feature when remote is used in well lit rooms.

Trouble Shooting

PROBLEM	SOLUTION
Red light not blinking when you press any key	A) Replace the batteries (with fresh, new AAA Alkaline batteries). B) Check that batteries are properly installed.
The RCU4GLW does not operate your devices	A) Try all the codes listed for your brand. B) Try the Code Search method (page 11).
Not performing commands properly	Start Code Search over again to locate the proper code for full compatibility.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCATV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a key	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 3.
Sleep feature does not work	Remote must remain aimed at television after SLEEP is set in order for it to work.

Reprogramming may be required after batteries are removed.

RCU4GLW Help Line

If you need additional set-up help, please call the RCU4GLW Helpline at:
1-800-316-8756

RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCAANT200. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8" H. X 8½" W. X 4½" D.



ANT200

 
\$49⁹⁵†

ANT140 Amplified FM Antenna

This RCA Amplified FM Antenna features a high-signal, low-noise amplifier that boosts FM Stereo for better reception even in remote areas. The slim profile and compact design (less than 10" high) make it the perfect complement to bookshelf receiver systems.

Features include:

- Red LED Brightens as Gain is Increased
- Combination Power/Gain control
- Special No-Scuff Pad
- UL Approved AC Adapter
- Measures 9½" H. X 3½" W. X 4" D.
- Hook-Up Accessories Included
- One-Year Limited Warranty

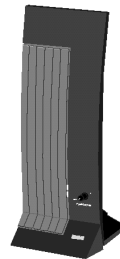

ANT140

\$19⁹⁵†

D918 Surge Protector Plus

Guard your vulnerable home theatre equipment against potential damage from power surges or other electrical disturbances. Power surges can enter and destroy your valuable equipment from many sources - cable, phone lines, satellite dishes or electrical connections.

Features include:

 
- 3-Way Surge Protection
- 8 Outlets plus Coaxial, Phone & AC Line
- \$10,000 Equipment Guarantee
- Lifetime Warranty




D918

\$69⁹⁵†

RCU940 Remote Control Signal Sender

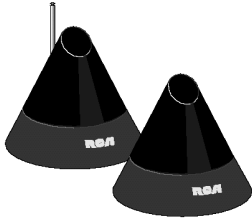

RCU940

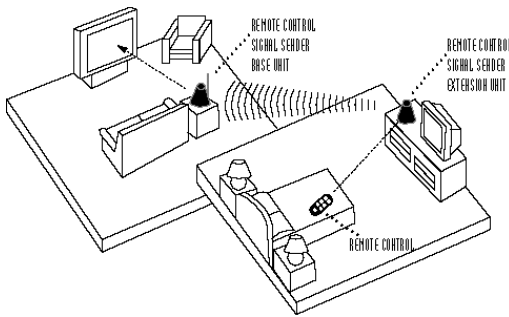 

The RCARemote Control Signal Sender allows you to control your Stereo, CD Player, Cable Box, Satellite Receiver, VCR or Laserdisc Player from anywhere in your home. It turns Infrared Signals (IR) into Radio Frequency (RF) to go through walls, floors, etc. Great for households with one VCR or Satellite Receiver to enable control of the unit from another room.*

Features include:

- Extends the range of your control up to 140ft.
- Each unit is only 4" tall
- Includes blaster that allows you to hide the unit in a cabinet
- One-Year Limited Warranty

* Remote Control Signal Sender only extends the range of the remote control. Device must be connected by cable.

\$59⁹⁵[†]

RCA Accessories

Description	Model #	Price	Qty.	Total
Amplified TV Antenna	ANT200	\$49.95		
Amplified FM Antenna	ANT140	\$19.95		
Digital Surge Protector Plus	D918	\$69.95		
Remote Control Signal Sender	RCU940	\$59.95		
Total Merchandise Order				
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Prices are subject to change without notice.

ORDERING BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. **This number should only be used to place orders for the above listed Accessories.**

1-800-338-0376

ORDERING BY MAIL:

Provide your name, address, phone number and a check or money order for the total amount due, and mail to:

**RCA Accessories
PO Box 8419
Ronks, PA 17573**

Include this completed form with your order.

[†]Shipping and handling will be added to all orders.

 
RCA Universal Remote Back-Lit Keypad

▼ **NITEGLO-LIGHT UP FEATURE:**
Entire keypad lights for easy viewing in dimly lit rooms by simply pressing the lightbulb button. Great for changing channels or adjusting volume without turning on the room lights.

▼ **UNIQUE SHAPE:**
Gives you 2 ways to hold remote and use.



Hold the end of the remote for TV operation.

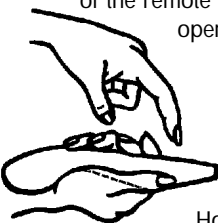

Hold the middle of the remote for VCR operation.

▼ **CODE SEARCH:**
Makes set-up easy. Scans the entire code library to find the right code for your TV, VCR, or Cable Box.

▼ **TOLL-FREE HELPLINE:**
A customer service representative is ready to answer your questions. See the instruction book for details.

Requires Four (4) AAA Batteries (Not Included)



THIS NITEGLO REMOTE CONTROL IS COMPATIBLE WITH MOST MODELS OF THE FOLLOWING BRANDS (with infrared controlled components manufactured after 1989):

TV			
Abex	Dimensia	Kloss Novabeam	Optonica
Admiral	Dumont	KTV	Orion
Adventura	Dynatech	Loewe	Panasonic
Aiko	Electroband	Logik	Philco
Alleron	Electrohome	Luxman	Philips
Amtron	Emerson	LXI	Pilot
Akai	Envision	Megatron	Pioneer
Anam National	Fisher	Magnavox	Portland
AOC	Fujitsu	Majestic	Price Club
Audiovox	Funai	Marantz	Prism
Belcor	Futuretec	Marantz	*ProScan
Bell & Howell	*GE	MEI	Proton
Bradford	Gibraltar	Memorex	Pulsar
Brookwood	Goldstar	MGA	Pulsar
Candle	Grundy	Midland	Quasar
Capehart	Hallmark	Minutz	Radio Shack/
Celebrity	Harvard	Mitsubishi	Realistic
Centurion	Hitachi	Montgomery	*RCA
Citizen	IMA	Ward	Rhapsody
Clairtone	Infinity	Motorola	Runco
Colortyme	Janeil	MTC	Sampo
Concerto	JBL	Multitech	Samsung
Contec/Cony	JCB	Multivision	Samsux
Craig	JC Penny	NIAD	Sanyo
Crown	Jensen	NEC	Scotch
Curtis Mathes	JVC	Nikko	Scott
CXC	Kawasho	NTC	Sears
Daewoo	Kaypani	Onwa	Sharp
Daytron	Kenwood	Optimus	Shogun

VCR			
Admiral	Dimensia	Lloyd	Pentax
Adventura	Dynatech	Logik	Pentax
Aiko	Electrohome	LXI	Research
Aiwa	Electrohome	Magnavox	Philco
Akai	Emerson	Magnin	Philips
American High	Fisher	Marantz	Pilot
Asha	Fuji	Marta	Pioneer
Audio	Funai	Masushita	Portland
Dynamics	Garrard	MEI	*ProScan
Audiovox	*GE	Memorex	Protec
Bell & Howell	Goldstar	MGA	Pulsar
Beaumarck	Gradiente	MGNV	Quarter
Broksonic	Harley	Technology	Quartz
Calix	Davidson	Midland	Quasar
Candle	Harman	Minolta	*RCA
Canon	Kardon	Mitsubishi	Radio Shack/
Capehart	Harwood	Montgomery	Realistic
Carver	Headquarter	Ward	Radix
CCE	Hitachi	Motorola	Randex
Citizen	HI-Q	MTC	Ricoh
Colortyme	Instant Replay	Multitech	Runco
Colt	JCL	NEC	Samsung
Craig	JC Penny	Nikko	Sanky
Curtis Mathes	Jensen	Noblex	Sansui
Cybernex	JVC	Olympus	Sanyo
Daewoo	Kenwood	Optimus	Scott
Daytron	KLH	Optonica	Sears
DBX	Kodak	Panasonic	Sharp
			Shintom
			Shogun
			Signature
			Singer
			Sony
			STS
			Sylvania
			Symphonic
			Tandy
			Tashiko
			Tatung
			Teac
			Technics
			Teknika
			Toshiba
			Totevision
			TMK
			Unitech
			Vector
			Research
			Victor
			Video Concepts
			Videoseonic
			Wards
			XR-1000
			Yamaha
			Zenith

CABLE BOX			
ABC	Gemini	Panasonic	Signal
Antronix	General	Paragon	Signature
Archer	Instrument	Philips	SI Mar x
Cabletenna	Hamlin	Pioneer	Sprucer
Cableview	Hitachi	Pulsar	Standard
Century	Hytex	*RCA	Components
Citizen	Jasco	Realistic	Starcom
Colour Voice	Jerrold	Regal	Stargate
Comtronics	Magnavox	Regency	Starquest
Contec	Memorex	Rembrandt	Tandy
Eastern	Movie Time	Runco	Televue
Garrard	NSC	Samsung	Texscan
GC Electronics	Oak	Scientific Atlanta	Tocom
			Toshiba
			Tusa
			TV86
			Unika
			United Artists
			United Cable
			Universal
			Viewaway
			Viewstar
			Zenith

*No Setup Required For Most Models

Thomson Consumer Electronics, Inc.
Product Exchange Center
32 Spur Drive
El Paso, Texas 79906
1J1149-Z Rev 9.96

Trademark(s) © Registered Marca(s) Registrada(s)
Made in China
RCU4GLW

REAL

First Class
Postage
Required

Thomson Consumer Electronics
2000 Clements Bridge Road
Deptford NJ. 08096-2011

Attn: Remote Control
Purchase Registration

RCU4GLW Product Registration Card

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. Mr. Mrs. Ms. Name: _____
Address: _____

2. Model: **RCU4GLW**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:

16-25 26-35 36-45 46-55 56+

6. What specific need did the Universal Remote help you resolve?

A. Replacing A Lost Remote B. Replacing A Broken Remote
 C. Consolidating Remotes D. Adding an Extra Remote

7. Where will this remote primarily be used?

and with what brand? TV: _____
VCR: _____ Cable Box: _____

A. Kitchen B. Bedroom C. Family Room/Living Room
 D. Other _____

8. How did you become aware of this remote?

A. Advertisement B. Salesperson C. Store Display
 D. Received as a Gift E. Friend or Relative _____
 F. Other _____

9. What other brands did you consider buying?

A. None
 B. GE C. One For All D. Zenith
 E. Gemini F. Sony G. Other _____

10. What factors most influenced this purchase? (Check up to 3)

A. Brand B. Features C. Recommendation
 D. Price E. Received as a Gift F. Other _____

What suggestions do you have to improve this product?

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Warranty

Thomson Consumer Electronics warrants that for 90 days from date of purchase this product is free from defects in material and workmanship. If the item is defective within that period, return it at your expense to the dealer from whom it was purchased together with proof of purchase for replacement. This warranty excludes defects or damage due to misuse, abuse, or neglect. The foregoing represents Thomson's sole obligation under this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For purchases in outside the United States contact your dealer for warranty information

Help Line (US Only)

If you need additional set-up help, call our toll-free Help Line at 1-800-316-8756

© 1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>