

RCA

Wireless Headphones

with 900 MHz transmitter

900 MHz
wireless



*Transmits Stereo Signal
Even Outside Your Home!*

Thank you for choosing the RCA Wireless Headphones. Before attempting to use your Wireless Headphones, please remove all parts from the box and read the installation and use instructions carefully.

* Open field tested

HEADSET SAFETY

Follow these precautions for safe usage of your wireless headphones.

1. These wireless headphones have been designed for residential use and should not be used for industrial purposes. The headphones should be installed and used in accordance with the instructions contained in this manual.
2. Read through these instructions completely before installation. Follow the instructions carefully and carry them out in the correct order. Keep the manual on hand for future reference.
3. The power for this headphone system is delivered with batteries. Before charging, read the instructions in this manual. Disconnect the power supply from the recharging cradle/transmitter before installing or removing batteries.
4. Always leave easy access to the main power supply.
5. Disconnect the unit from the main power supply during storms, or if you will be absent for a long period of time.
6. If you observe smoke or detect a burning odor, immediately disconnect the device from the main power supply.
7. Never open the unit yourself; you may receive a severe electric shock, leading to serious injury or even death.
8. Protect the unit from dust, humidity and sources of excessive heat (e.g., fireplace or radiator).
9. The power source should not be in contact with liquids or exposed to the risk of dripping or splashing liquid. Be careful not to place the power source or recharging cradle/transmitter near any object containing liquid (e.g., a vase, glass or bottle).
10. Do not expose the unit to direct sunlight. Its maximum ambient temperature is 95° Fahrenheit (35° Celsius).
11. The ventilation should not be impeded by covering the unit with any items, such as newspapers, tablecloths, curtains, etc.
12. No flame sources, such as lighted candles, should be placed on or close to the recharging cradle/transmitter.
13. This unit has been designed for use in a dry environment. If, for exceptional reasons, you must utilize the unit out of doors (balcony, veranda, etc.), take care to protect it from dampness (dew, rain or splashes of liquid).
14. The maximum ambient humidity that the device supports is 85 percent. If the unit is cold and you wish to use it in a warm room, wait until any condensation on the unit evaporates by itself before you turn it on.
15. Clean the unit with a soft cloth soaked in a neutral detergent. You may damage the unit if you use an alcohol-based product. If you are unsure if the detergent is alcohol-based, test the cleaning product on the underside of the unit.

Audiovox declines all liability for any use that does not comply with the instructions in this User's Manual.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the model number. This number is located on the product.

Model No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

TABLE OF CONTENTS

Introduction	3
Features.	3
Transmitter	4
Headset safety	4
Installation	5
Operation	8
Specifications	9
Troubleshooting.	10
Warranty.	12

INTRODUCTION

This 900 MHz stereo wireless headphone system features a compact design that uses the latest wireless technology that enables you to enjoy music and TV sound just about anywhere inside or outside your home. You can simply connect the system to any sound source, such as a DVD, DBS, CD, TV, VCR, stereo receiver and radio.

FEATURES


900 MHz RF technology lets you roam freely throughout your house

Operating distance up to 100 feet

No line-of-sight limitation

Convenient power and tuning controls located on headphones

TRANSMITTER

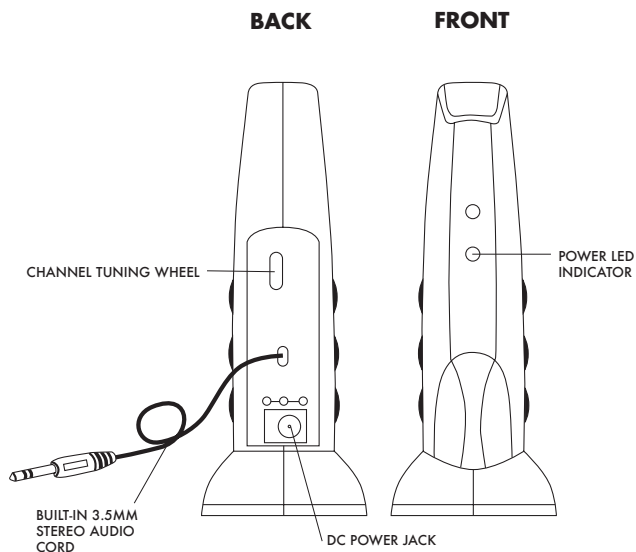

HEADSET SAFETY

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce the volume or discontinue use.
- Make sure the volume level of the headphone is set at a comfortable listening level before placing it in position over your ears.

INSTALLATION

Please follow this quick set-up guide to ensure trouble free installation of your headphones.

Step 1:

Connect the built-in 3.5mm Stereo Audio Cord to the audio output jack of your audio source, e.g. TV, HiFi, CD, DVD player etc. The 3.5mm plug is standard and will fit in the jack marked PHONES or LINE OUT that is available on most portable CD, MP3 players or portable audio device.

* If you are connecting to a stereo receiver or if your audio source has two RCA output jacks (red and white in color), use the Y-connection Cord that is included for connecting the transmitter to the jacks marked AUDIO OUT or LINE OUT.

Step 2:

Connect the plug end of the AC Adapter to the DC IN Socket, located on the back of the transmitter, and plug the adapter into the AC wall outlet.

Important: This power unit is intended to be correctly oriented in a vertical or floor mount position.

Step 3:

The transmitter is now ready to receive an audio signal. When there is a signal received from the audio source, the Power LED Indicator will glow RED to confirm that the transmitter is operating.

Make sure the transmitter is located on a secure flat surface, preferably above head level. This will assure the best performance and allow the headphone to receive the wireless signal.

* The transmitter has an auto-cut-off function. When there is no audio signal (such as when a CD has finished and the player stops) for a period of about 90 seconds, the power of the transmitter will be automatically cut off. You will then hear some noise from the headset and the LED on the earcup will turn RED. Once an audio signal is restored to the transmitter (resume playing the CD or audio program) then the LED on the transmitter will glow RED indicating that it is transmitting audio once again (the LED on the headphone will turn back to GREEN to indicate normal operation).


INSTALLATION (continued)

Step 4:

Placing your thumb on the Battery Compartment Cover on the left side of the headphone, gently push up in a sliding motion to remove the cover. Then insert the 2 "AA" size batteries into the battery compartment, carefully following the markings inside to assure the batteries are inserted properly with the + and - ends in the correct position. Then slide the battery cover into place until the tabs lock to secure it in the proper position. Then locate the Power ON/OFF Switch and slide it to ON.

*Note: You may use nickel-cadmium or nickel-metal hydride rechargeable batteries to operate the headphones. However, they may not be recharged in the headphones. Use your charging device with the batteries to recharge them.

Do not mix batteries with different chemistry types (for example, a zinc battery with an alkaline battery). Do not mix new and used batteries. Do not leave batteries installed in the product when not in use for long periods.

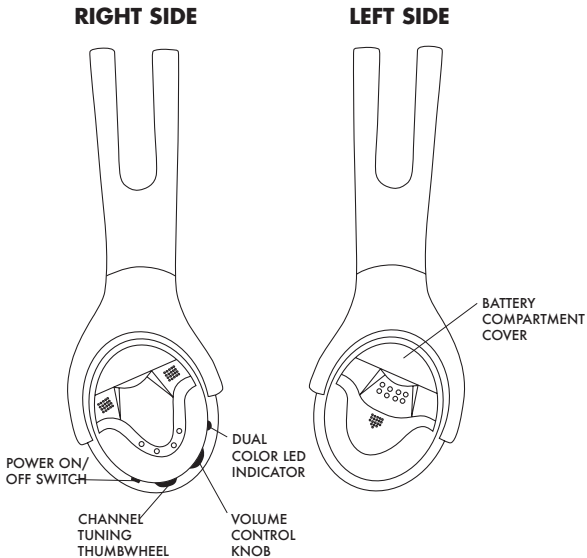

INSTALLATION (continued)

Step 5:

Switch on your music device (TV, HiFi, CD, DVD etc.) to begin playing your audio program. If you have the transmitter connected to a portable CD or MP3 player, make sure the volume level on the player is set to a mid-level setting to assure a strong input signal to the transmitter.

Step 6:

Listen to the sound coming from the headphone before placing it in position on your head to make sure the volume is not too loud. Adjust the volume control by rotating the thumbwheel to the desired level. Please refer to the previous HEADSET SAFETY section for guidelines on operating safety.

If there is no sound or it is distorted, then tune the headphone by adjusting the CHANNEL TUNING THUMBWHEEL until the sound is improved and the LED light turns GREEN.

OPERATION

1. Turn on the audio source (TV or audio component) to which the transmitter is connected.
2. Slide the ON/OFF switch on the headphone to "ON."
3. Listen to the volume coming from the ear cups on the headphone to make certain that the volume is not too loud before placing the unit on your head. (See the section titled "Headset Safety" on page 1.) Adjust the volume as needed using the VOLUME CONTROL wheel located on the right ear cup. Once the volume level is at a comfortable setting, place the headphones over your ears and adjust the volume as desired.

SPECIFICATIONS

Model	WHP140
Description	Radio Frequency Wireless Headphones System (Power Auto Cut Off/Dual Color LED Indicator)
Transmitter	
Carrier Frequency	900 MHz
Effective Range	100 feet (open field)
Power Supply	AC Adapter, 12V 200mA
Headphones	
Frequency Response	100-7,000 Hz
Signal to Noise Ratio	50 dB
Distortion	<2%
Channel Separation	25 dB
Power Supply	2 x 1.5V AA size batteries
System Includes	1 Transmitter (built-in 3.5mm stereo audio cord) 1 Headphones 1 AC/DC adapter for transmitter 1 Y-connection Cord 2 AA heavy duty batteries

TROUBLESHOOTING

If you encounter any trouble in setting up the Headphones, please check the following points:

PROBLEM

SOLUTION

Distorted sound quality or unclear sound:

- A) Check if the sound of your audio source is distorted and whether the volume control is set to an adequate level.
- B) Make sure that your audio equipment, the transmitter and headphones are connected properly and switched ON. If the batteries in the headphones have insufficient power, replace them with fresh batteries.
- C) Check if you have selected the best channel. Adjust the Channel Tuning once again to check. If necessary, you may change the setting of the transmitter by turning the CHANNEL TUNING THUMBWHEEL up or down, then adjusting the thumbwheel on the HEADPHONES to tune in a better channel setting to improve audio or eliminate interference.

No sound from the headphones:

- A) Check if the batteries are inserted properly into the battery compartment and whether the headphones are switched ON.
- B) Check if the batteries in the headphones have sufficient power—replace them if necessary.
- c) Check if the transmitter is properly connected and powered on with the AC/DC Adapter (the Power LED Indicator should glow RED).
- D) Check if all the cords are properly connected.
- E) Check if the distance between the headphones and transmitter are within the effective range. (The effective range of the device is approx. 100 feet). Move closer to the transmitter to receive the sound.

Mono sound:

- A) Check if the audio source is mono only, use a stereo audio source.

TROUBLESHOOTING (continued)

PROBLEM

SOLUTION

Interference:

A) On the back of the transmitter, there is a CHANNEL TUNING THUMBWHEEL. Select a different frequency channel by turning the thumbwheel up or down. Then adjust the thumbwheel on the channel tuning control on the headphones until the LED Indicator glows GREEN showing that the channel has been properly tuned.

Power auto-cut-off:

A) The transmitter has an auto-cut-off function. When there is no audio signal (such as when a CD has finished and the player stops) for a period of about 90 seconds, the power of the transmitter will be automatically cut off. You will then hear some noise from the headset and the LED on the earcup will turn RED. Once an audio signal is restored to the transmitter (resume playing the CD or audio program), then the LED on the transmitter will glow RED indicating that it is transmitting audio once again (the LED on the headphone will turn back to GREEN to indicate normal operation).

12 MONTH LIMITED WARRANTY

Audiovox Electronics Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

U.S.A.: Audiovox Electronics Corporation, 150 Marcus Blvd.,
Hauppauge, New York 11788

CANADA: Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16,
Mississauga, Ontario L5T 3A5

© 2007 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032 USA
WHP140 US IB 01
Trademark(s) ® Registered
Marca(s) Registrada(s)
Made in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>