



Home Theater User's Guide

RTD205



Changing Entertainment. Again.

A THOMSON BRAND



FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.


Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

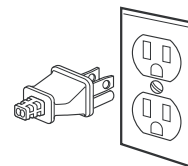

CAUTION – To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord.

ATTENTION – Pour réduire les risques d'incendie, utiliser uniquement des conducteurs de télécommunications 26 AWG au de section supérieure.

Note:

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this player cannot play the disc. The Region number for this DVD player is Region No 1.

SERVICE INFORMATION

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.


CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la class B est conforme à la norme du NMB-003 du Canada

RFC: CTM-9800723-KS5

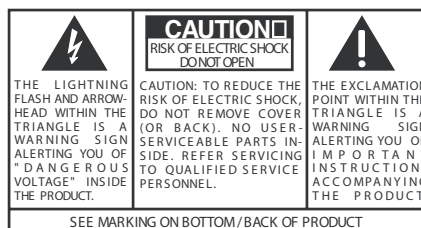

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.



Table of Contents

Connections and Setup		Player Menu	
Things to consider before you connect	2	Playmode selection	18
Accessories provided	2	Standard	18
Front panel controls	3	Random (all discs except DVD)	18
Connecting to audiovisual equipment	4	Program (all discs except mp3/JPEG discs and JPEG)	18
Connecting the antenna	4	IntroScan (Audio CD only)	18
Magnetic shielding	6	Parental Control settings	19
Positioning speakers	5	Lock Player	19
Connecting the speakers	5	Change Password	19
Front speaker placement	6	Rated Titles	19
Preferred surround placement	6	Unrated Titles	19
Test tone/Channel balance	7	Display settings	20
The Remote Control		TV Image	20
Remote control functions in DVD/CD mode	8	Front Display	20
Remote control functions in TV mode	9	Black level	20
Inserting batteries in the remote control	9	Progressive Scan	20
Playing Discs – Basic Functions		Sound settings	21
Compatible discs	10	Sound Logic	21
Compatible formats	10	Distance	21
Regional coding	10	Test tone	21
Operating the DVD receiver	10	Downmix	21
Loading discs	10	Language settings	22
Playing discs	10	Player Menus	22
Description of the various menus	11	Disc Menus	22
Basic Playback Operations	12	Audio	22
Playback	12	Subtitles	22
Accelerated play	12	Additional Information	
Pause	12	Troubleshooting	23
Frame advance	12	Precautions	24
Variable slow motion	12	Use	24
Changing chapter/track	12	Cleaning	24
Zoom	12	Handling and caring for discs	24
The Info Menu		Disc Formats you can play	25
Using the Info menu	13	DVD-Video	25
Time display	14	DVD-R, DVD-RW, DVD+R, DVD+RW	25
Title/chapter (DVD)/track (audio CD and VCD) ...	14	VCD - Video Compact Disc	25
Subtitles (DVD)	14	SVCD - Super Video Compact Disc	25
Audio (DVD, VCD)	14	Audio CDs	25
Play mode (all discs)	15	CD-R, CD-RW	25
Bookmark (DVD and audio CD)	15	mp3 files	25
Camera angle (DVD)	16	JPEG files	25
PBC - PlayBack Control (VCD)	16	Sound Enhancement Systems	26
Sleep	16	Dolby Pro Logic II	26
mp3 Files and JPEG Files		Dolby Digital	26
Playing mp3 files or displaying JPEG files	17	Limited Warranty	26

Illustrations contained in this document are for representation only.


Connections and Setup

Things to consider before you connect

- Ensure that the mains supply in your house complies with that indicated on the identification sticker located on the back of your unit.
- Install your unit horizontally, away from any source of heat (fireplace) or appliances creating strong magnetic or electric fields. The components of this unit are sensitive to heat. The maximum ambient temperature should not exceed 35° Celsius.
- Leave enough space around the unit to allow adequate ventilation: 10 cm on either side and above the top, and 5 cm at the rear.
- The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not expose it to rain or splashing water. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Moving the unit from a cold place to a warm one can cause condensation on some components inside the unit. Let the condensation disappear on its own before turning the unit on again.
- Before moving the player, make sure the disc tray is empty.

Other important use and cleaning information at the end of the booklet.

Accessories provided

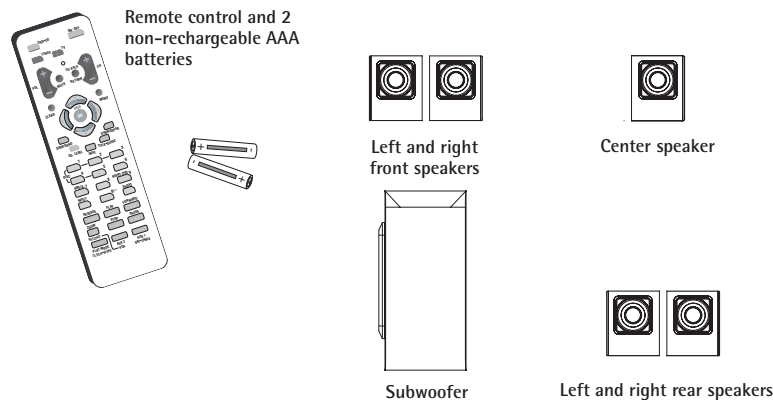

Caution!


Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

DVD copy protection

In accordance with the DVD standard, your DVD player is equipped with a Copy Protection system, which can be switched on and off by the DVD disc itself, in order to make any recording of the relevant DVD disc onto a videotape of very poor picture quality, or even impossible. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


Connections and Setup

Front panel controls

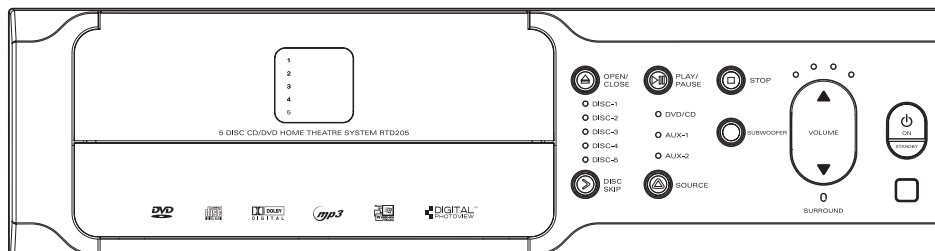

- ▲ Open and close the disc tray.
- ▶ Start playing a disc. Pause.
- Stop disc playback.
- > **DISC SKIP** – Goes to the next slot in the disc tray. Above the disc skip button indicator lights that show which disc is being played.
- △ **SOURCE** – Select the input source. Above the source button are indicator lights that show which source is active.
- SUBWOOFER** – Toggle between different subwoofer output levels.
- SURROUND** – Changes the surround sound settings. The LED lights when Surround mode is active.
- ⏻ **ON/STANDBY** – Switch the unit on and off.

Connections and Setup

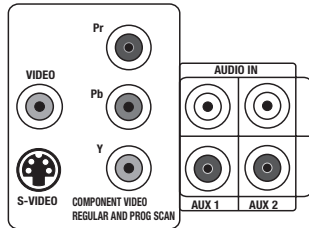

Connecting to audiovisual equipment

Explanation of jacks and cables

The jacks on the back of your receiver (pictured left) and the cables shown below are used to connect to other components. The video jacks are OUT jacks, which need to be connected to IN jacks on the TV or monitor you're connecting to (so the video content goes from the receiver to the screen). The audio jacks are IN jacks, which need to be connected to OUT jacks on the component you're connecting to, so the sound from the component comes into the receiver (and out through the speakers).

Video cables



Composite video cable

Composite video cable (included)


The basic Video jack (usually color-coded yellow) is also referred to as composite video. Usually the video cable is bundled with the audio cables (white and red).



S-VIDEO cable

S-VIDEO cable (not included)

The S-VIDEO (separate video) jack provides better picture quality than composite video (the VIDEO jack) because the color is kept separate from the black and white part of the video signal. If you are using S-video, you must connect the audio jacks to get sound. If you use S-video to connect to another component, you must choose the S-Video option in the Video menu (see page 20).

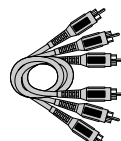

Component video cable

Component video cables Pr, Pb, Y (not included)

The Pr, Pb, Y jacks provide optimum picture quality by separating the video signal into three parts. To ensure maximum picture quality, use three video-grade cables (yellow) for the connection. You can also buy bundled component video cables that are color-coded to match the Y, Pb, Pr inputs (green, blue and red). If you use component video to connect to another component, you must choose the Component option in the Video menu (see page 20).

Note: If your television is a high definition television, use the DVD player's progressive scan output to get the highest possible video resolution. Set the Progressive Scan option in the Display menu to On (see page 20).

Note: If one of the devices is not working, check that all the cables have been inserted properly into the jacks.



Audio cables (red and white)


Audio cables (not included)

AUDIO L (left) and R (right)

These jacks and cables are often color-coded (red for right audio, and white for left audio). You must connect audio cables to the AUDIO L and R jacks if you are using S-video.

Note: If your component has only one input for audio (mono), connect it to the left (white L/ Mono) audio jack on the TV and don't connect the right audio part of the cable.

Connections and Setup

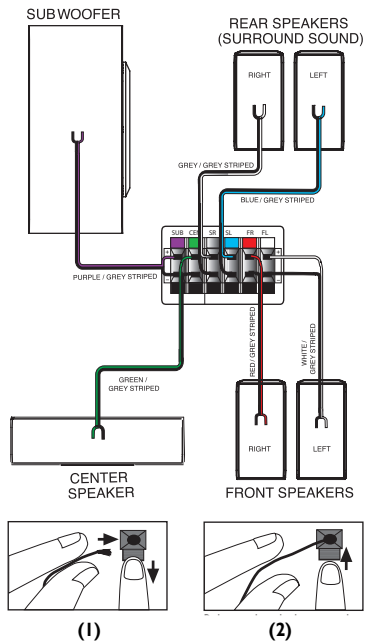

Connecting the speakers

Six speakers are provided with the unit (2 front, 1 center, 2 rear, 1 subwoofer). To achieve good surround effects, all six speakers need to be connected to the receiver.

One speaker wire is attached with each speaker. Speaker wires are color-coded to match the terminals.

Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire (1). Release the tab to lock wire in the terminal (2). Do the same for center speaker, rear speakers and the subwoofer.

Note: When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver) of speaker wires and terminals match. If the cords are reversed, the sound will be distorted. Do not ground the output line, it will damage the speaker.

Positioning speakers

① Left, Right (Front Speakers)

Front speakers carry primarily music and sound effects.

② Center


In surround mode, the center speaker carries most of the dialog as well as music and effects. It should be set between the left and right speakers.

③ Surround (Rear Speakers)

The rear speakers' overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.

Subwoofer

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.) which dramatically heighten the action on the screen.

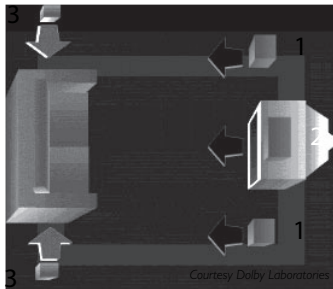




Connections and Setup

Magnetic shielding

Speakers placed less than two feet from the TV set must be magnetically shielded in order to prevent picture distortion. Front and center speakers provided with this unit are magnetically shielded to protect your TV set.

Note: It is not recommended to place the rear speakers and subwoofer near the TV set.

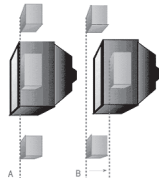

Courtesy Dolby Laboratories

Front speaker placement


Follow the suggestions for speaker placement below to get the best results.

Alignment

Align the center speaker evenly with (A) or slightly behind (B) (the left and right speakers), but not ahead of them.

Angle

Place the left and right speakers to form a 45-degree angle with your favorite viewing position to duplicate the soundtrack mixer's perspective.

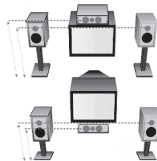

Courtesy Dolby Laboratories

Height

The mid- and high-frequency drivers of the three front speakers should be as close as possible to the same height. This often requires placing the center speaker directly on top (A) or beneath (B) the TV set.

Preferred surround placement

Location


If possible, place surround speakers to either side of the listening area, not behind it.

Height

If space permits, install surround speakers 2-3 feet above viewers. This helps to minimize localization effects.

Aiming


Aim surround speakers straight across the room, not down at viewers, to help create a more open, spacious surround sound field.

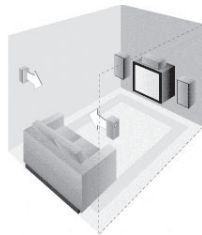

Alternative Surround Placement


Rear wall

If rear wall mounting is the only choice, aim the speakers at each other (A), towards the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you, rather than come from behind you.

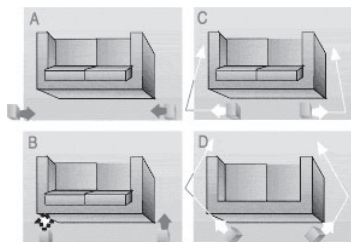



Connections and Setup

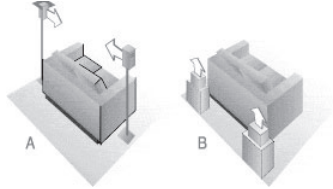

No adjacent walls

Surround speakers can go on stands facing each other to approximate sidewall mounting (A), or to the sides or rear of the viewing area, aimed upwards; they can go right on the floor, or preferably, a few feet off the floor such as on end tables (B).

Test tone/Channel balance

Channel balance

Your receiver is equipped with a test signal generator for balancing the channels. As the signal "travels" from channel to channel, adjust the level controls until each channel plays at the same loudness level (see page 21).

Level adjustment and surround channel level expectation


Even though you adjust the surround channel to be as loud as the others on the test signal, on actual program material the surround channel is usually much lower than the front. Don't re-adjust the surround level; program producers use surround for subtle atmospherics and ambience, and only rarely for special effects.

The Remote Control

The remote control

Navigating through menus

Use the direction buttons to navigate through the menus. Press the **OK** button on the remote control to confirm your selection.

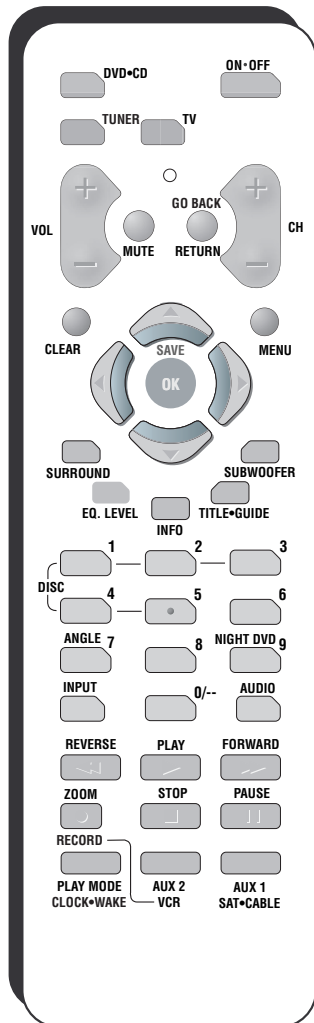

Remote control functions in DVD/CD mode

- ON•OFF** Switches the unit on and off.
- DVD•CD** Selects the DVD player.
- VOL +/-** Adjusts the sound volume.
- MUTE** Mutes and restores the sound.
- RETURN** Returns to the previous menu.
- CH +/-** Directly accesses the next or previous chapter (DVD) or track (CD).
- CLEAR** Hides the Info menu. If you are in the menu system, returns to main menu.
- MENU** Accesses the disc menu during play (if available).
- SURROUND** Changes the Surround sound setting.
- EQ. LEVEL** Toggles channels for channel level settings.
- INFO** Accesses the Info menu.
- TITLE•GUIDE** Accesses the disc menu.
- SUBWOOFER** Selects among subwoofer output levels.
 - 0-9** Number entry. When the info display is not on the screen, press 1 through 5 to directly access a disc in the disc tray.
- ANGLE** Accesses the camera angle function.
- NIGHT DVD** Activates Night Mode (see page 21).
- AUDIO** Accesses the audio function of the Info menu.
 - REV** Starts reverse accelerated play or reverse slow motion.
 - PLAY** Starts playing a disc.
 - FWD** Starts forward accelerated play or forward slow motion.
 - STOP** Stops play and accesses the main menu.
 - PAUSE** Freeze frame, frame advance or slow motion.
 - ZOOM** Accesses the Zoom function.
- PLAY MODE** Accesses the play mode function of the Info menu.
- AUX1 / AUX2** Selects various audio/video sources.

Note: In AUX1, AUX2 and TV modes, you need to press the button twice within 2 seconds to turn off the component.



The Remote Control

Remote control functions in TV mode

Note: The buttons described below operate as specified, provided that the function is available on the television.

- TV** Selects the TV.
- CH +/-** Changes the channel.
- GO BACK** Returns to the previous channel.
- CLEAR** Exits a menu.
- MENU** Accesses the TV's main menu.
- ZOOM** Accesses the Zoom function (16x9 TV only).
- INFO** Provides information about the channel.
- TITLE•GUIDE** Displays the program guide.
- 0-9** Use the number buttons to directly access a track, chapter or title.

Inserting batteries in the remote control



- Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries.
- In order to avoid any risk of explosion, observe the polarities indicated inside the battery compartment. Replace only with the type of batteries specified. Do not dispose of them in a fire or recharge them.
- If you are not using the remote control for a long period of time, remove the batteries.



Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.



Playing Discs – Basic Functions

Compatible discs

- DVD
- DVD-R, DVD-RW, DVD+R, DVD+RW
- CD
- CD-R, CD-RW

Compatible formats

- DVD, VCD (Video Compact Disc), SVCD (Super Video Compact Disc), JPEG
- CD, mp3, WMA


See page 25 for more information about discs and compatible formats.

Regional coding

Your DVD player has been designed to process regional management information stored on DVD discs. The regional code for your player is 1. Discs that have a different regional code will not play.

Operating the DVD receiver

1. Turn on your television set.
2. Press the DVD•CD button on the remote control. Press the ON•OFF button on the remote or the ON/STANDBY button located on the DVD player's front panel.

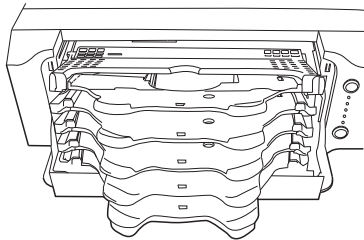

Loading discs

You can load up to 5 discs into your DVD player, but you do not have to fill all the slots in the disc tray for the player to work. You can load any kind of compatible disc in any combination (DVDs, CDs, VCDs). The player will read the data on the disc and play it accordingly.

1. To open the disc tray, press OPEN•CLOSE (the disc tray opens).
2. Insert a compatible disc into the top disc slot, making sure it is fully in place.
3. To fill the remaining slots, slide a disc into the next empty slot and make sure it is in place.
4. When you're finished loading discs, press OPEN•CLOSE (the disc tray closes).

Playing discs

Load a disc or discs as shown above and press the OPEN/CLOSE button. The disc tray closes. The DVD Player reads the first disc's table of contents, and then one of three things happens depending on how the disc was programmed:


- The disc starts playing.
- The disc menu appears (for DVDs and VCDs). One of the options will be to start playing the disc. Highlight that option and press OK.
- The DVD Player's main menu appears. Highlight the PLAY option and press the OK button.

To select which disc you want to play, press the corresponding number key on the remote (1 through 5).

Playing Discs – Basic Functions

Description of the various menus

- **Disc menu** – The appearance and contents of this menu varies according to the type of disc you have inserted. It is separate from the player menu. When the disc is playing, press the INFO button to toggle the menu on or off.

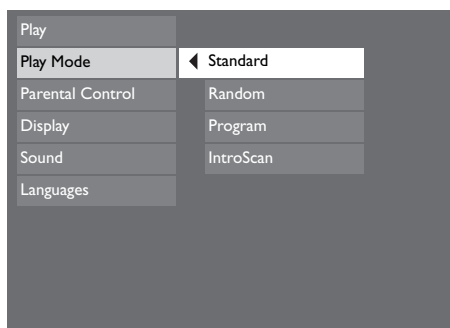


- **Info menu** – The player's Info menu appears as a bar at the top of the screen while the disc is playing. Press the INFO button on the remote to toggle the Info menu on or off.
- **Player menu** – If no disc has been inserted, the player menu appears automatically. If a disc is being played, press the STOP button to access this menu.

Note: A function is only available if it is on the disc you have inserted. For instance, if you select the Subtitles function from the Info menu, subtitles will only appear if subtitles have been provided on the disc. If a menu or icon appears grayed out, the menu or the associated function is not available.

Basic Playback Operations

Playback

Switch the DVD player and the TV set on.

1. Press the  button on the front of the player to open the disc tray.
2. Put the disc in with the printed side up (in the case of a single-sided disc).
3. Press again to close the disc tray. Play starts automatically, or the disc menu appears. If the disc menu appears, select the Play option to begin playback.
4. To skip to the next disc, press DISC SKIP on the front panel. To directly access a disc by number, press the corresponding number on the remote (for example, to go to disc 3, press 3 on the remote).
5. Press STOP to stop playback.

Note: When you press STOP, the player stores the point where playback was interrupted. If you press PLAY again, playback resumes from this point. To stop playback completely or to start again from the beginning, press STOP twice. If the player is left in STOP mode for more than two minutes without any user interaction, a screen saver is activated. At the end of 30 minutes without any user interaction, the player switches off automatically.



Playing Discs – Basic Functions

Accelerated play

While the disc is playing, press the REV or FWD button one or more times to vary the speed and direction of the accelerated play. Press PLAY to resume normal playback.

Pause

While the disc is playing, press PAUSE once for freeze frame. Press PLAY to resume normal playback.

Frame advance

1. Press PAUSE twice. FRAME is displayed.
2. Press PAUSE again to move forward one frame at a time.
3. Press PLAY to resume normal playback.

Variable slow motion

1. While the disc is playing, press the PAUSE button once. PAUSE is displayed.
2. Press the REV or FWD button to vary the speed and direction of the slow motion.
3. Press PLAY to resume normal playback.

Note: Backward slow motion is not available on VCDs.

Changing chapter/track

While the disc is playing, press the left/right arrow button to go immediately to the next or previous chapter, or to the next or previous track.

Zoom

1. While a disc is playing, press the ZOOM button until you reach the zoom size you want.
2. Move from one area to another (pan) using the arrow buttons.



The Info Menu

Using the Info menu

Press the **INFO** button on the remote while a disc is playing to display the Info menu.

Use the right/left arrow buttons on the remote to select an icon.

Use the up/down buttons to scroll through the options.

When the option you want is highlighted, press **OK** to select it.


To directly access a title or a chapter (DVD), a track (audio CD and VCD), select the icon, press **OK**, and then enter a number using the numeric buttons on the remote.

Notes: Many discs only have one title.


When one of the icons is grayed out, this means that the function is not available on the disc.

The invalid symbol indicates that the function selected or the button used is not available.


Info menu (DVD)

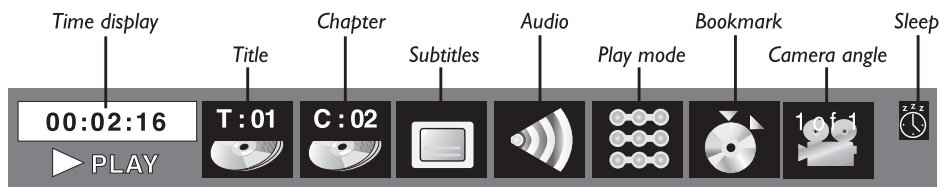

Info menu (audio CD)

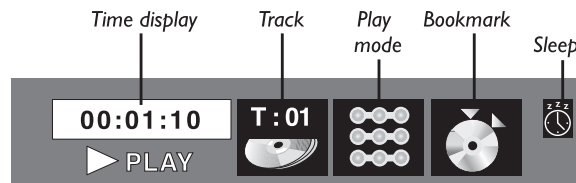

Info menu (VCD and SVCD)

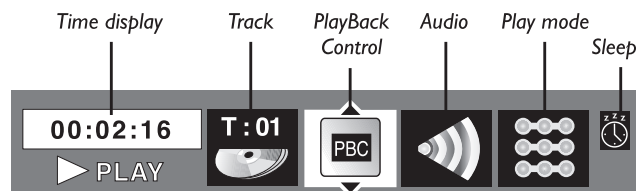

Illustrations contained in this document are for representation only.

13



The Info Menu

01:49:37

Time display

 
To access the Time Display, press the **INFO** button on the remote. Use the left/right arrow buttons to select the Time display icon. Press the up/down buttons repeatedly to display:

DVD: Chapter elapsed time, Chapter remaining time, Title elapsed time and Title remaining time.

VCD and audio CD: Track elapsed time and Track remaining time.

To directly access a location on the disc which does not correspond to the start of a title or chapter, press **OK**, then enter a time with the number buttons (hh:mm:ss).

Note: This function may not be available on all discs.



Title/chapter (DVD)/track (audio CD and VCD)

To directly access a title, chapter (DVD) or a track (audio CD and VCD), press the **INFO** button, then select the Title or Track icon with the left/right arrow buttons. Choose a number using the up/down buttons or press **OK** and enter a number directly with the numeric buttons.

Note: Many discs only have one title.



Subtitles (DVD)

Subtitles are turned off by default. Turn on Subtitles as follows:

1. While the disc is playing, press the **INFO** button, then select the Subtitles icon using the left/right arrow buttons.
2. Select a language using the up/down arrow buttons.
3. To turn subtitles off, select the **Off** option.

Notes:

When you change the language of the subtitles using the Info menu, it only applies to the disc currently being played. When you eject the disc and switch off the player, the subtitles will default to the subtitle language you selected in the Languages menu (see page 21).

This function may not be available on all discs.



Audio (DVD, VCD)

Some discs have several audio tracks used for different languages or different audio formats.

To change the language or audio format during playback:

1. Press the **INFO** button.
2. Use the left/right arrow buttons to select the Audio icon, or press the **AUDIO** button on the remote control.
3. Choose a language or an audio format with the up/down arrow buttons.

 
Notes:

This option is only available if the disc offers dialog languages or audio formats.

When you change the dialog language using the Info menu, it only changes the dialog language of the disc being played. When you eject the disc or switch off the player, the language will revert to the one you selected in the Languages menu (see page 21).



The Info Menu



Play mode (all discs)

Note: For mp3 play modes, please refer to page 16.

1. While the disc is playing, press the INFO button.
2. Select the Play mode icon using the left/right arrow buttons, or press the PLAY MODE button on the remote control.
3. Use the up/down arrow buttons to select an option.
 - DVD play modes: standard, program, title repeat, chapter repeat, A-B repeat.

Notes:

Program play mode is only available if a programmed list has been created (page 18).

Repeat mode is only available with discs that display elapsed time and remaining time.

To repeat a sequence between points A and B, choose the A-B repeat option, and then follow the instructions for entering the two points. If, during a fast forward or reverse, point B is reached, the player continues playback at normal speed from point A. If, during a fast search, point A is reached, the player starts playback from point A at normal speed.

- VCD and SVCD play modes: standard, disc repeat, track repeat, A-B repeat. PBC must be turned on for Repeat functions to work.
- Audio CD play modes: standard, program, random 1 disc, random all discs, repeat 1 disc, repeat all discs, track repeat, A-B repeat, IntroScan.

Note: IntroScan plays the first ten seconds of each track. When all the tracks have been scanned, IntroScan stops. If you want to continue playing the track being scanned, press the PLAY button. Press the STOP button to stop IntroScan.

4. To stop repeat playback, select the Play mode icon and choose the Standard option, or press the STOP button twice.



Bookmark (DVD and audio CD)

The player can store up to 12 disc locations as long as the disc remains in the player and the unit remains switched on.

Note: This function is only available with discs whose elapsed time or remaining time appears in the Info menu.

1. Press the INFO button. Select the Bookmark icon with the left/right buttons, and press OK. A menu is displayed with six bookmarks. To display the other six bookmarks, press the down arrow button.



Play button

"unmarked" icon

2. To create a bookmark, select a position shown as "unmarked" using the arrow buttons and press OK.
3. To start playback from a bookmark, select Play icon and press OK.
4. To delete a bookmark, select the trashcan icon and press OK.



The Info Menu



Camera Angle (DVD)

Some discs offer different camera angles for specific scenes.

1. To change the camera angle, press the ANGLE button on the remote or press the INFO button and select the Camera angle icon with the left/right buttons.
2. Choose the angle with the up/down arrow buttons.

Note: If the disc was recorded using a single camera angle, this function is not available.



PBC - PlayBack control (VCD)

The PlayBack Control function offers scenes and information which can be selected through a menu. It can also be used to display high-resolution pictures, if the disc contains any.

Press the INFO button, then select the PBC icon. Press the up/down buttons to enable or disable this function.



Sleep

1. Press the INFO button, then select the Sleep icon with the left/right arrow buttons.
2. Select one of the available options using the up/down arrow buttons: Off, 30, 60, 90 or 120 minutes.

mp3/WMA Files and JPEG Files

Playing mp3/WMA Files or displaying JPEG Files


mp3/WMA is an audio file format which compresses recorded music. The main advantage of the mp3/WMA format is that CD-quality music tracks can be stored on a personal computer in user-friendly compressed files.

JPEG files are image files. Make sure that they have a resolution of less than 2 megapixels.

Note: The time taken for the contents of the disc to be displayed varies according to the size and number of JPEG files on the disc. If nothing is displayed after a few minutes, the file sizes may be too large. Reduce the files' resolution and write another disc.

Before inserting a disc, make sure it is compatible with the player.

1. Open the disc tray.
2. Place the disc with the printed side facing up.

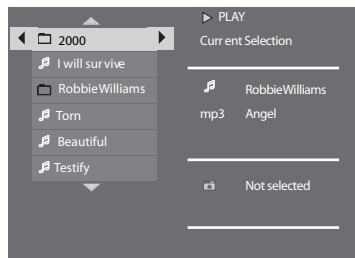

3. Select a folder using the up/down arrow buttons on the remote, then press OK to display the list of files or press PLAY to start playing all the files contained in the folder.
4. Select a file using the arrow buttons. Press OK and then PLAY to start playback.

- **mp3/WMA file:** the player begins playing the selected file, then all the files and subfolders contained in the same folder. The player then plays the contents of the folders at the same level as the folder containing the file selected at the start.

Note: While listening, you can use the ◀◀ button to go back to the previous track or the ▶▶ button to go on to the next one.

- **JPEG file:** the player starts the slide show with the JPEG file you have selected, then displays all the JPEG files in the same folder, then all the JPEG files in the subfolders located in the same folder.

Note: During the slide show you can use the ANGLE button to rotate the picture 90°, the ZOOM button to magnify the picture, the ◀◀ button to go back to the previous picture or the ▶▶ button to go to the next one, and the STOP button to interrupt the slide show and display the disc's contents.

Use the up arrow button to rotate the image vertically, and the down button to rotate the image horizontally. Use the ZOOM button to magnify.

5. Press the INFO button to display the Info menu during playback.

mp3/WMA file: press the up/down arrow button to select a playback mode (Standard, Random, Track repeat, Folder repeat, Disc repeat), and press OK.

JPEG file: press the up/down arrow button to select a projection speed.

6. When the player has played all the files, the music or slide show stops and the disc's contents are displayed again.
7. Press STOP to end playback.


Illustrations contained in this document are for representation only.

17

Player Menus

Using the player menus

The player's main menu is displayed when there is no disc in the player or when playback has been stopped by pressing the STOP button. Select a menu option using the arrow buttons. Press OK to select. Return to a previous menu using the left arrow button.

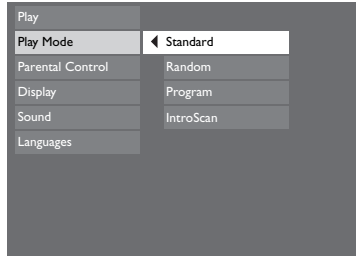

Play Mode selection

1. Load a disc and press STOP.
2. Select the Play Mode option and press OK.
Note: The content of the Play Mode menu varies depending on the type of disc.
3. Select a play mode with the up/down arrow buttons, and press OK to select.

Standard

Press OK or the PLAY button to begin the disc's standard playback.

Random (within a disc, or among available audio CDs)

You can listen to the tracks on a disc in random order by choosing the RANDOM option. RANDOM works for a single disc. If you select RANDOM ALL DISCS, the player will play tracks from all available audio CDs in random order. Non-audio discs will be skipped until RANDOM is turned off. Press OK to start random playback. Press STOP to stop random playback. Press PLAY to resume normal playback.

Program (all discs except mp3/JPEG discs and JPEG)

With this option, you can program the playback order of the current disc. Lists vary according to the type of disc.

- 1a. **DVD:** Select a title using the up/down arrow buttons and press the right arrow button to access the list of chapters. Select a chapter using the up/down arrow buttons.
 - 1b. **Audio CD and VCD:** Select a track using the up/down arrow buttons, or select All to start playing all the tracks.
 - 1c. **mp3/WMA:** select a folder using the up/down arrow buttons, then press the right arrow button to access the list of files. Select a file using the up/down arrow buttons.
2. Press OK to add the title, chapter (DVD), track (audio CD and VCD) or file (mp3/WMA) to the list.
 3. Press the CLEAR button to remove the last title/chapter/track/file from the list.
 4. Press PLAY to start program play or select Done and press OK.

Repeat steps 1 and 2 as necessary.


IntroScan (Audio CD only)

This option plays the first ten seconds of each track.

Press OK to start IntroScan, press STOP to stop it and PLAY to continue playing the current track.



Player Menus

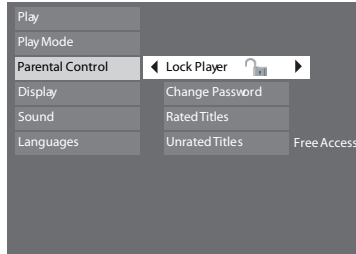

Parental Control settings

You can control access to the player and the type of discs your family can watch with the lock function. There are eight levels of parental control.

Select the Parental Control option in the main menu and press OK. The Parental Control menu is displayed.

Lock Player

This setting prevents playback of DVDs that may not be suitable for all audiences by using the rating level encoded on the disc (not all discs are rated). If the rating level of the disc is higher than the preset level, playback is prohibited unless a password is entered.

1. To activate locking according to your preset rating limits, select the Lock Player option using the up/down arrow buttons and press OK.
2. You are asked for a new password. Enter four digits using the number buttons and press OK. You are asked for confirmation; enter the four digits again and press OK.

Note: Choose a password that is easy to remember, or write it down.

3. To unlock, select the Parental Control option. Enter your password. Select the Lock Player function and press OK.

Change Password

1. To change the password, select the Change Password option and press OK.
2. Enter the four digits of your new password.

Rated Titles

The disc publisher is responsible for coding scenes according to the rating limits.

1. Select Rated Titles and press OK.
2. For the rating limit, select the level using the up/down arrow buttons and press OK.


Unrated Titles

1. To set up password-only access to unrated titles, select Unrated titles and press OK.
2. Select Password required using the up/down arrow buttons and press OK.

Note: You must put the player into Lock mode (see above) for the Rating Limits to apply.



Player Menus

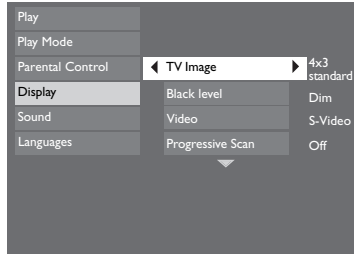

Display settings

1. Select the Display option in the main menu using the up/down arrow buttons and press OK.
2. Select an option using the left/right arrow buttons and press OK.

TV Image

Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited to the format of your TV screen:

4x3 Letterbox: gives best reproduction of pictures recorded in this format (i.e. with horizontal bands at the top and bottom of the screen) or in 16x9.

4x3 Standard: reproduces a 4x3 picture without distortion.

16x9 Widescreen: reproduces 16x9 format films in full on a 16x9 screen.

Black level

This option lets you adjust the video brightness level.

Three settings are available: Normal, Dark and Light.

Video

If you are using component video (Pr, Pb, Y) or S-Video to connect to another component, you will need to select the appropriate option in the Video menu. Select the option with the arrow buttons and press OK to confirm.

Progressive Scan


Progressive Scan provides high quality pictures with less flickering. Turn on Progressive Scan if you used the Component Video jacks of the player to connect a TV or monitor compatible with a progressive scan signal.

Press **OK** to activate Progressive Scan.

IMPORTANT! Once Progressive Scan has been activated, an image will only be visible on a progressive scan TV or monitor. If you choose this option and you do not have a progressive scan TV or monitor, you may get a picture with incorrect color or no color. If you activate Progressive Scan by mistake, follow the procedure below to reset the unit:

Press and hold the **SUBWOOFER** button on the front panel. The video output will be restored to the standard setting and a picture will once again be visible on a conventional analog TV or monitor.

Player Menus

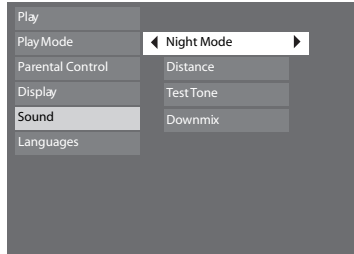

Sound settings

You can adapt your player to other equipment and access specific functions with the Sound menu.

1. Select the Sound option in the main menu using the up/down arrow buttons and press OK.
2. Select an option using the left/right arrow buttons, and press OK.

Night Mode

You can use this function to control the different sound levels via dynamic compression. It improves the quality of the sound track at a low volume and quiets the loudest sounds. Select an option using the up/down arrow buttons: Quiet, Moderate or Off.

Note: This function is available only on DVD discs recorded in Dolby Digital.

Distance

Basic settings have been preset for the speakers included with your unit. However, to suit the acoustic conditions in your listening room and to make the sound more effective, you may need to delay the signal coming from some of the speakers. Channel delay compensates for center or surround speakers that are closer to the listening position than the front speakers.

1. Select Front, Center or Rear using the and buttons and press OK.
2. Adjust the distance using the and buttons and press OK.

Note: The receiver speaker distance default settings are the following:

Front speakers (L/R): 15 ft

Center speaker (Cch): 10 ft

Rear speaker (SUR): 10 ft

Test Tone

This function is used to test the speaker setting and change the speaker level. A short noise comes successively from each speaker. Adjust the volume level using the up/down arrow buttons.


Downmix

This function can process a multi-channel audio source to a two-channel stereo signal.

The options are: Stereo and Off.



Player Menus

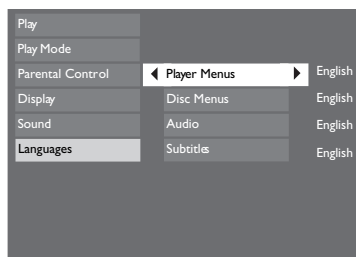

Language settings

With this menu, you can set the language for player menus, dialog, subtitles and the disc menus.

If you chose "English" during initial set-up, any menus generated by the disc are in English, and so is the language of the dialogs (if this language is available on the disc).

1. Select the Languages option in the main menu using the up/down arrow buttons and press OK.
2. Select one of the options using the up/down arrow buttons and press OK.

Player Menus

To change the language of the player menus, choose the language using the up/down arrow buttons and press OK.

Disc Menus

To change the language of the disc menus, choose the language using the up/down arrow buttons and press OK.

Audio

1. To change the dialog language, choose the language using the up/down arrow buttons and press OK.

Note: If the selected language is not available on a disc, the disc's language will be used instead.

2. To change the language during play, display the audio icon by pressing the AUDIO button on the remote (see page 13).

Subtitles

1. To change the subtitle language, choose the language using the up/down arrow buttons and press OK.

Note: If the language chosen is available, it is automatically selected when you display the subtitles (see page 13). Otherwise, the subtitle language indicated on the disc is selected.

2. To change the language of the subtitles during playback, display the Info menu by pressing the INFO button on the remote (see page 13).

Specifications

FTC Output power: Dolby Digital Mode with 10% Total Harmonic Distortion

Rear Channels: 30Watts each Channel (1 Khz, 4 Ohm)

Front Channels: 30 Watts each Channel (1 Khz, 4 Ohm)

Centre Channel: 40 Watts (1 Khz, 3 Ohm)

Subwoofer Channel: 40 Watts (100 Hz, 3 Ohm)

Total FTC Output Power, DOLby Digital mode: 200 W



Additional Information

Troubleshooting

The unit does not switch on.

- Make sure it is plugged in.
- Press the button on the remote control or the ON/STANDBY button on the front of the unit.

The device switches off spontaneously.

- The device switches off automatically when it is in STOP mode for more than 30 minutes without any user intervention. Switch it on again.

It is impossible to read the disc.

- Insert the disc with the printed side facing up.
- Check that the disc can actually be played by this device (see page 24).
- If you are trying to play a disc containing JPEG files, check that the files have a resolution of less than 2 megapixels.
- Check that the disc's regional code matches the player's regional code. This player's regional code is 1.
- Clean the disc.

There is no picture.

- Check you have switched on the TV set.
- Check the connections (see pages 4 and 5).
- Select the AV input assigned to the player on the TV.

The video color is wrong.

- Make sure you have the correct video setting selected (see Display on page 20).

The picture is of poor quality (with snow or lines).

- Check the connections (see pages 4 and 5).

There is no sound or the sound is of poor quality.

- Check the connections (see pages 4 and 5).
- Make sure the speakers are connected.
- Make sure the MUTE function is not on.

No surround sound.

- Check the speaker configuration in the Sound menu.

I can't find my file in the WMA/mp3/JPG listing.

- Make sure the filename is valid (see page 25).

The remote control does not work or works only intermittently.

- Check that batteries are inserted or change them.
- Aim the remote control at the unit. The infrared beam must not be blocked or interrupted.
- Check that the remote control is configured to control the device you are trying to operate with it. Press the DVD•CD button if you want to operate a DVD player, the TV button to operate a television set.

The subtitles do not appear.

- Check that the DVD disc provides subtitles.
- Refer to the section on how to display subtitles (see page 13).



Additional Information

The disc menu language is not the correct one.

- The disc menu language has not been set up (see page 22).
- The language of your choice is not available on the disc (see page 22).

You have forgotten your password (Parental control).

- When the receiver is on and the disc tray is opened, press and hold the STOP button on the front panel until the unit goes to standby mode. All system settings will be restored to default, the parental password will also be reset.

Precautions

Use

- If your unit has been stored in a cool place for any length of time, during a journey for example, wait for about 2 hours before using it.
- The openings located on the top and bottom are for ventilation and must not be obstructed.
- During thunderstorms, we recommend that you isolate the unit from the electrical supply so that it is not damaged by electrical or electromagnetic surges.
- This unit is designed for continuous use. Switching off the DVD player to standby mode does not disconnect it from the mains supply. To completely isolate the equipment, remove the plug from the mains jack as some components remain connected to the electrical supply.
- If you notice any burning or smoke, disconnect the unit immediately to avoid any risk of electrocution.
- Do not attempt to look inside the unit through the disk tray opening or any other opening. You may be electrocuted or exposed to laser radiation.
- This unit is for domestic use only and must not be used for industrial purposes.
- Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation.

Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

Cleaning

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the unit.
- If an object or liquid enters inside the unit, unplug it immediately and have it checked by an authorized engineer.

Handling and caring for discs

- Handle your discs with care. Hold the disc with your fingers at the edges or through the hole.
- Insert the disc with the label facing up (for a single-sided disc).
- Place the disc properly into the tray in the allotted holder.
- Use a soft cloth to clean discs if necessary, always wiping from the centre to the edge.
- Always put discs back in their cases after use and store in a vertical position.
- Do not close the tray with two discs in it or with a disc not sitting correctly in the holder.
- Do not play cracked, chipped or warped discs nor try to repair them with adhesive tape or glue.
- Do not write on a disc.
- Do not move the player when a disc is being played.
- Do not scratch discs or store them in places exposed to direct sunlight, high humidity or high temperatures.
- Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from the centre to the edge, avoiding circular motions, which could cause scratches and interference during playback.

Additional Information

Disc Formats you can play

In order to ensure playback, discs must conform with DVD, CD, VCD or SVCD standards. This unit may not play some recordings or files due to differences in recording formats, software used & Disc types.



DVD-Video

Digital video discs - 12 cm, single or double sided, single or dual layer. DVDs are high-density optical discs on which high quality picture and audio are recorded by means of digital signals.



DVD-R, DVD-RW, DVD+R, DVD+RW

Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable), depending on the DVD writer and discs used. Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.



VCD - Video Compact Disc

CD on which you can record up to 74 min. of VHS quality video associated with still images, audio tracks and interactive menus.



SVCD - Super Video Compact Disc

Most SVCDs comply with the IEC62107 standard. SVCDs can be used to record up to 70 minutes of digital sound and images in accordance with MPEG-2 standards for video and MPEG-1 standards for audio.



Audio CDs

Audio CDs (12 cm).



CD-R, CD-RW

Most CD-R (one recording only) and CD-RW discs (rewritable).

CD-Rs written during a multisession recording can be played, provided that the session has ended before the disc is played (depending on the write software). However, depending on the condition of the CD-writer, computer and the disc used, you may find that not all discs will play. When playing a CD-R disc, it is normal for the unit to take up to 20 seconds to recognize the disc before starting to play.

If the disc is not recognized after a period of 20 seconds, remove the disc, and insert it again.

- Do not use its full capacity.
- CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases, CD-RW playback may be faulty.
- Use reliable, good-quality CD write software.
- Close all other applications on the computer to ensure reliable CD-R disc recording.

Windows Media and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



mp3 files

CD-R and CD-RW discs containing audio files in mp3 format. For CD-R mp3 discs, please follow all the recommendations for CD-R, along with the comments below:

- Your mp3 files should be ISO 9660 or JOLIET format. ISO 9660 format and Joliet mp3 files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac.
- mp3 filenames should not exceed 8 characters, and should end with the ".mp3" extension. General name format: Title.mp3. When composing your title, use 10 characters or less, no spaces, and avoid the use of special characters including (. / . \ , = , +).
- The total number of files on a disc should be less than 400.
- Use a decompression transfer rate of at least 128 kB/sec (kilobytes/second) when recording mp3 files. Sound quality with mp3 files basically depends on the rate of compression/decompression you choose. Obtaining audio CD quality sound requires an analog/digital sampling rate, that is conversion to mp3 format, of at least 128 kB/sec and up to 160 kB/sec. Choosing higher rates, such as 192 kB/sec or more, only rarely produces even better sound quality. Conversely, files with sampling rates below 128 kB/sec will not play properly.
- Do not record copyright-protected mp3 files. "Securized" files are encrypted and code-protected to prevent illegal copying.

Important: The above recommendations does not guarantee that the DVD player will play mp3 recordings, or as an assurance of sound quality. Certain technologies and methods for mp3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (i.e. degraded sound quality and in some cases, inability of the player to read the file).

JPEG files

CD-R and CD-RW with JPEG files. Certain JPEG files, including progressive JPEG files, cannot be read by this player.

The total number of files and folders on the disc should be less than 650. Make sure that files have the ".jpg" extension. Files without the ".jpg" extension will not be able to be read by the player - even though the files are shown as JPEG images on your computer.



WMA files

CD-R and CD-RW discs containing audio files in WMA (Windows Media Audio) format. Please follow all the recommendations for CD-R above.



Additional Information

Sound Enhancement Systems

This receiver is equipped with several built-in sound enhancement systems.

Dolby Digital

The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround. This unit is equipped with Dolby Digital 5.1-channel so that you can enjoy enhanced full digital surround sound. Different from Dolby Pro Logic in that only four channels (Front Left, Front Right, Centre and Rear) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left). Adding the to the 5 channels the subwoofer channel for bass sounds (counted as 0.1 channel) results in 5.1 channels (or 6 Channels) that bring you the most sophisticated Dolby Digital sound enjoyment.

Limited Warranty

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase - Unit exchange, which includes parts and labor.
- The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Exchange the defective unit for a new, or at our option, refurbished unit.

How you get service:

- Call 1-580-634-0366 and have your unit's date of purchase and model/serial number ready. The model/serial number information is on the back of your unit.
- A representative will troubleshoot your problem over the phone.
- If the representative determines that you should receive a replacement unit you will be provided with a Service Request (SR) number. No returns will be accepted without the SR number.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

Option I:

1. Provide your Discover, MasterCard or Visa account number and expiration date to your phone representative. This is for security purposes only and your account will not be charged at this time.
2. We will send you a replacement unit.
3. If you return the defective unit to us within 14 days from the date you were provided a SR number, only items not covered by warranty will be charged to your account. If your unit is not received within 14 days, the suggested retail value of the unit will be charged to your credit card. This amount will be credited, less a handling fee, if the unit is subsequently received.
4. Ship your defective unit back to us, less accessories, using the replacement unit's carton. Shipping instructions will be included in the carton along with your SR number which will allow you to easily ship the unit back to us. Make sure you insure your shipment in case of damage or loss. Include with the shipment:
 - Evidence of purchase date such as a bill of sale.
 - A brief note describing your unit's problem.
 - Your name, address and phone number.

Option II:

1. For a fee, we will send a replacement unit to our exchange point.
2. The exchange location will notify you of its arrival.
3. Take your unit and evidence of purchase date, such as a bill of sale, to the exchange location and you will be provided the new or refurbished unit. Please retain all accessories such as the remote control hand unit.



Additional Information

4. If the repairs are covered by your warranty, you will not be billed.

Thomson assumes no responsibility for warranty shipments from the customer to the factory if not shipped in the manner prescribed by Thomson.

To receive a replacement unit after we have received your unit:

- Write the SR number on the outside of the carton used to return the unit. Make sure you insure your shipment in case of damage or loss.
- Carefully pack the unit using the original box and packing material if possible. Please retain all accessories that were included with your unit such as the remote control hand unit.
- Include with the shipment:
 1. Evidence of purchase date such as a bill of sale.
 2. A brief note describing your unit's problem.
 3. Your name, address and phone number.
- The representative will advise the address to mail a cashier's check or money order for payment if there are any out of warranty labor or parts charges, and you elect not to use your credit card.
- After we receive your product, a new or refurbished unit will be shipped to you.

What your warranty does not cover:

- Acts of nature, such as but not limited to lightning damage.
- Adjustment of customer controls.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Batteries.
- Units purchased, serviced or operated outside the U.S.A.
- Loss of programming. It is recommended that you retain all original CD software that was loaded in the unit.
- Installation.
- Shipping damage if the unit was not packed and shipped in the manner prescribed by Thomson.
- Storage fees may be charged by the exchange point if you fail to pick up the replacement unit in a timely manner.

Product Registration:

- Please complete and the online Product Registration on RCA.com/productregistration or complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON, ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the United States:

- This warranty does not apply. See your dealer for warranty information.



Visit the RCA website at www.rca.com

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

Thomson Inc.

**10330 North Meridian Street
Indianapolis, IN 46290**

©2005 Thomson Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in China
TOCOM 16514490



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>