v1.0 (EN/E)

EN/E

It is important to read this instruction prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipo

Service information This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this user manual

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Technical information Product: Portable CD Radio Brand: RCA Model: RCD045 Power Supply: 120V ~ 60Hz Power Consumption: 15 Watts

DO NOT OPEN HE LIGHTNING LASH AND RISK OF ELECTRIC SHOCK RROWHEAD WITHII HE TRIANGLE IS A

RISK OF ELECTRIC SHOCK THE EXCLAMATION CAUTION: TO REDUCE THE DO NOT REMOVE COVER (OI BACK). NO USER-SERVICEABLE PARTS INSIDE. ALERTING YOU O MPORTANT INSTRUCTIONS ACCOMPANYING QUALIFIED SERVICE HE PRODUCT SEE MARKING ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO

Front view

ALERTING YOU OF

VOLTAGE" INSIDE TH PRODUCT.



▶II - Starts and pauses playback.

- ▶ I In CD mode goes to the next track or searches forward. ■ – In CD mode – stops playback.
- **PUSH TO OPEN** Opens disc tray. Push the disc tray to close it. Back view

AC ~ IN - Insert the power cord here.



Bottom view

OPEN – Push and slide to lift up the battery compartment door.

FCC information This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip-

ment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Precautions

measures:

- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.

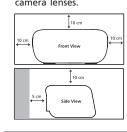

· Minimum distances around the apparatus for sufficient

· Reorient or relocate the receiv-

between the equipment and

Connect the equipment into

an outlet on a circuit differ-

ent from that to which the

Consult the dealer or an expe-

rienced radio/TV technician for

receiver is connected.

Changes or modifications not

ate the equipment.

For your records

serial number

Date of Purchase:

Place of Purchases

Model No.:

Serial No.:

expressly approved by the party

responsible for compliance could

void the user's authority to oper-

In the event that service should be

required, you may need the model

number and the serial number. In

the space below, record the date

and place of purchase and the

Increase the separation

ing antenna.

receiver.

- The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper, tablecloths, curtains, etc.
- The rating plate is located at the bottom cabinet of apparatus.

Headset Safety

extended play.

- To use a headset safely, please keep the following in mind: Do not play your headset at a high volume. Hearing experts advise against continuous
- If you experience ringing in your ears, turn down the volume or stop using the headset.
- Do not use a headset while driving a motorized vehicle or riding a bike. It may cause a traffic hazard and is illegal in many areas.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that can't hear sounds around you

future reference.

IMPORTANT SAFETY INSTRUCTIONS Route power cord to prevent it surfaces may cause the appliance

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

• Before using the product, please

wet basement, swimming pools, etc. Always leave sufficient space around

not place product in or on a bed, rug, bookcase or cabinet that may

Do not expose product to extreme

temperatures such as found near a hot radiator or stove, or in a car

parked in the Summer sun

Connect power cord only to AC

not defeat the safety purpose of

Before you begin

Plug the power supply cord into

the unit, and into an AC power

AC OUTLET POWER SUPPLY:

supplied with your unit.

The AC power plug is

polarized (one blade is

wider than the other)

power outlets one way.

If the plug will not go into the

outlet completely, turn the plug

over and try to insert it the other

way. If it still does not fit, contact

a qualified electrician to change

the outlet, or use a different one

Do not attempt to bypass this

Power is fed to the unit even

cable must be unplugged

when it is not functioning. To cut

the power supply off, the power

and only fits into AC

safety feature.

the AC power jack on the back of

supply outlet that accepts the plug

the polarized plug.

AC power

prevent air flow through vent open

the product for ventilation. Do

- ened only with water. follow and adhere to all warnings, Do not place lighted candles, cigasafety and operating instructions rettes, cigars, etc. on the product. located on the product and in the user book. Save all instructions for Do not expose product to rain and do not use near water; such as, sink,
 - Unplug AC power cord from outlet during a lightning storm or when product is left unused for a long period of time to prevent damage due to lightning or power line surges.
 - Care should be taken so that objects do not fall and liquids do not spill
 - into the product. Never add accessories that the product has not been designed to
 - accommodate. Use only the manufacturer's approved mounting instructions and hardware when installing product. Do not attempt to disassemble
 - the cabinet. This product does not contain customer serviceable compo
- power source as marked on the nents. Do not handle the unit or powe Some products employ a polarized cord when your hands are wet or

Battery power

anywhere

- AC line plug (one blade is wider). This is a safety feature. The plug damp Carts and Stands The appliance should will go in the power outlet only one way. If the plug doesn't go into the outlet completely, turn the plug be used only with a cart or stand that is recommended by the over and put it in the other way. If it still doesn't fit, contact a qualified manufacturer. electrician to change the outlet. Do
 - An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven

You can insert 6 C-sized alkaline

batteries (not supplied) and you

can take your stereo just about

Open the battery compartment

unit by pressing down on the

tab and pulling out the cover.

Before inserting the batteries,

observe the polarities (that is,

+ and -) of the battery, then

engraved diagram located on

Insert batteries in the battery

Note that the AC line cord must

be unplugged from the jack on $% \left\{ 1,2,\ldots ,n\right\}$

Extend or reposition the

unit for better AM reception.

antenna for better FM

reception. Rotate the

the back of the unit to operate on

compartment.

batteries.

the battery compartment door.

relate the polarities to the

door on the bottom of the


from being pinched, or walked on, or melted by a hot stove or radiator. To clean cabinet, unplug AC power cord, then use a soft cloth damp-

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

- and cart combination to overturn Damage Requiring Service –This product should be serviced by quali-fied service personnel when: A. The power supply cord or the plug has been damaged; or B. Objects have fallen, or liquid has been spilled into the product; or
 - C. The product has been exposed to rain; or D. The product does not appear to operate normally or exhibits a
 - marked change in performance; or E. The product has been dropped, or the cabinet damaged. When service or repairs are completed, ask the service technician to
 - perform the safety check described in the service manual and to confirm that replacement parts have the same safety characteristics as the original parts.
- Overloading Do not overload the wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric
- IF YOUR PRODUCT OPERATES ON BATTERIES, adhere to the follo ing precautions: A. Any battery may leak electrolyte if mixed with a different battery
 - B. Any battery may leak electrolyte or explode if disposed of in fire or

type, if inserted incorrectly, or if all batteries are not replaced at the and local regulations

Top view

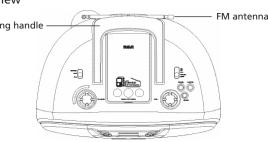

BAND AM/FM - Selects AM or FM band. TUNING - Selects radio frequency.

(I) / CD / RADIO / OFF – Selects operation mode. To switch off the unit, select OFF.

PROG. - Enters CD program mode MODE – Selects playback modes. BASS - Turns bass boost on and off. **VOL.** – Adjusts volume PUSH TO OPEN - Push to open the mp3 device storage compartment

door. Push the door to close it.




General controls



I I CD mode – goes back to the previous track or searches backward.



Display

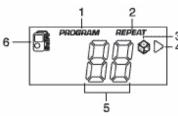

- 1. Program mode is activated.
- 2. Repeat mode is activated. . Random mode is activated.
- 4. Playback in progress. 5. Displays CD track information.
- 6. AUX mode is selected for connecting with mp3 player

Sound feature

Bass Boost system

Press BASS to turn the digital bass boost system on or off.

Radio

Selecting radio mode Slide the selection switch to **RADIO** position to turn on the radio.



Selecting radio band Slide the BAND AM/FM switch to select FM or AM band.



Tuning to a station Turn the **TUNING** knob to select



mp3 input 🔠

Selecting mp3 Input Slide the selection switch to position. An mp3 player icon shows on the display.



Adjust the mp3 player to midrange volume and adjust the master volume by rotating VOL. knob on the unit. Do not turn the volume of the mp3 player too high as this may affect the sound quality. For other playback operations, control them on your mp3 player.

1. Open the mp3 storage compartment by pushing PUSH TO OPEN on the top of the 2. Insert the audio cable into the

Connecting mp3 Player

mp3 player's headphone jack and start playback of the mp3 player 3. Close the storage compartment.





CD playback

Selecting CD mode Slide the selection switch to CD



Loading music 1. Press the PUSH TO OPEN button on the unit front to

slide disc tray out. 2. Place a disc on the disc tray with the label side facing up and then push the disc tray back in.

Playing and pausing

- 1. In stop mode, press ▶II to begin
- playback. The ▶ icon is displayed. 2. During playback, press ▶II to pause playback. Press again to
- The ► icon flashes in pause mode

- Skipping and searching 1. Press I or ▶I to skip to the previous or next track respectively.
- 2. Press and hold I or ▶ to search quickly current track backward or forward respec-

Press ■ to stop playback.

Playback mode In CD mode, press **MODE** repeatedly to select among the

REPEAT (flashes) - Repeats

No icon - Normal playback.

- current track.

 REPEAT - Repeats all tracks. • 👸 - Random playback.

Stoping playback

- following playback modes with
- icons show on the display:
- RANDOM playback cannot be selected. 1. In CD stop mode, press PROG.

Creating programs

CD tracks.

• The unit can program

In program mode,

up to 20 normal audio

- to enter program mode.
 The PROGRAM icon flashes on the display. "P01" (first program position) shows briefly on the display followed by "00" flashing
- 2. Press I or I to select the track to be stored. 3. Press PROG. to store the

selected track.

4. Repeat step 2 and 3 to continue programming. 5. Press ▶II in program mode to start program playback.

Displaying and editing

- programs In CD stop mode, press PROG. repeatedly to recall and display program. Program position
- shows first, followed by track While track number is displayed, press I◀ or ➤I to edit track number. Press PROG. to store newly selected track.

Deleting programs Press ■ in CD stop mode to delete

- Opening the CD compartment door or switching mode will
- delete all the stored tracks. The unit remains in program mode once programming

System doesn't turn on

in another device No sound

Adjust volume setting Make sure you've selected the

correct function

reception Try turning off electrical ap-

or fluorescent lights CD doesn't play

Poor radio reception Adjust the antenna for better

- the tray • Make sure the CD's label is fac-
- ing up

selected

 Make sure that Pause mode is not activated

· Make sure CD function is

- **CD** sound skips Clean the CD (as explained in "Maintenance")
- Check CD for warping, scratches, or other damage No sound in 🗟 mode

Ensure volume of the mp3 player is turned up

ESD Remark: In case of misfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source

may be required) to resume

normal operation.

More information

• Disconnect the system from AC power before cleaning the

Clean the exterior with a soft clean cloth or slightly moistuse solvents as it may cause damage to the unit.

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive
- Do not scratch or damage the label.
- · Make sure CDs are stored in their original case after use. Keep them away from damp,

Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a
- If a CD becomes dirty, wet a soft cloth in water, wring it
- gently, and then remove any water drops with a dry cloth. benzene, thinner, or other

Maintenance

CD lens Care When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner. Technical specifications Power supply: 120V~60Hz Dimensions (H x W x D mm): Unit size - 153 x 335 x 236 Weight: 1.85 kg CD player: Response curve (+/-2dB): 60Hz to 20 kHz Rating Plate: Look for it at the bottom of the set.

http://www.1800customersupport.com/RCA

http://www.rcaaudiovideo.com

Limited warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranty. This limited warranty extend to the original consumer purchaser and is limited to noncommercial use of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion. During a period of one year from the effective warranty date, AVC will provide,

when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the Untied States, you must first call our Customer Support Center at 1-866-444-5746 or 1-800-252-6123, during the hours listed in the box on the right. The determination of service will be made by AVC Customer Support. PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility. **Packaging and Shipping Instruction**

When you send the product to the **AVC** service facility you must use the original

IMPORTER

AVC Multimedia.

carton box and packing material or an equivalent as designated by AVC. 170 Esna Park, Unit 6, Markham, Ontario L3R 1E3 Canada © 2008 AVC Multimedia

Troubleshooting tips

- Unplug the unit for a mo and then plug it back in Check the outlet by plugging
- all the stored tracks.

pliances near the unit, such as hair dryers, vacuum cleaners,

- Make sure you've put a CD in
- Try another CD

LIMITED WARRANTY

Your Responsibility

1) You must retain the original sale receipt to provide proof of purchase. 2) These warranties are effective only if the product is purchased and operated in

3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-866-444-5746, 1-800-252-6123 or www.1800customersupport.com/RCA Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm,

Saturday: 9am-NOON Eastern time.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC

- Cleaning the exterior
- dust cloth ened chamois leather. DO NOT
- tapes to the label surfaces. CDs rotate at high speeds
 - humid or abnormally heated

soft cloth from the inner edge toward the outer perimeter.

out well, wipe the dirt away

Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with

cause damage to disc surface.

hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law. This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how

No person, agent, distributor, dealer or company is authorized to change, modify

or extend the terms of these warranties in any manner whatsoever. The time within

action must be commenced to enforce any obligation of AVC arising under the

warranty or under any statute, or law of the United States or any state thereof, is

not apply to you

www.1800customersupport.com/RCA

Model no	Product name
Type of set	
Serial no	Invoice no

Download from Www.Somanuals.com. All Maleuals Seaguer Aid Diowidental damages.

You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center

exterior of the unit with a soft

Handling CDs

inside the player. Do not use damaged (cracked or warped)

volatile solvents which may

long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may

For more information on other products and services, please visit our web site at Important:

FOR SERVICE AND REPAIR, PLEASE VISIT www.1800customersupport.com/RCA

Specifications and external appearance are subject to change without notice.

Also keep your "Bill of Sale" as proof of purchase.

Date purchased Dealer name

ately. Leaking batteries can cause skin burns or other personal injury When discarding batteries, be sure to dispose of them in the proper manner, according to provincial and local regulations **Important Battery Precautions**

an attempt is made to charge a bat-

tery not intended to be recharged C. Discard leaky batteries immedi-

Any battery may present a risk of fire, explosion, or chemical burn f abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. Non-rechargeable batteries, such as alkaline batteries, may leak if left in

your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more If your product uses more than one battery, do not mix types and make


sure they are inserted correctly.

Mixing types or inserting incorrectly may cause them to leak

Discard any leaky or deformed bat-tery immediately. They may cause

skin burns or other personal injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state

General controls

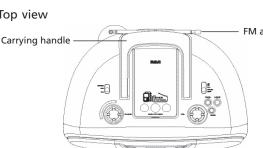

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com