RGЛ

user manual manual de usuario

RCD168



FN/F It is important to read this instruction prior to using your new product for the first time Es importante leer este manual antes de usar por vez primera su euipo.

Important information

Headset safety

- Have a Blast-Just Not in your eardrums! Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place
- Do not play your headset at high volume Hearing experts warn against extended high-volume play. If you experience ringing in your ears,
- reduce volume or discontinue use You should use with extreme caution or
- temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air
- designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is ound you

Handling CDs

-

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the
- Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the
- player. Do not use damaged (cracked or warped) CDs
- Make sure CDs are stored in their original case after use. Keep them away from damp, humid or abnormally heated

Radio

TV band CH 2-13 are available for TV Band. The channel number lights on the display when TV band is selected. Press **TRACK**/ **TUNE I** or **>>** to select the station.

TONE	of PPI to select the sta
CH 2	59.75 MHz
CH 3	65.75 MHz
CH 4	71.75 MHz
CH 5	81.75 MHz
CH 6	87.75 MHz
CH 7	179.75 MHz
CH 8	185.75 MHz
CH 9	191.75 MHz
CH 10	197.75 MHz
CH 11	203.75 MHz
CH 12	209.75 MHz
CH 13	215.75 MHz

Weather band

Weather information is given continuously from U.S. Government Weather Stations on frequencies from 162.400MHz to 162.550MHz.

The Wx indicator and the channel number lights on the display when weather band is selected. Press **TRACK/TUNE** I≪I or ➡I to

CH 1	162.400 MHz
CH 2	162.425 MHz
CH 3	162.450 MHz
CH 4	162.475 MHz
CH 5	162.500 MHz
CH 6	162.525 MHz
CH 7	162.550 MHz

CD lens care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens refer to the ones nying the lens cleane

Cleaning the exterior Disconnect the system from AC powe before cleaning the exterior of the unit with a soft dust cloth

Clean the exterior with a soft clean cloth or slightly moistened chamois leather DO NOT use solvents as it may cause damage to the unit.

Cassettes To protect your

recordings from accidental erasure on one or both sides of your cassette, snap out the tab at the top of the cassette. If you decide later to record on the tape, seal the hole with a piece of adhesive tape. (Refer to diagram)

Ouit Slacking - A little bit of slack in you tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some

The Weather transmission, broadcast 24

hours a day, are taped messages that are

and updated as needed to match the

of Commerce).

repeated every 4 to 6 minutes and revised

Important: The listening range of NOAA

maximum of 40 miles from the station's transmitter. In some areas of the United

States, weather transmissions cannot be monitored. The effective range of this radio

will have side variations due to the height of

the local transmitting antenna, atmospheric conditions, and the terrain between the transmitter and your radio's location.

changing weather conditions. For additional information, check your location office of the National Weather Service (Department

weather stations varies from 10 miles up to a

(Unio) slack in the tape, use a pencil to tighten it up before you insert it.

- Playing tape When the unit is off, press
- ON STANDBY / RADIO / TAPE / CD twice until TAPE mode is selected. The tape indicator "tAPE" lights on the display. Press **STOP/EJECT** to open the tape deck
- 3. Insert a tape into the door and push the
- 4. Press **REW** or **FWD** to wind the tape to the desired starting position. Press STOP/ EJECT to stop winding.
- Press PLAY to start playback. Press PAUSE to pause playback (press again to ease the button to resume playback) 6. Press STOP/EJECT to stop the playback
- 2× Be sure to slide the cassette into the tape slot on the door. Do not place the tape directly onto the tape mechanism

additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering conies

copies. This product complies with DHHS Rules 21 CFR subchapter J. Applicable at the date of

FCC information This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. manufacture For your records

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number: reception. If this equipment does cause interference to radio or television reception (which you can radio or television reception (which you can determine by unplugging the unit), try to correc the interference by one or more of the following



SEE M WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

AUDIO AND COMMUNICATIONS DIVISION PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use. • Before using the product, please follow and adhere to all warnings, safety and operating instructions located on the product and in the user book. Save all instructions for future

Before you begin

Plug the power supply cord into the AC power jack on the back of the unit, and into

an AC power supply outlet that accepts the

You can insert 6 D-sized alkaline batteries

(not supplied) and you can take your sterec just about anywhere. 3 "AA" batteries (not supplied) are needed to keep radio station

Open the battery compartment door on

on the tab and pulling out the cover

Before inserting the batteries, observe the polarities (that is, + and -) of the

Note that the AC line cord must be unplugged from the jack on the back of the unit to operate on batteries.

battery, then relate the polarities to the

engraved diagram located on the battery

npartment door. Insert batteries in the

the bottom of the unit by pressing down

plug supplied with your unit.

battery compartment

Battery power

AC power

Re-orient the receiving antenna (that is, the antenna for the radio or television that is

antenna for the radio or television that is "receiving" the interference).
Move the unit away from the equipment that is receiving interference.
Plug the unit into a different wall outlet so that the unit and the equipment receiving

that the unit and the equipment receiving interference are on different branch circuits If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for

FCC information

Do not expose product to rain and do not use near water; such as, sink, wet basement, Near Water, Such as some received and some received and some set. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, bookcase or cabinet that may prevent air flow through vent openings.

- Important battery information
- Remove the batteries to avoid leakage if you do not use your system for more than one month. Discard leaky batteries immediately as
- leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local
- regulations. Any battery may leak electrolyte under the following circumstances: - if mixed with a different battery type, if inserted incorrectly - if all batteries are not replaced at the
- ame time, if disposed of in fire, or - if an attempt is made to charge a battery not intended to be recharged
- Be sure to remove batteries when storing the set for more than 30 days. Leaky batteries can badly damage the system. Be sure to dispose of leaky, weak or dead
- batteries properly according to federal, state, and local regulations. To prevent injury or damage, do not reverse batteries and do not mix battery type.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details shoul any discrepancies arise in of ther languages.

Tape player

- Recording to tape From radio Insert a tape into the deck
 - Press ON/STANDBY / RADIO / TAPE / CD
 - until the RADIO mode is selected. Press **BAND** to access the desired radio
 - Press TRACK/TUNE I or Dit to tune to the station to be recorded.
 - 5. Press REC and PLAY together to begin
 - 6. Press **PAUSE** or **STOP** to pause or stop the recording respectively.
 - From CD
 - Insert a tape into the deck Press ON/STANDBY / RADIO / TAPE / CD
 - until the CD mode is selected Insert the disc to be recorded
 - Select the track or program to be recorded.
 - 5. Press REC and PLAY together to begin recording.6. Play the track or program to be recorded.7. Press **PAUSE** or **STOP** to pause or stop
 - recording respectively.
 - For better recording quality, use normal bias tape (Type I) use normal bias tape (Type I) only.

Do not expose product to extreme temperature such as found near a hot radiator or stove, or in a car parked in the Summer sun. Connect power cord only to AC power source as

۲

damaged; or B. Objects have fallen, or liquid has been spilled into the product; or C. The product has been exposed to rain; or D. The product does not appear to operate normally or exhibits a marked change in performance; or

erformance; or . The product has been dropped, or the cabine

damaged. When service or repairs are completed, ask the service technician to perform the safety check described in the service manual and to confirm

that replacement parts have the same safety

characteristics as the original parts. Overloading - Do not overload the wall outlets,

extension cords or integral convenience receptacles as this can result in a risk of fire or

Precipitates as this can result in a ray of me of electric shock. **IF YOUR PRODUCT OPERATES ON BATTERIES,** adhere to the following precautions: A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time. B. Any battery may leak electrolyte or exploid in disposed of in fire or an attempt is made to charge a battery not intended to be recharged. C. Discard leaky batteries immediately. Leaking batteries crasters kinb humrs or other personal

batteries can cause skin burns or other perso

injury.When discarding batteries, be sure to

to provincial and local reputations. IF YOUR PRODUCT IS EQUIPPED WITH ANTENNA TERMINALS, and if an outdoor antenna is connected, be sure the system is grounded so as to provide some protection

dispose of them in the proper manner, according

against voltage surge and built-up static charges An outdoor antenna should be locate away fron

power lines. IF PRODUCT IS TO BE CONNECTED TO A CATV

attention to Article act-40 or the Net that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall b connected to the grounding system of the building, as close to the point of cable entry as practical.

963

REMAIN In CD mode to select between

displaying the track elapsed playback time and the CD remaining playback time. **PLAY / PAUSE** To start or pause the CD

playback. CD OPEN To open the CD compartment

CLOSE Push to close the CD compartment

REW To rewind the tape. **FWD** To fast forward the tape. **STOP/EJECT** To stop the tape playback,

vinding or recording, to open the cassette

In stop mode, press PLAY/PAUSE to

begin the CD playback. During the CD playback, press PLAY/ PAUSE to pause playback. Press again to

Press TRACK/TUNE I or DI to skip to

the previous or next track respectively. Press and hold **TRACK/TUNE** I≪ or ►

Press and hold TRACK/TORE PROF to search quickly the current track backward or forward respectively.
 Press STOP to stop the playback.

Press **REMAIN** to select between showing

the disc remaining playback time and track elapsed playback time.

In stop mode, press SET to enter the program setting mode.

The program location shows briefly and

then the track number and program icon

Press TRACK/TUNE I or DI to select

the track you want to program.
 Press SET again to confirm your selection

and access the next program location

4. Repeat steps 2 to 3 to program to a

Press PLAY/PAUSE in program mode to start program playback (PROGRAM

Press STOP to return to normal playback

indicator lights on the display).

naximum of 20 tracks

Download from Www.Somanuals.com All Manuals Search And Download.

REC To start the tape recording

PLAY To start the tape playback.

PAUSE To pause the tape playback

STOP To stop the CD playback

doo

Cassette Player

Playback

resume.

CD remain

Programming

flash on the display

SYSTEM, call the CATV system installer's attention to Article 820-40 of the NEC that

SYSTEM, call the CA

- Connect power cord only to AC power source as marked on the product. Some products employ a polarized AC line plug (one blade is wider). This is a safety feature. The plug will go in the power outlet only one way. If the plug doesn't go into the outlet completely, turn the plug over and put it in the other way. If it still doesn't fit, contact a qualified electrician to change the outlet. On on to defeat the safety purpose of the polarized plug. Route power cord to prevent it from being pinched or walked on or melted hu a hot strue pinched, or walked on, or melted by a hot stove
- To clean cabinet, unplug AC power cord, then use a soft cloth dampened only with wate Do not place lighted candles, cigarettes, cigars,
- etc. on the product. Unplug AC power cord from outlet during a
- Unplug AC power cord from outlet during a lightning storm or when product is left unused for a long period of time to prevent damage due to lightning or power line surges. Care should be taken so that objects do not fall and liquids do not spill into the product. Never add accessories that the product has not been designed to accommodate. Use only the manufacturer's approved mounting instructions and hardware when installing product

- product. Do not attempt to disassemble the cabinet. This product does not contain customer serviceable
- components. Do not handle the unit or power cord when your ands are wet or dam Carts and Stands — The appliance should be used only with a cart or stand that is recommended by the
- anufacturer. an appliance and cart combination hould be moved with care. Quick stops,
- should be moved with care. Quick stops, e force, and uneven surfaces may cause the appliance and cart combination to overturn. Damage Requiring Service-This product should be serviced by qualified service personnel whe
- A. The power supply cord or the plug has been

General controls



ON/STANDBY / RADIO / TAPE / CD To turn the unit on/ off and to select among the radio, tape, CD and off (standby) mode. **BAND** To select the radio, TV or weather

EQ To select among the sound effects (Flat / Rock / Jazz / Pop / Classic). **DBBS** To turn the digital bass boost system

VOLUME + / - To increase or decrease the output volume. **Q** To connect the headphone.

PLAY MODE In the radio mode, to access the preset radio channels. In CD mode, to all / repeat 1 / random). SET In the radio mode, to select the radio preset channels and to set preset stations automatically. In the CD mode, to enter the

TRACK / TUNE Here / Here In the radio mode to tune up or down the radio frequency and select the TV or weather channels. It

the CD mode, to search/skip the CD track backward or forward.

CD plavback This unit is compatible with

audio CD-R/RW discs.

- Do not affix any type of labels to either side (recordabl or labeled side) of a CD-R/RW disc as this may result in the unit ordable
- malfunctioning To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is

Playback capability for CD-RW discs

may vary due to variations in the quality of the CD-RW disc and the

recorder used to create the disc.

When the unit is turned off, press ON/ STANDBY / RADIO / TAPE / CD three times

Press the CD OPEN button to slide disc

tray out. Place a disc on the disc tray with the

The total number of tracks on the disc can

Selecting CD mode

label side facing up. 3. Push the disc tray back in.

he read from the display.

o enter the CD mode

Loading disc

Important information



For your safety

FULLY INSERT.

Service information

specially trained in appropriate servicin techniques. For instructions on how to

Technical information

Product: Portable CD radio Brand: RCA Model: RCD168

Power supply: 120V~60Hz

Unit size - 172 x 380 x 263

60Hz to 20 kHz

Display

the set

Power Consumption: 15 Watts Dimensions (H x W x D mm):

Weight: 3.1kg CD player: Response curve (+/- 2dB)

Rating Plate: Look for it at the bottom of

1. Preset EQ settings Rock, Jazz, Pop, Classic

Random Playback

Select radio mode

Select radio band

CD plavback

Exit program mode

Clearing program list

System doesn't turn on

Adjust volume setting.

No sound

CD doesn't play

Try another CD

playing the program list

press STOP to end program playback.

Press SET repeatedly to show program list.

Your program will be erased once you open

Plug it back in.Check the outlet by plugging in anothe

Make sure you've selected the correct

the disc compartment door or change to

another source mode (e.g. radio).

node will be deactivated once you

select the radio mode

and weather bands.

Repeat mod

Radio

Program mode activated

Don't infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law Any attempts to use this product for tended purposes are unlawful and therefore not condoned by Thomson

qualified electrician to change the outlet, or us a different one. Do not attempt to bypass this safety feature. CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT,

This product should be serviced only by those service, refer to the warranty included in this Guide.

rcializadora Thomson de México, S.A de C.V. Álvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuauhtémoc C.P. 06700. México, D.F.

IMPORTER

elefono: 52-55-11-020360 RFC: CTM-980723-KS5 EXPORTER Thomson Inc

P.O. Box 1976 Indianapolis, IN 46206 - 1976 ©2007 Thomson Inc. Trademark(s) ® Registered Marque(s) ® Deposée(s Marca(s) ® Registrada(s) www.rcaaudiovideo.com Printed in China / Impreso en China



Manufacturer/Responsible Party Thomson, Inc. P.O. Box 1976 Indianapolis, IN 46206-1976 (317) 587-3001

- Digital Bass Boost System
- MHz, KHz Tuner frequency unit Shows the volume level when adjusting the volume
- n CD mode
- Track number (shows during dis
- playback) Total track number in the CD stop mode
- Program location
- Elapsed/ remaining playback time In Tuner mode Preset location, radio frequency
- TV, weather channel numbe
- In Tape mode
- Displays "tAPE" in the tape mode.
- 8. TV/Wx/FM/AM Radio band

REPEAT To repeat the whole disc **REPEAT 1** To repeat the current track

When the unit is turned off, press STANDBY/ON / RADIO / TAPE / CD once to

Extend or reposition the antenna for b antenna for better FM/TV/Wx reception. Rotate the unit for better AM reception.

Press BAND to select among FM, AM, TV

If you are in the normal playback mode but want to play the saved program, press **STOP**, then **SET** and then **PLAY/PAUSE**.

Play mode

Press PLAYMODE to select among the playback modes (repeat all / repeat current track / random). Selection made is indicated by icons on the display.

Troubleshooting tips

- Make sure that Pause mode is not Unplug the unit for a moment, and then
 - activated Make sure CD function is selected

 - CD sound skipsClean the CD (as explained in
 - "Maintenance")
 - · Check CD for warping, scratches, or other

ESD remark:

Poor radio receptionAdjust the antenna for better reception In case of misfunction due to electrostatic Try turning off electrical appliances near discharge just reset the product (disconnect the unit, such as hair dryers, vacuum cleaners, or fluorescent lights and rec nect of the power source may be required) to resume normal operation

Make sure you've put a CD in the tray
Make sure the CD's label is facing up

Important information

Safety precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician. Never operate this product with the
- cabinet rem have
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- take the player to a trained techniciar for inspection
- This compact disc player uses a laser to read the music on the disc. The lase mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment doo open for an extended period of time If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- Radio

manually

the radio band.

Tuning to a station

- Press TRACK/TUNE I to tune down the
- Press TRACK/TUNE ➡ to tune up the radio frequency

Press and hold **TRACK/TUNE**

1. In the radio mode, press BAND to select

2. Press TRACK/TUNE I or ➡I to select

the station to save as a preset station.
 Press SET. Program icon flashes.
 Press PLAYMODE repeatedly to assign

5. Press SET to confirm. Program icon stop

Repeat steps 2 to 5 to set additional

preset stations. There are 10 preset locations for FM band and 10 preset

location for AM band on this unit.

Setting preset stations

the preset station number

tune to the next available

automatically Press and hold SET to set presets

automatically. Once a station is found the search stops briefly to allow you to listen to

Setting preset stations

- Press TRACK/TUNE I or ▶ at this time if you decide not to store the selected station
- If you decide to store the station in preset memory, wait a few seconds and the search will resume.

Using presets

- 1. Press BAND to select between bands 2. Press PLAYMODE to enter the preset
- node and PRESET 1 shows on the display 3. Press PLAYMODE repeatedly to access the desired preset stations

- U.S. Limited Warranty
- What your warranty covers: Defects in materials or workmai For how long after your purchase 90 days from date of purchase
- exchange, which includes parts and labor 91 days to 1 year from date of purchase unit exchange, which includes parts only;

- unit exchange, which includes parts only; you pay the labor.
 What we will do:
 Provide you with a new, or at our option, a refurbised unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
 Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.
- How to make a warranty claim:
 Properly pack your unit. Include any cables
- How to make a warranty claim:
 Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
 Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to: Thomson Inc., Product Exchange Center, 11721 B Alameda Avenue, Socorro, Texas 79927
 Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
 Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
 A new or refurbished unit will be shipped to you freight prepaid.
 What your warranty does not cover:
 Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional user controls. For addition and set-up service adjustments.
 Batteries.
 Damage from misuse or neglect.

- Damage from misuse or neglect. Products which have been modified or
- Products purchased or serviced outside the USA.

- Acts of nature, such as but not limited to

- Acts of nature, such as but not limited to lightning damage.
 Product Registration:
 Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
 Limitation of Warranty:
 THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY STATED ABOVE IS THE ONLY WARRANTY SATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTY STATE) AR ONE A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
 REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTANTY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS SPRODUCT IS INGED TO THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTANTY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS SPRODUCT IS LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTANTE ABOVE.
- ABOVE. **How state law relates to this warranty:** Some states do not allow the exclusion non limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to limitations or exclusions may not apply to
- you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. If you purchased your product outside the
- This warranty does not apply. Contact your dealer for warranty information.

around the apparatus for sufficient ventilation Front View

The apparatus should not be exposed to

be placed on the apparatus.

apparatus

candles, should be placed on the

 
Attention should be drawn to the

disposal. Minimum distances should be kept

dripping or splashing and no objects filled with liquids, such as vases, should

No naked flame sources, such as lighted

nental aspects of battery



- The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper, table-cloths, curtains, etc.
- The rating plate is located at the bottom

- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs. Do not touch the pick-up lens which is
- Keep your unit away from humid areas and abnormally hot places. Do not touch the player with wet hands. If any liquid enters the player cabinet,

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com