



It's important to read this instruction prior to using your new product for the first time.

Safety Precautions

The following markings and symbols are located on the back of the unit.



This product contains a low laser device.

DO NOT TOUCH THE LENS.
CAUTION: INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS DEFEATED.
ÉVITEZ L'EXPOSITION À LA LUMIÈRE LASER.

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUIT À LASER DE CLASSE 1
PRODUITO LASER CLASSE 1

CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

WARNING: THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD BE PLACED ON THE APPARATUS.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

ON SAFETY

- Before operating, make sure the voltage requirement of the mains plug matches your local voltage.
- Disconnect the mains plug immediately if liquid spills into or onto the unit, or if an object falls into the unit. The unit should not be used until service by a qualified service personnel is completed.
- Do not open the cabinet. Lasers used in rays employed by the unit may damage your eyes. Any servicing should be done by qualified service personnel.
- When you are not going to use the unit for a long period of time, disconnect the mains plug.

ON PLACEMENT

- Do not leave, mount or use the unit in places which are extremely hot, cold, dusty, or humid.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface or near materials (a curtain ex. rugs, blankets, curtains, etc.) which might block the ventilation holes.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player. When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme du NMB-003 du Canada.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Safety Instructions

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.
- If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly.

- at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



Portable Cart Warning

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Battery Operation Instructions

IF YOUR PRODUCT OPERATES ON BATTERIES, adhere to the following precautions:

- A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
- B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
- C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to provincial and local regulations.

Important Battery Precautions

 
 
- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Batteries should not be exposed to excessive heat such as sunshine, fire or the like.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Technical Information

Technical Information

Product: Portable CD Player with radio
Band: RCA
Model: RCD3379
Power Supply: DC 9V/500mA

Names of Controls

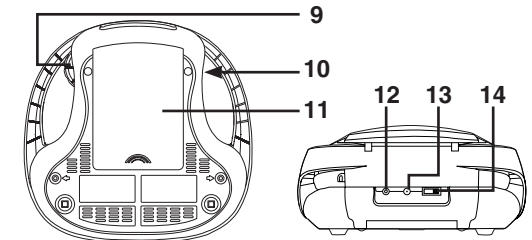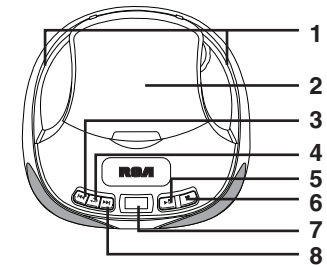


1. Handle
2. CD Door
3. **SKIP** Button
Press to skip to the previous track while in CD mode.
4. **REPEAT** Button
Press to repeat one track / all tracks.
5. **PLAY / PAUSE** Button
Press to start / pause playing a disc while in CD mode.
6. **STOP** Button
Press to stop playing a disc while in CD mode.
7. CD Display

Track number
Repeat all: "•" lights up and remains on.
Repeat one: "•" blinks.
Play mode: "•" lights up and remains on.
Pause mode: "•" blinks.
8. **SKIP** Button
Press to skip to the next track while in CD mode.
9. **TUNING** Knob
Rotate this knob to tune in the desired station.
10. **VOLUME (+ / -) Control**
Adjusts the volume.
11. **Battery Compartment**
Press and hold the knob to open the battery door, according to the indicator marked on the compartment.
12. **LINE IN Jack**
13. **DC IN 9V Power Jack**
Connect the AC adaptor to this jack.
14. **MODE** Switch
Slide the switch to select the desired mode (AM, FM, CD, LINE IN and STANDBY).
Note: LINE IN mode is combined to radio (AM/FM) and CD mode.



Power Supply

 TO USE THE AC ADAPTOR




You can power your portable stereo system by plugging the detachable AC power cord into the AC inlet on the back of the unit and into a wall AC power outlet. Check that the rated voltage of your unit matches your local voltage. Make sure that the AC power cord is fully inserted into the unit.

CAUTIONS: (for North America) To prevent electrical shock, match wide blade of plug to wide slot, fully insert.

USING THE BATTERIES

Insert 6 "C-Size" batteries in the battery compartment. Be sure that the batteries are inserted correctly to avoid damage to the unit.

 - Always remove the batteries when unit will not be used for a long period of time, as this will cause leakage of the batteries and subsequently damage to your unit.
- Playback would automatically come to a stop when the batteries have no more power. Replace all the batteries with new ones.
- Do not mix old and new batteries. Do not mix ALKALINE, standard (CARBONZINC) or rechargeable (NICKELCADMIUM) batteries.

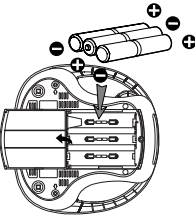

Warning: Do not dispose of batteries in a fire. Batteries may explode or leak.

Caution: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Volume Adjustment

TO ADJUST THE VOLUME

Adjust the VOLUME control to obtain the desired volume.



Listening to the Radio

ATTENTION: You must disconnect any device from the LINE-IN jack. This product has a "smart-sense" feature, where it picks LINE-IN as the audio source if a device is connected to the LINE-IN jack.

- Slide the MODE switch to AM or FM.
- Use the TUNING Knob to tune to the desired station.



- Adjust the volume level.

AM(MW)/FM

- Reposition the unit to get better AM(MW)/FM reception.

 


Note: After listening to the radio, slide the MODE switch to STANDBY.

CD Playback

ATTENTION: You must disconnect any device from the LINE-IN jack. This product has a "smart-sense" feature, where it picks LINE-IN as the audio source if a device is connected to the LINE-IN jack.

- Slide the MODE switch to CD. After a short time, the " - " icon will blink on the display.



- Open the CD door. Place a disc in the center with the label side facing up and then close the CD door gently.
- Then the total track no. is shown on the display.

- Press the **▶||** PLAY/PAUSE button to start playback. The PLAY " • " indicator will light up and remain on.
- Adjust the VOLUME.



TO PAUSE PLAYBACK

- Press the **▶||** PLAY/PAUSE button while a CD is playing to pause play. The PAUSE " • • " indicator will blink.



- To resume playback, press the **▶||** PLAY/PAUSE button again.

TO STOP PLAYBACK

- Press the **■** STOP button.

TO SKIP TO A DIFFERENT TRACK

- Press the **◀◀** button to skip to the start of the current track or previous tracks. Press the **▶▶** button to skip to the next track.

TO LOCATE A PARTICULAR POINT ON A TRACK

- Press and hold the **◀◀** or **▶▶** button during playback, according to the desired direction, and release at the desired point.

Repeat Playback

TO REPEAT CURRENT TRACK

- Press the **↺** REPEAT button once during playback, the REPEAT ONE " • " indicator will blink.



TO REPEAT THE ENTIRE CD

- Press the **↺** REPEAT button a second time to repeat all tracks, the REPEAT ALL " • • " indicator will light up and remain on.



TO CANCEL PLAYBACK MODE

- Press the **↺** REPEAT button until the REPEAT indicator is turned off.

Note: Repeat play can only be done when the unit is in the play mode.

LINE IN Connection

TO CONNECT TO LINE IN FOR OTHER SOUND SOURCES

You can connect audio devices such as your iPod, CD players or MP3 players to the unit through the LINE IN jack. Use a Line-in cable (not supplied), connect the LINE IN jack on the side panel to the Line Out or Earphone jack of the other audio devices.

TO LISTEN TO THE CONNECTED DEVICE

- Slide the MODE switch to Radio (AM/FM) or CD mode. This product has a "smart-sense" feature, where, if the LINE-IN jack has a connection, it will select LINE-IN instead of Radio or CD.
- Turn on the audio device you have attached to the LINE IN jack.

Maintenance

TO CLEAN THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

TO CLEAN THE CD

If the CD skips or will not play, the disc may need to be cleaned. Before playing, wipe the disc from the center outwards with a cleaning cloth. After playing, store the disc in its case.



TO HANDLE THE DISC

Only touch the CD on the edge to avoid finger prints on its surface. Do not stick paper or tape nor write anything on the surface.



Troubleshooting Guide

PROBLEMS	SOLUTIONS
CD	
System does not turn on	<ul style="list-style-type: none"> Make sure AC power plug is secure in the outlet and inlet has power. Batteries may be dead. Install new batteries.
Disc in place but unit won't play	<ul style="list-style-type: none"> Make sure the MODE switch is set to CD position. Make sure LINE IN jack is disconnected. Make sure disc is clean and undamaged. Make sure printed side of disc is facing up. Make sure PAUSE mode is not activated. Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
RADIO	
Poor FM reception	<ul style="list-style-type: none"> Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
Poor AM(MW) reception	<ul style="list-style-type: none"> Reposition or turn the unit for better reception.

Limited Warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranties. These limited warranties extend to the original consumer purchaser and is limited to non-commercial user of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion.

During a period of one year from the effective warranty date, AVC will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1- 877- 252 - 6873, during the hours listed in the box below.** The determination of service will be made by AVC customer support.

PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the defective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC.

Your Responsibility

- You must retain your bill of sale to provide proof of purchase.
- These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-877-252-6873** or www.RCAav.com.

Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time.

Important:

You are responsible for any transportation, shipping or insurance relative to the return of the product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please contact our web site at www.RCAav.com.

Important:

Also keep your "Bill of Sale" as proof of purchase.

Model no. Product name

Type of set Serial no.

Invoice no. Date purchased

Dealer name

FOR SUPPORT, SERVICE AND REPAIR, PLEASE VISIT www.RCAav.com.

Specifications and external appearance are subject to change without notice.

Need More Help?

Please visit online help at <http://www.1800customersupport.com/RCA>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>