

1. Safety Information

CAUTION!

Invisible laser radiation when open. Avoid exposure to beam. Class I laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER λ = 780 nm, P max = 5 mW

Rating Information: At bottom of the unit this unit complies with the existing requirements

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.



2. FCC Information

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402.

Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Records

 
3. Before you begin

Unpacking Your Unit

- You should have the following:
- one main unit
 - one set of ear bud phones
 - one user's guide

4. CD Player

General Control

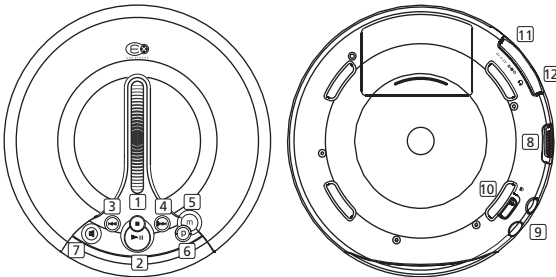

- **stop** button- Turns the unit off / stops CD playback.
- ▶|| **play/pause** button - Turns on the unit, starts or pauses CD playback.
- ◀◀ - Skips / searches backward a track.
- ▶▶ - Skips / searches forward a track.
- m** button - Selects playmode.
- p** button - Enters program mode.
- 🔊 - Selects music modes (EQ).
- open** switch - Slide to open CD door.
- Volume buttons - Adjust the volume ("+" to increase and "-" to decrease volume).
- Lock switch - Locks or unlocks the buttons.
- DC jack - Connect with a power adapter for indoor use.
- Line Out / 🎧 Headphones - Insert your headphones here.

5. Power

Battery Power Supply

Two "AA" batteries are required to power the CD player.

AC/DC Outlet Power Supply adapter (not provided)

You can power your CD player with an AC/DC power adapter (4.5V DC, THOMSON adapter 5-4079B recommended). AC/DC power adapter is purposed for indoor use in dry rooms only. Remove the jack from the device to use it with the batteries.

Car (DC) Power Supply adapter (not provided)

 
Plug a car (DC) power supply adapter into the AC/DC in 4.5V jack at the rear/side of the CD player and then into the cigarette lighter receptacle in your car.



Note:
Power is fed to the unit even when it is not functioning. To cut the power supply off, the AC/DC adapter must be unplugged.

6. CD Player

The display

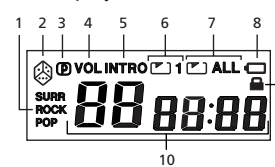

- Music modes (SURR, ROCK, POP)
- Random playback
- Program mode
- Volume
- Intro playback
- Repeat current track
- Repeat all tracks
- Low battery level
- Player buttons are locked
- Track number, playback time and volume level

Listening to a Compact Disc

Slide the **open** switch to the right to open the door. Insert a disc and press lightly on the center to lock the disc into place. Close the door.

Playback

- Press **play/pause** ▶|| button on the main unit to start playback. "-" will appear on the display followed by the total number of tracks and time of the CD. CD begins playback shortly after displaying the number of tracks and time of CD.
- If the disc compartment is empty or the disc cannot be read, **disc** or **Er** will appear on the display.

The **ELECTRONIC SHOCK PROTECTION*** system prevents sound interruptions when impacts or vibrations occur. Electronic anti-shock consumes less power and increases the battery life. Therefore, the **ESP** function is always **ON**. After many successive impacts, the buffer might be emptied causing a brief sound interruption for the memory to reload.

Skip / Search

- Press ◀◀ once to go back to the beginning of the current track. Press twice consecutively to skip to the previous track. Press and hold to search backward within a track.
- Press ▶▶ to skip to the next track. Press and hold to search forward within a track.

Pause

- During playback, press **play/pause** ▶|| on the main unit to pause playback. The playback time flashes when playback is paused.
- To resume playback, press **play/pause** ▶||.

Stop and power off

Press **stop** ■ on the main unit. Press **stop** ■ again to turn the unit off.

Music mode

Press 🔊 repeatedly to select among **Normal**, **Pop**,

Rock and Surround.

Playmode

You can replay the entire CD or one track, listen to the tracks in random order and the beginning 10 seconds of each track.

In CD mode, press **m** repeatedly to:

- ▶|| - replay the current track.
- ▶|| **ALL** - replay all tracks.
- INTRO** * - play the beginning 10 seconds of each track.
- 🔊* - play tracks randomly.

* **press play/pause** ▶|| **after selecting these modes to start playback in the selected manner.**

Program

This function lets you listen to the tracks you selected in the order you want. You can program up to 20 tracks.

- Press **p** to enter program mode. 📁 and track number flashes on the display.
- The first unoccupied program location will show on the display, e.g. "01".
- Press ▶▶ or ◀◀ to select a track into the program.
- Press **p** to confirm your selection.
- Repeat steps 2 to 4 to select more tracks.
- Press **play/pause** ▶|| to listen to your programming.

Cancel Program

Program will be cancelled when you change the disc or turn off the unit.

Exit Program mode

To exit program mode, press **stop** ■. Press **p** to enter program mode again.

Lock

Slide the **lock** switch on the main unit to **HOLD** position 📁 to lock the buttons on the main unit to avoid accidental activation of unwanted functions. Lock icon 📁 will show on the display when the buttons are locked.



Note:
Remember to slide the **lock** switch to the ON position to activate the controls again.
To prevent excessive battery consumption, the unit switches off automatically in all modes (except in playback and pause mode) after 30s if no key has been activated.
If the lock switch is in the Hold position 📁 when the unit is off, pressing the Play/Pause button will display the lock icon on the display letting you know that the lock switch is in the Hold position.

Comercializadora Thomson de México, S.A. de C.V.
Ávaro Obregón No. 151, Piso 13.
Col. Roma, Delegación Cuauhtémoc
C.P. 06700, México, D.F.
Teléfono: 52-55-11-020360
RFC: CTM-980723-KSS

Thomson Inc.
P.O. Box 1976, Indianapolis, IN 46206-1976
©2007 Thomson Inc.
Trademark(s) © Registered
Marca(s) © Registrada(s)
Marque(s) © Déposé(e)s
www.rcaaudiovideo.com
Printed in China/Impreso en China

5642872B (EN/E)

7. More Information

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

Useful advice

- Do not store CDs in damp areas.
- Do not expose CDs to high temperatures.
- Do not put any tape or adhesives on either side of the disc.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.
- Do not use your set immediately after transport from a cold place to a warm place: there may be condensation problems.
- Do not touch the playing surface. Make sure that you keep your set away from water and high temperatures.
- If you do not use your set on battery power for more than one month, we advise you to take out all the batteries.
- To prevent personal injury, do not reverse any battery and do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- This apparatus shall not be exposed to dripping and splashing.
- Prolonged use of the CD player at full volume can damage the user's ear.

Notes on CD-R/RW Discs

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.

 
Please respect the environment !

Before throwing any batteries away, consult your distributor who

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details should any discrepancies arise in other languages.

RCA

User manual
Manual de usuario

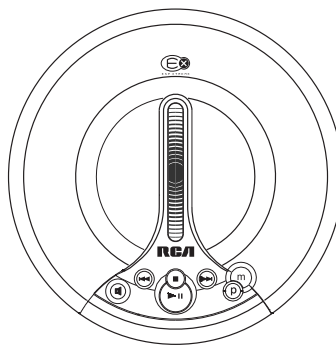

RP2800

It is important to read this instruction book prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su equipo.

U.S. Limited Warranty

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase. The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.
Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

Technical specifications

- Frequency response: 20Hz to 20kHz**

Power Supply

- 4.5V DC through AC/DC adapter
- 2 "AA" batteries
- 4.5V DC (through car DC adapter)

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Note

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>