In accordance with FCC requirements, changes In accordance with FCC requirements, change or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

\*Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

\*Move the unit away from the equipment that is receiving interference.

\*Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies. This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Connections

Connecting the Power Adapter

Connect the power adapter to the DC jack of the unit.

Connect the other side of the power adapter with the wall plug or car

Disconnect the adapter if the set is not used for a period of time.

Slide the battery to the side until a "click" is heard.

The unit is now powered by the battery.

Plug in the battery at the bottom of the

Turn on the power.

Installing the Battery

Removing the Battery

Charging the Battery

Space Castle L,R
VR Racing L,R
VR Racing L,R
Dragon Fire L,R,U,D
Golden Arrow Push the Box L,R,U,D
Bean's Adventure L,R,U,D

Road Star Super Surfing L,R
Bubble Blaster L,R,U,D

Motor Rally L,R
Insect Chase L,R,U,D
Bingo Zap L,R,U,D
Last Cabra L,R,U,D
Cean Quest U,D, U,D
Runner Car L,R
Spin Ball L,R,U,D
Animal Pool L,R
Go Bang LR,U,D

L,R(2)

Fish Catcher Ball Mania

Locate the lock at the hottor

Connect the power adapter to the power jack of the unit.

Turn off the power to start charging.

The battery cannot be charged while the unit is being used.

The indicator is red when charging and will turn green when the battery is fully


More Information

NOTE: The RBRC seal on the rechargeable battery used in your Thomson Inc product indicates that we are participating in a program to collect and recycle rechargeable batteries. For more information, go to the RBRC web site at <a href="https://www.rbrc.org">www.rbrc.org</a>, or call 1-800-822-8837, or contact a local

(one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a

# CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast-Just Not in your eardrums!
Make sure you turn down the
volume on the unit before you
put on headphones. Increase the
volume to the desired level only
after headphone are in place.

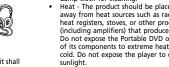

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended used. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket

A	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	lack
THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGER OUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER- SERVICEABLE PARTS IN- SIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OLD MP OR TAN INSTRUCTION ACCOMPANYIN.  THE PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT

This player can output sound and picture to external devices. To do so, slide the Function Switch on the rear side of the unit to the DVD MODE position. Always switch off the player before connecting to any devices.

1. Connect the smaller yellow connector to the VIDEO IN/OUT jack of the player.

2. Connect the larger yellow connector (with

Connect the larger yellow connector (with pin) to the video input jack of external

Connect the orange connector (with pin) to the audio input jack of the external decice.

This player can also be used as a display for other devices, such as DVD player, game console etc. To do so, slide the Function Switch on the rear side of the unit to the AV IN position. Always switch off the player before connecting to any devices.

1. Connect the smaller yellow connector to the VIDEO IN/OUT jack of the player.

Connect the larger yellow connector (without pin) to the video output jack of external device.

external device.

Connect the black connector to the AUDIO IN/DIGITAL OUT jack of the player.

Connect the white and red connectors (without pin) to the audio output jacks of the external decice.

Action keys A (access the number list, confirm number selection), B (access option menu)

TA/A (launch the ball)
TA/A (hold to set acceleration, release to start jump slowly), TB/B (continue the game)
TA/A (iump)

TA/A (TITE)
A (start), TA/A (accelerate), TB/B (brake)
TA (continuous fire), A (fire)

TAVA (pick up ball / throw ball)
TAVA (launch the ball)

TA/A/TB/B (change sequence of three jewels)
TB/B (brake), A (accelerate)

TA/A (throw the ball), TB/B (pick up the ball)

TA/A (put the chess)
TA/A (exchange the blank tile with the selected one)
TA/A (confirm the selection, bombing), TB/B (change direction)

TA/A (catch action)
TA/A (pause the game)

TA/A/TB/B (start next screen)
TA (continuous fire), A (fire)
A (accelerate), B (brake)

A (accelerate), TB/B (brake)

Note:

(1) L = < , R = > , U = ∧ , D = ∨

(2) L key rotates the center disc counter-clockwise, R key rotates the center disc clockwise.

(3) Press U key to accelerate.

• Press OK/RESET anytime during a game to stop playing and return to main game menu.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and

TA/A (set angle / fire arrows), TB/B (set the wind strength TA/A (start / undo last move), TB/B (restart current level)

Connect the black connector to the AUDIO IN/DIGITAL OUT jack of the player.

### **Precautions**

- using again.
  Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a
- liquid cleaners or aerosol deaners. Use a damp cloth for cleaning. Heat The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Do not expose the Portable DVD or any of its components to extreme heat or cold. Do not expose the player to direct sunlight.
- Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. AC/DC power adapter cords should be routed so that they are not likely to be
- AC/DC power adapter cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

  Power Sources This product should be operated only from the type of power course indicated on the marking label. If

- Water and Moisture Do not use this product near water for example, near bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or ne bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like. Do not spill liquids on your Portable DVD or its components as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. To clean your Portable DVD use a soft slightly damp cloth. Always allow all the components to dry completely before using name.

- sunlight.
  Attachments Do not use attachments

- source indicated on the marking label. If you are not sure of the type of power supply to your home consult your.

Check that all the following accessories come with your unit in the package:

1. Audio/Video cable x 2

2. Lithium ion Polymer Battery x 1

3. AC/DC power adapter x 1

Press **POWER ON/OFF** to turn on the player. The DVD logo appears on the

When disc playback is stopped, press **SETUP** and the player's setup menu will show on

Select a menu icon using < > keys. Then select one of the available options using A keys. Press > key to access the submenus an use A \ keys to select an option. Press **OK** to confirm your selections. Return to a previous menu using < key.

To exit from the player menu, press SETUP

System Setup
Setup the source, TV system, TV type,
password, rating, screen format and restore to
default settings.

Rating feature is a parental guardian feature

DVD Regional Code

regional management information that is stored on DVD discs. The regional code for your player I (The U.S., U.S. Territories and Canada). Only D' discs that have regional codes of 1 or ALL (for al regions) can be played by your player.


Car power adapter x 1

5. Carrying case x 1

**Quick Start** 

Plaver Setup

# product dealer or local power company. Do not use any battery other than the orginal ones provided by Thomson.

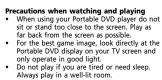

Always play in a well-lit room.
Some people may experience fatigue or discomfort after playing for a long time. Be sure to take a 10 to 15 minutes break at least every hour while playing.

### Specifications

- Model: DRC635N TV System: NTSC
- Supported Disc Formats: DVD, SVCD, VCD, CD, HDCD, CD-R, CD-RW, DVD+/-R, DVD+/norted File Formats: DivX MPEG MP3
- WMA, JPEG, Kodak Picture CD
- DVD Regional Code: 1 AV Input/Output: Composite x Power Requirement: DC in 9V
- adapter bundled) Power Consumption: <10W Operating Temperature: 5°C to 35°C (41°F to 95°F)
- Operating Humidity: 5% to 90% (no Size (without battery): 200(W) x150(D) x 32(H) mm
   Weight (without battery): 760g

which disables playback of certain DVDs based on

entered. If a password has been set, you cannot change the rating without entering the correct passwor To set up the password, highlight the Password part to input a 4-digit password with the numer keys on the remotr control. Press **OK** to set the

Language Setup
Setup the language of the OSD, Audio, Subtitle
and Menu. Also register your DivX VOD files in
the DivX[R] VOD menu (see "Registration for DivX
Files" for details). Use the numeric keys on the
remote control for inputting the registration

number.
For DivX playback, you need to select the correct character set between Western and Central European in "Divx Subtitle" in order to display properly subtitles in some eastern European

deo Setup tup the brightness, contrast, hue and saturation

Digital Setup Setup the DRC (Dynamic Range Compression).

TVG Setup
TVG is the Foul Language Filtering technology of the Foundation of the Programme Indianage from the programme Indianage from the programme Indianage from the programme Indianage from the programme Indianage Filtering Indianage Filtering

remove offensive language from the program you watch. You need to purchase a license to activate this feature (for details:

www.tvguardian.com).
For more information, refer to More Information

Audio Setup Setup the audio output format.

Quick Start & Player Setup

After the Game
Exit icon: return to game menu


Return to main menu autor Reset: return to main menu

ontinue the game automation ontinue the game automation

**DVD Copy Protection** 

ion Corporation, and is intended for home

### **General Controls**

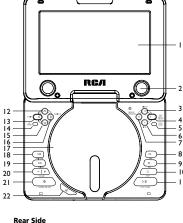



### 1 2 3 4 5 6 7 8 9 0 +10 C BUBTITLE PLAY BAC - O O O O 000 - VOL- VOL- CII O-53 — 0000 <del>-</del> • • • •-

## **DVD Playback**

For basic playback, refer to "Quick Start" Note: The player stores the point where playback was interrupted. If you press PLAY/ PAUSE again, playback resumes from this point. To stop playback completely or to start from the beginning, press STOP twice.

### Accelerated Plav

While the disc is playing, press **REV** or **FWD** one or more times to vary the speed and direction of the accelerated play. Press **PLAY/PAUSE** to resume normal playback.

### Still Image While the disc is playing, press **PLAY/PAUSE** once to freeze frame.

### Frame Advance

While the disc is paused, press **STEP** (remote control) to activate STEP mode. Each press of **STEP** will advance forward image by image. Press **PLAY/PAUSE** to resume normal

## Changing Chapter / Track While the disc is playing, press **SKIP REV** / **FWD** to go immediately to the next or previous chapter, or to the next or previous

## Repeat Playback

During playback, press **REPEAT** repeatedly to select repeating a chapter or a title (DVD discs). A-B Repeat

During playback, press A-B (remote control) once at the start and press again at the end of a desired repeat section. The section will repeat continuously until you press A-B to resume normal playback.

### Random Playback

Press **RANDOM** (remote control) to select random mode on or off. Tracks or chapters will be played in random order when the function activated.

### Searching

Press SEARCH (remote control) to enter search menu (show on top of the screen). For DVD, you can direct access to a title, chapter or time on the disc by inputting the values with the numeric keys on the remote control. Press < > to select a search method (title, chapter or time).

### When playback is stopped, press **PROGRAM** (**PROG** on the remote control) to show the

Program Playback

- Repeat steps 1 and 2 to program more. Highlight "PLAY" on screen and press **OK** to start playback. Highlight "CLEAR" on screen and press **OK** to clear all programs.

### Zoom

During playback, press **ZOOM** (remote control reneatedly to select a zoom in or out option to

## Enters VCD playback control menu Selects zoom options **DVD Playback**

**General Controls** 

Enters player's setup menu or disc's

Enters disc's title menu (if available

13. Moves leftward in menu, selects audio

Accesses repeat and program modes

menu Returns to disc's menu

Searches forward

Searches backward

12. Moves upward in menu

14. Confirms selections

Adjusts volume

Opens disc compar

Headphone jacks Function switch USB connector

27. Video in / out jack

28. Power jack
29. Power indicator
30. Low battery indicator
31. Muting sound

32. Clears input

33. Enters disc's menu

Starts and pauses playback

Moves downward in menu
 Moves rightward in menu, selects subtitle setting

17. Disc compartment door18. Skips forward a chapter/track19. Skips backward a chapter/track

Switches on / off the player

26. Audio input / digital output jack

LCD display

### Displaying Playback Information

Press DISPLAY repeatedly during playback to show various playback information on screen. They include current title and chapter, playback time, audio, subtitle and angle Screen Saver and Power Saving

Changing Audio and Subtitle Settings
On the player, press DISPLAY during playback and then press < repeatedly to change audio setting and press > repeatedly to change subtitle setting. On the remote control, press **LANGUAGE** (for audio) or **SUBTITLE** (for subtitle) repeatedly for corresponding setting

# Tips: For VCD playback, press DISPLAY once

and then press < repeatedly to select audio channel: mono left, mono right or stereo; press > repeatedly to select PBC mode (if available on the disc) on or off. Alternatively, press LANGUAGE (for audio channel selection) or PLAYBACK CONTROL (for PBC on/off) repeatedly on the remote control for

### **Changing Angle**

Press ANGLE (remote control) repeatedly to select angle setting (if available on the DVD disc).

### Accessing Disc Menu

At anytime during playback, press TOP MENU (or MENU on the remote control) to access disc's menu and press **TITLE** to access disc's :itle menu (if available).

### Mutino

Press **MUTE** (remote control) to cut sound output. Press again to restore.

36 Selects display information

37. Selects DVD's angle setting
38. Returns to top of menus

39. Enters search menu

40. (STOP) - stops playback

43. Selects random playback mode

49. Selects language setting
50. Enters title menu (if available)
51. Enters step advance mode
52. Adjusts volume

Enters program mode

46. Numeric input keys

47. Selects subtitle setting

54. Selects repeat modes

55. Performs A-B repeat

45. Enters player's setup menu

41. (PLAY/PAUSE) - starts and pauses playback

(SKIP FWD/ SKIP REV) - skips backward or forward a chapter or track

48. Navigation keys in indicated direction, press OK to confirm selection

53. (FWD / REV) - search backward or forward

Notes on the remote control

On the remote control, remove the plastic tab
from the battery compartment before first use. To
replace battery, slide the release lock to the right
and pull out the battery tray. (One button type,
CR2025 battery required)

When using the remote control, make sure you are pointing to the remote sensor located at the front of the player (where the power indicator located)

**CAUTION**Danger of explosion if battery is incorrectly installed

Replace only with the same or equivalent type of battery.

Screen saver will show when the player is idle for more than 5 minutes. Press any key to de-activate it. If there is no further key activation for another 5 minutes, the LCD screen will shut down for power saving. Press any key to turn the screen on again. Registration for DivX VOD Files

DivX VOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading a VOD, you need to input the registration number of your DVD player on the purchase form on the site. The registration number can be located in the Setup Menu under the "Language" submenu.

Note: If you cannot play a DivX VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchase from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different versions or incorrect download parameters. The parameters used when copying to CD-R may be another reason for this. Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX VOD files, we recommend that you visit specialist websites such as www.divx.com/wod.

Make sure the battery level is not low.

Make sure the disc is not warped, damaged,

Check that the disc format is supported by

Check that the disc's regional code matches that of the player. This player's regional code is 1.

Make sure you are pointing to the remote sensor on the player while using.

ssword. Enter 9688 in the password menu to clear the memory. Keep this master password out of the reach of children. Refer to "Player Setup - System Setup" for details.

It is impossible to read the disc

Make sure the disc is inserted with the


Remote control is not working

• Battery may be empty.

You have forgotten your rating



user manual

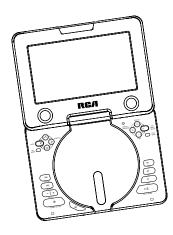

### EN/E

DRC635N

Please read this user manual carefully to ensure proper use of this product. Keep this manual for future reference. Es importante leer este manual antes de usar por vez primera su euipo.

### **Playback of Various Media Formats**

## Playback of MP3, WMA and

Your player also supports playback of MP3, WMA and JPEG files. When a disc is loaded, the player will automatically search for supported files and begin playback automatically. During playback of MP3 and WMA files and stop mode of JPEG files, the following screen will appear:

 MP3 DISC う SONG 1 う SONG 2 **₽** □ ►

Folder directory

- Press **OK** to play the file highlighted While viewing JPEG files, press ↑ keys will rotate or flip picture
- respectively.

  Program playback is available for mp3 and WMA discs, refer to "Program Playback" for details. Input folder number under column "D" and file number under column "F".

### Playback via USB Connector MP3, WMA and JPEG files stored on a USB device can be played via the USB connector the rear side of the player. Playback

## U.S. Limited Warranty

 For how long after your purchase:
 90 days from date of purchase - unit exchange, which includes parts and laid days to 1 year from date of purchase hange, which includes parts only; you pay

exchange, which includes partially the labor.
What we will do:
Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
Proof of purchase in the form of a bill of sale

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.
 How to make a warranty claim:
 Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.

product. We recommend using the original carton and packing materials.

Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.,

Product Exchange Center,

11721 B Alameda Avenue,

Scorpt Tays 39977

 Socorro, Texas 79927
 Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson. damage or loss en route to Inomson.

Pay any charges billed to you by the
Exchange Center for service not covered by
the warranty.

• A new or refurbished unit will be shipped to

# What your warranty does not cover: • Customer instruction. (Your Owner's Man Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.) Installation and set-up service adjustments. Batteries. Damage from misuse or neglect.

# Your player also supports playback of audio CD. Playback starts automatically after an audio CD is loaded. Program playback is available for audio CD, refer to "Program Playback" for details. You only need to input the desired track numbers. Game

operations are the same as files on discs as shown

above. When an USB device is connected, selection menu appears on the screen for playback from USB or disc.

Audio CD

Switching to Game Mode Slide the Function Switch to **GAMES** position to access the game mode. There are 30 games available.

### Selecting Games

Press **START** when you see a welcome screen, the game menu will then show. Select a game by using A V < > keys and then press **START** again to start a game.

Playing Games
Use A V < > , TA, TB, A and B keys to play the games. Refer to "More Information" for game

## **Quitting Games**

Press **OK/RESET** anytime during a game to stop playing. Slide the Function Switch to another position to quit the game mode.

# Products which have been modified or incorporated into other products. Products purchased or serviced outside the USA. Acts of nature, such as but not limited to

Product Registration:

• Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY

WARRANTY APPLICABLE TO THIS PRODUCT. ALL

OTHER WARRANTIES, EXPRESS OR IMPLIED

(INCLUDING ALL IMPLIED WARRANTIES OF

MERCHANTABILITY OR HTNESS FOR A

PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED

NO VERBAL OR WRITTEN INFORMATION GIVEN

BY THOMSON INCL. ITS ACENTS OR BABIL OVEES NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY SHALL CREATE A GUARANTY OK IN ANY WAY
INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER
THIS WARRANTY IS THE EXCLUSIVE REMEDY OF
THE CONSUMER. THOMSON INC. SHALL NOT BE
LIABLE FOR INCIDENTAL OR CONSEQUENTIAL
DAMAGES RESULTING FROM THE USE OF THIS
PRODUCT OR ARISING OUT OF ANY BREACH OF PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY DEFION SET LOTTLY ABOVE

## How state law relates to this warranty Some states do not allow the exclusion nor dimitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or


exclusions may not apply to you.

This warranty gives you specific legal rights, and you also may have other rights that vary from

# If you purchased your product outside the USA: • This warranty does not apply. Contact your dealer for warranty information.

## More Information

You can easily mount the player on the back of a car seat with the help of the carrying case. See

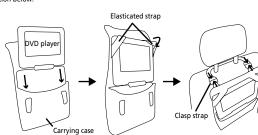

### More on TVG

The license provides you with a 5 digit activation code. Input the activation code in this setup menu with the numeric keys on the remote control. Press **OK** to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the to confirm. When activation is successful, a message "TVG ACTIVATED..." shows at the bottom of the menu.

After you have activated TVG, more settings can be defined.

# Select among Off, Tolerant, Moderate and Strict with increasing filtering standards.

Word Subset Filtering: In addition to the main TVG mode listed above, you can turn certain word subsets on

Damn and hell - filters out variations of "Damn" and "Hell".

Religious - filters out references to deity. To watch religious programs, turn this word subset off. Sexual - filters sexually explicit languages.

CC Off - captions are never displayed.
ON Mute (default) - captions are displayed when offensive language is being filtered.
CC Continous - captions are displayed continually.

CC Channel:
To use the TVG captioning features while watching a DVD movie, your television must be capable of displaying closed captions. Make sure that your TV CC is set to CCl or Cl (closed caption on channel), and that the CC channel on your DVD player is set to CC2 (default setting).

### Make sure the volume is not set too low. There is no sound or sound quality is

- Make sure the audio connector is not
- damaged.

  Make sure the volume is turned up.

  Make sure you have set the player's audio settings correctly.

  Make sure you have entered the correct AV input for your TV.

  Make sure the audio is not set to mute.
- on the proper position.

  Make sure the video jacks are securely
- Make sure you have entered the correct AV input for your TV.

### Make sure the video connector is not Make sure you have set the player's video

**Troubleshooting Tips** 

# Make sure power cord or battery is properly connected and battery is not

- The unit cannot operate when the car adaptor power supply voltage is above 16V.
- There is no sound or picture.

   Check the connection to the mains socket or battery. Make sure the power switch is on.

  Make sure the power outlet is operational
- Make sure the power cord is not
- Make sure the audio jacks are securely

### There is no picture or picture quality Make sure that the Function Switch is

# Thomson Inc. P.O. Box 1976 Indianapolis, IN 46206 - 1976 ©2006 Thomson Inc. Trademark(s) ® Registered Printed in China / Impreso

FXPORTER

Download from Www.Somanuals.com. All Manuals Search And Download

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com