 




User Manual

Ri338

Portable Speaker System for iPod

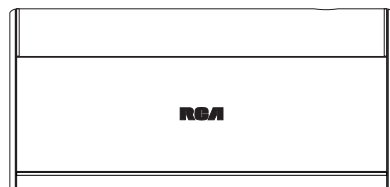

AVC Multimedia,
Markham, Ontario, L3R 1E3
<http://www.RCAav.com>

Read these instructions before using your new product for the first time.

Safety Precautions

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CAUTION: The marking information is located at the bottom of the apparatus.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE.

WARNING

Should any trouble occur, disconnect the AC power adapter and refer servicing to a qualified technician.

Warnings

- The AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adapter should be disconnected from the mains socket outlet completely.
- Minimum 10 cm (4 inches) distances around the apparatus for sufficient ventilation.
- Do not use the unit in places that are extremely hot, cold, dusty or humid.
- Do not restrict the airflow of the unit by placing it in a place with poor airflow, by covering it with a cloth, or by placing it on carpeting.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.

On Operation

Do not turn up the volume while listening to your iPod with no audio signals or very low level inputs. If you do so, the speakers may be damaged when the peak level of the sound is played.

On Use

Use the unit in moderate climates. Never use the unit where it would be subject to:

- Heat sources such as radiators or air ducts.
- Direct sunlight.
- Excessive dust.
- Moisture or rain.
- Mechanical vibration or shock.
- Uneven surface.
- Do not place any heavy objects on top of the unit.
- When the unit is used with an AC power adaptor, do not wrap the unit in a cloth, blanket, etc.. If you do so, the temperature inside and outside the unit may rise considerably, resulting in malfunctioning of the unit.
- If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, the moisture may condense on the lens inside the unit. Should this occur, the unit will not operate. In this case, remove the disc and leave the unit in a warm place for several hours until the moisture evaporates.
- For the unit to operate at its best, it should not be subject to temperatures below 41°F (5°C) or above 95°F (35°C).

 
IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




Unit Controls

Top View

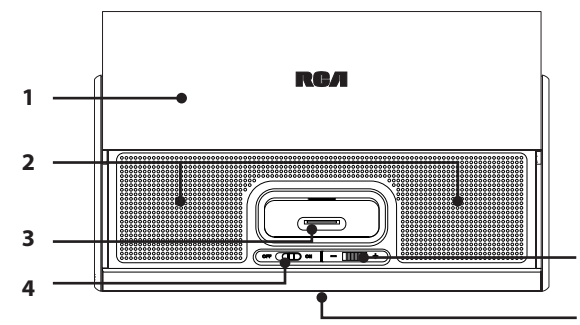

Rear View

 


- | | |
|------------------|---------------------------|
| 1. Sliding Door | 6. Battery Compartment |
| 2. Speakers | 7. VOLUME (+ / -) Control |
| 3. iPod Dock | 8. Power Indicator |
| 4. ON/OFF Switch | 9. AUX IN Jack |
| 5. DC IN Jack | |

Power Supply

Using the AC Adapter

 Using an AC adapter which is not supplied with the unit may damage the unit. The supplied AC adapter operates on AC 100-120V.

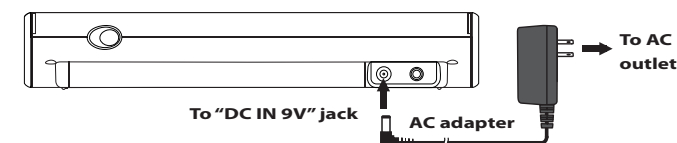


CAUTIONS

- Before use, ensure the rated voltage of the adapter matches your local voltage.
- The supplied AC adapter is for use with this unit only. Do not use it with other equipment.
- If you are not going to use the unit for a long time, disconnect the AC adapter from the wall outlet.
- Whenever the AC adapter is plugged in to a wall outlet, electricity is running through the unit, even if it is in standby mode.

Battery Power

Open the battery door at the bottom of the unit and insert six "AA" size batteries into the battery compartment. Be sure that the batteries are inserted correctly to avoid damage to the unit.

 - In order to conserve the battery life during battery operation, iPod will not be charged. However, iPod will be charged if AC adapter is used.

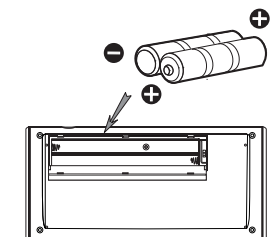

WARNINGS

- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Be sure to install the batteries before unplugging the AC adapter.
- When the unit is going to be left unplugged for a long time, remove the batteries to avoid undue battery discharge and unit damage from battery leakage.
- Do not dispose of battery in a fire; battery may explode or leak.
- Do not mix old and new batteries. Do not mix ALKALINE, standard (CARBON-ZINC) or rechargeable (NICKEL-CADMIUM) batteries.

When to Replace the Batteries

To check the batteries' condition, if the playback is abnormal, replace the batteries with new ones.

CAUTION: When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be strictly followed.

Volume adjustment

To Adjust the Volume

Adjust the VOLUME control to obtain the desired volume.

 
Listening to Your iPod

Compatible iPod Types


- iPod nano 1st generation 1GB, 2GB, 4GB
- iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
- iPod nano 3rd generation (video) 4GB, 8GB
- iPod nano 4th generation (video) 8GB, 16GB
- iPod 5th generation (video) 30GB, 60GB, 80GB
- iPod classic 80GB, 120GB, 160GB
- iPod touch 1st generation 8GB, 16GB, 32GB
- iPod touch 2nd generation 8GB, 16GB, 32GB

Installing the iPod Dock Adapter


1. Before connecting your iPod, you need to install the appropriate iPod Dock Adapter (The adapter is not included, please use the adapter that came with your iPod or is sold separately) in the dock of the unit.

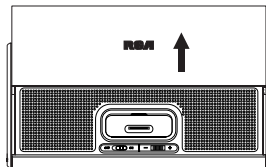

 2. Slide the door in the direction shown in illustration.

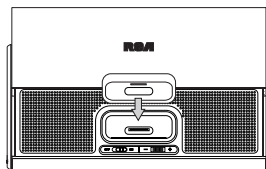


 3. Insert your iPod Dock Adapter into the dock until it sits firmly in place.

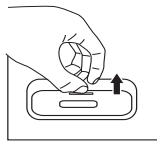

Removing the iPod Dock Adapter

 1. Remove the iPod Dock Adapter as illustrated in the figure to the right.
2. Replace it with another one if desired.

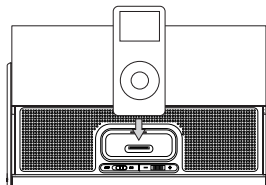

Inserting Your iPod

1. Ensure the appropriate iPod Docking Adapter is installed.
2. Insert your iPod into the connector in the dock.

Starting Playback

1. Slide the ON/OFF Switch to ON position to turn on the unit and the power indicator lights up.
2. Now you can enjoy your music by operating the iPod.

Notes

- When you are listening to iPod, please disconnect all other audio devices.
- Under AC power supply, the iPod will be charged automatically.
- Under battery operation, the iPod will not be charged.
- Please refer to the user's guide that was included with your iPod for more details.

AUX IN Connection

Connecting to AUX IN for Other Sound Sources

You can connect audio devices such as your iPod, CD players or MP3 players to the unit through the AUX IN jack. Use a Line-In cable (not supplied), connect the AUX IN jack on the back panel to the Line Out or Earphone jack of the other audio devices.

Listening to the Connected Device

Turn on the audio device you have attached to the AUX IN jack, then adjust the volume of the audio device and the Speaker System.

More Information

Troubleshooting Tips

System doesn't turn on	<ul style="list-style-type: none"> • Unplug the unit for a moment, and then plug it back in. • Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none"> • Adjust volume setting. • Make sure you've selected the correct function.
iPod does not start play	<ul style="list-style-type: none"> • Make sure the iPod is properly connected to the dock.

ESD Remark:

In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

Cleaning the Exterior

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth.
- Clean the exterior with a soft clean cloth or slightly moistened chamois leather. DO NOT use solvents as it may cause damage to the unit.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Specifications

DC: 9V EXTERNAL DC SUPPLY BATTERY SUPPLY: "AA" SIZE x 6

Specifications and external appearance are subject to change without notice.

Need More Help?
Please visit online help at <http://www.rcaav.com>

Limited Warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranty. These limited warranties extend to the original consumer purchaser and is limited to non-commercial user of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at **AVC's** sole discretion.

During a period of one year from the effective warranty date, **AVC** will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box below.** The determination of service will be made by **AVC** customer support.

PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by **AVC** at its designated Service Center for one year from the defective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the **AVC** service facility you must use the original carton box and packing material or an equivalent as designated by **AVC**.

Your Responsibility

- (1) You must retain your bill of sale to provide proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- (3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of **AVC**, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-800-506-5746, 1-877-252-6873** or **www.RCAav.com**
Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time.
Important:
You are responsible for any transportation, shipping or insurance relative to the return of the product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall **AVC** be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **AVC** arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please contact our web site at **www.RCAav.com**

Important: Also keep your "Bill of Sale" as proof of purchase.

Model no. Product name
Type of set
Serial no. Invoice no.
Date purchased Dealer name

FOR SERVICE AND REPAIR, PLEASE VISIT **www.RCAav.com**

Printed in China
811-833891W011

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>