

RCA


COMPACT
disc
DIGITAL AUDIO

RP3765

AM / FM Dual Wake Clock Radio
with Remote



 Feature	Description
Digital AM/FM CD Clock Radio	A great AM/FM CD clock radio with digital tuning which tunes with maximum accuracy and minimum drift.
TV/Weatherband	Tune into TV band as well as one-touch Instant Weather.
Motorized Vertical Load CD Door	The unit has a motorized CD door system for smooth and easy access.
Multi-Function Dual Wake	Using a unique ASIC chip, three features are combined to make life a little bit easier. They include Graduwake™ Ramp-Up Alarm, Nap Function, Programmable Snooze.
Multi-Color Backlit with 1.25" Blue Display	Large, backlit 1.25" display for easy readability. Select backlit color from blue, green, amber, or white.
High Performance Speaker System	Gives the user the best possible high performance sound in a clock radio with bass reflex speakers.
Auto Brightness Control	When the environment is bright then the LED display will activate the fully brightness. When the environment is dark the LED display will activate very dim light.

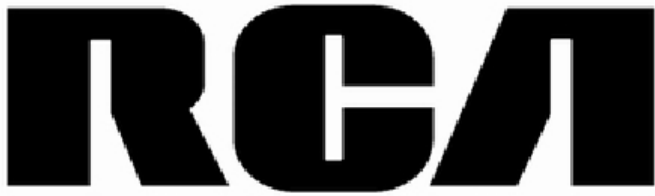

RP3765



Technical Specifications :

BRAND

Brand	RCA
-------	-----

CLOCK

Number of Alarms	2 - Multi-Function Dual Wake
Alarm Mode	CD / Alarm / Radio
Graduwake™	Yes
Programmable Snooze Function	Yes
Programmable Sleep Function	Yes
Nap (Min)	Yes - 10-120
Time / Wake Set Lock	Yes
Time Zone Selection Switch	Yes
Sleep Timer	Yes
Clock / Timer	Yes / -
Automatic Time-Set	Yes
Time Settings	Forward / Reverse
Seconds Time Display	Yes
Fast Forward	Yes
Weekend Alarm Cancel Function	-
Wake-to-Radio, Alarm, or CD	Yes - CD / Radio / Alarm
Dimmer	Auto Brightness Control
"No Worry" Battery Back-Up	Yes - 3V (2xAA) not included
Voice Confirmation	-

DISPLAY

Display Type	LCD
Display Color	Multi-Color (4 Color)
Display Size	2.6" x 1.2"
Backlight Display	Yes
Auto Brightness Control	Yes
AM / PM Indicator	Yes
TV Indicator	Yes
Weather Indicator	Yes
Power Failure Indicator	Yes
Daylight Savings Indicator	Yes
Day of Week Indicator	-
Independent Wake Mode	Yes
Nap Function Indicator	Yes
Weekend Alarm Cancel Indicator	-
CD Track Number	Yes

TUNER

Tuner Type	Digital
Programmable Stations	11
Presets	1
FM Frequency	87.5 MHz - 108 MHz
AM Frequency	520 - 1710 kHz
Scanning System	Manual + Auto
Memory System	Manual
Built-in FM Antenna	Yes
Built-in AM Antenna	Yes
TV \ Weatherband	Yes

CD PLAYER

CD Type	Vertical Load w/Motorized CD Door
Program Memory	-
Mix	Yes
Repeat Function	Yes
Introsan	-
Remain Time	-
Elapsed Time	-
Search Function	Yes
Compatibility	CD-R + CD-RW

SPECIFICATIONS

AC Power	120 V / 50-60 Hz
DC Battery Back-Up	Yes
Headphone Jack	-
Speakers	2 x 1.5" Dynamic
Dimensions (WxHxD) Inches	9.3 x 5.2 x 6.3
Weight: Product/Packaged in lbs	4.18 / 5.3
Packaging (WxHxD) Inches	11.4 x 8.5 x 7.1
Overpack Quantity	3
UPC Code	044319400090

WARRANTY

Limited Warranty	Yes - One Year
------------------	----------------

REMOTE

Model Number	-
Number of Buttons	12

©2004 Thomson Inc.

Trademark(s) ® Registered

Marca(s) Registrada(s)

Photos and features subject to change without notice. Illustration of product finish may vary from actual color.

www.rca.com

Revised 8-18-04



THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE FUSE.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



EN

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Technical Specification

Product: Clock Radio with CD player
Brand: RCA
Model: RP3765

Electrical Consumption

Power Supply: 120V~60Hz
Power Consumption: 22 Watts

IMPORTER

Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151. Piso 13.
Col. Roma. Delegación Cuauhtémoc
C.P. 06700. México, D.F.
Telefono: 52-55-11-020360
RFC: CTM-980723-K55

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase:

Date of Purchase:
Place of Purchase:

Table of Contents

EN

FCC information

Battery Back-Up Operation 2

Power Failure Indicator 2

General Controls 3

Front view 3

Bottom view 3

Top view 4

Back view 4

The Display 5

Clock Display 5

Wake 1 and Wake 2 Display 5

Before You Begin 6

Automatic Time Set 6

Daylight Saving 6

Setting Time Zone 6

U.S. Time Zone (Figure 1) 7

Canadian Time Zone (Figure 2) 7

Setting the Clock 8

Setting Clock 8

Operating Wake Timer 9

Setting the Wake Time 9

Selecting Wake Mode 9

Waking to CD 9

Waking to Radio 10

Waking to Alarm Tone 11

Turning off Alarm 11

Operating the Radio 12

Using the Weather Band 12

TV Band 12

Antennas 13

Tuning the Stations 13

Setting the Preset Radio Stations ... 14

Automatic Radio Station Search 14

Selecting the Preset Radio

Stations 14

Overwriting the Preset Radio

Stations 14

Deleting the Preset Radio Stations 14

Operating the CD Player 15

Listening to Compact Disc 15

Selecting Play Mode 15

Alarm Settings 16

Setting Sleep Time 16

Sleep to Radio 16

Sleep to CD 16

Viewing Remaining Time 16

Nap Mode 17

Stopping the Nap Alarm 17

Cancelling the Nap Alarm 17

Snooze 17

Auto Brightness 17

Backlight Color Select 17

Care and Maintenance 18

U.S. Limited Warranty 19

Canadian Limited Warranty 21

Battery Back-Up Operation

EN

This clock radio is equipped with a memory holding system that can be powered with 2 "AA" batteries (included). The power failure protection circuit will not operate unless battery is installed.

When normal household power is interrupted, or the AC line cord is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if the remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

Install batteries as follow:

1. Unlock the battery compartment door (located at the bottom of the radio) by sliding the tab away from the door.
2. Remove the battery compartment door.
3. Insert 2 "AA" batteries.
4. Replace the compartment door and slide the tab to lock battery compartment.

 
Power Failure Indicator

When the AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless optional battery is installed). After the AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

General Controls

EN

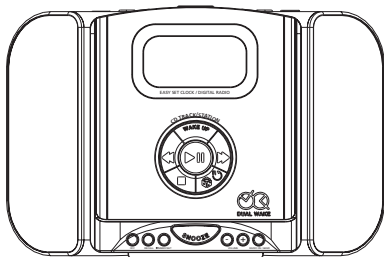



Front view





Bottom view

WAKE UP CD TRACK / STATION- sets the wake up radio station or CD track.

  - selects repeat 1 / repeat all / shuffle / repeat shuffle in CD mode.

 - skips / searches backward.

  - starts / pauses CD playback.

 - skips / searches forward.

 - stops CD playback.

OFF - turns off the radio / alarm / CD

RECALL - recalls available preset radio stations.

 
MEMO/SET - sets and stores preset memory in radio mode.

SNOOZE - turns off the alarm momentarily.

VOLUME - - decreases volume.

VOLUME + - increases volume.


RADIO ON/BAND- turns on the radio / changes radio band.

TIME ZONE  - Slide to select different time zone.


DAYLIGHT SAVING TIME - Press to turn on / off the Daylight Saving function

General Controls

 EN

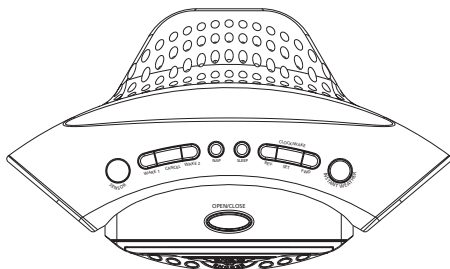

Top view

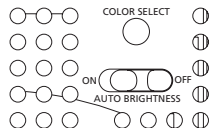 

Back view

OPEN / CLOSE - opens / closes the CD compartment.

WAKE 1 - activates WAKE 1 setting, press repeatedly to cycle wake mode:



CANCEL - cancels WAKE setting.

WAKE 2 - activates WAKE 2 setting, press repeatedly to cycle wake mode:



NAP - sets the alarm to sound after a specific period of time. (Alarm tone only)

SLEEP - activates SLEEP function.

SET CLOCK / WAKE - sets clock time and wake setting..

REV / FWD - change time / radio frequency / CD track

 
INSTANT WEATHER - recalls available weather stations.

COLOR SELECT - Press to toggle among 4 backlight colors.

AUTO BRIGHTNESS - Turns on / off the auto brightness function.

The Display

EN

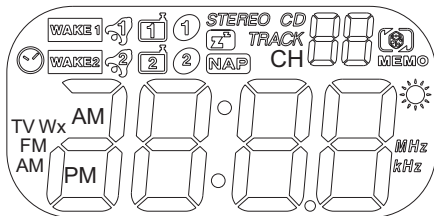

Clock Display

	In clock setting mode.
	Nap activated.
	Sleep activated.
AM	In AM radio band.
FM	In FM radio band.
TV	In TV radio band.
Wx	In Weather radio band.
MHz/kHz	Radio frequency unit.
CD	In CD mode.
	Repeats the current track.
	Repeats the whole disc.
	Plays tracks randomly.
	Plays random track repeatedly.
	In CD mode, displays track number.
	No disc detected.
	In radio mode, displays memory recall number.
	Displays when the alarm radio station is set.
	Daylight saving.

Wake 1 and Wake 2 Display

	In wake 1 setting mode.
	In wake 2 setting mode.
	Wake 1 source.
	Wake 2 source.
	Wake to CD.
	Wake to alarm tone.
	Wake to radio.
AM	AM time indicator.
PM	PM time indicator.
	Wake or clock time.


Before You Begin

EN

Automatic Time Set

You do not have to set the clock time as a built-in automatic time set system is equipped in this clock powered by 2 X AA batteries (included). All you have to do is to plug this clock for power and current time will be shown automatically.

Daylight Saving

 
You can press and hold **DAYLIGHT SAVING TIME**  at the bottom of the unit to turn on / off the Daylight Saving function in areas observing / not observing such time change.

WARNING: Please avoid playing with these buttons after entering the Clock/Alarm set mode.

Setting Time Zone

Before plugging in for power, follow the steps below to select time zone.

You may slide the time zone selector at the bottom of the clock to Eastern (1), Central (2), mountain (3) or Pacific (4).



Refer to Figure 1 for U.S. Time Zone details.

Refer to Figure 2 for Canadian Time Zone details.

 
Before You Begin

EN

U.S. Time Zone (Figure 1)



Canadian Time Zone (Figure 2)

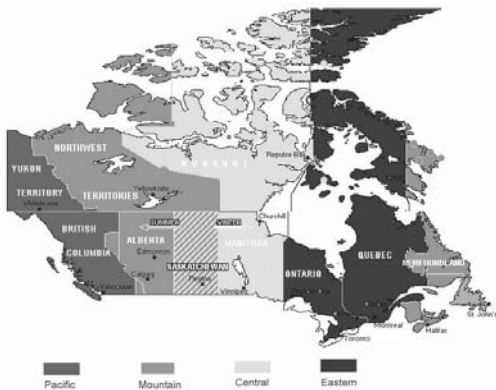

Setting the Clock

This unit has a built-in automatic time set system that automatically generates the correct clock time once the unit is plugged in. You are not required to set the clock manually, however, in case the memory holding batteries are accidentally removed, you may set the clock manually with following procedures:

**Note:**

The clock is in 12 hour format. The AM and PM indicators will light to show am and pm time

respectively.

EN

Setting Clock

1. Be sure Time Zone and Daylight Saving Time is adjusted before operating the clock.
2. Press **SET CLOCK/WAKE** repeatedly until the clock setting icon ☺ is displayed.
3. Press **REV** or **FWD** to set the time. Press and hold the respective buttons to fast reverse or fast forward clock time.
4. Clock time will automatically be saved if no buttons are pressed after a few seconds. You can also press **SET CLOCK/WAKE** once to save your setting and return to standby mode.

Operating the Wake Timer

EN

Setting the Wake Time

1. Press **SET CLOCK/WAKE** repeatedly until **WAKE 1** or **WAKE 2** icon shows on the display.
2. Press **REV** or **FWD** to set the wake time. The time decrements or increments will follow by a faster rate when you press and hold either **REV** or **FWD**.
3. Press **SET CLOCK/WAKE** repeatedly to exit setting wake time mode. Or else the unit will exit setting wake time mode when no button is pressed within 5 seconds.




Note:

The unit equips with **GRAD-U-WAKE** feature, the alarm tone volume will

increase gradually to its maximum in about 30 to 45 seconds.

Selecting Wake Mode

To change to another wake mode (e.g. from CD to radio), simply press **WAKE 1** or **WAKE 2** repeatedly to scroll through wake options. 




Attention:

When the AC power is disconnected, the unit will enter DC backup mode, all wake mode will be reverted to alarm tone.

Waking to CD

When the waking to CD is selected, ① / ② icon will light.

1. Press  to turn on the CD.
2. Set the wake time.
3. Press **WAKE 1** or **WAKE 2** to select waking up by CD, ① / ② will light accordingly.
4. Press **VOLUME + / -** to adjust to your desired wake up volume.
5. Press **OFF** to stop the CD playback.

You can select your CD wake up track by the following procedures.

1. In CD mode, while pressing **WAKE UP CD TRACK / STATION**, press **REV** or **FWD** to select your desired CD wake up track.
2. Release **WAKE UP CD TRACK / STATION**, and the CD wake up track is set.
3. To reset the CD wake up track, follow the above procedures and set the CD wake up track to 1.



Note:



If the CD compartment is empty, the alarm tone will sound instead even the **WAKE TO CD** mode is



selected.

Operating the Wake Timer

EN


Waking to RADIO

When the waking to radio is selected,  /  icon will light.

1. Press **RADIO ON/BAND** to turn on the radio.
2. Set the wake time .
3. Press **WAKE 1** or **WAKE 2** to select waking up by RADIO  /  will light accordingly..
4. Press **VOLUME + / -** to adjust to your desired wake up volume.
5. Press **OFF** to turn off the radio.

You can select your wake up radio station by the following procedures.

1. Press **RADIO ON/BAND** to turn on the radio and select the band.
2. Press **REV** or **FWD** to tune to your desired radio station.
3. Press and hold **WAKE UP CD TRACK / STATION** to store the current radio station as the wake up radio station.

 will show on the display.

You can cancel your wake up radio station by the following procedures.

1. Press **RADIO ON/BAND** to turn on the radio.
2. Press **RECALL** repeatedly to select the wake up radio station.
3. Press and hold **MEMO/SET** to cancel the wake up radio station.





Note:

"AL" refers to the Alarm Station. If no WAKE STATION is set, the wake up radio station will stay at your last listening radio station.

Operating the Wake Timer

EN

Waking to Alarm Tone

When waking to alarm tone is selected,  /  icon will light. You cannot adjust the alarm tone with volume.



Tip:

If you set the SLEEP function with low volume level before going to bed, we advise using Waking to

Alarm Tone mode to wake you up since the volume will automatically increase.



Note:

Whenever the unit is in wake up setting mode and wake up on mode, the backlight color will be changed into red, regardless of the previously set backlight color.

Turning off Alarm



1. Silence the alarm momentarily

Press **SNOOZE**. The alarm will sound again when the snooze period is over. (see "**Snooze**" section).

2. Stop the alarm

Press **OFF** and the alarm will be on again the following day at the same time.

3. Disable the alarm permanently

1. Press **CANCEL**.
2. The **WAKE 1**  or **WAKE 2**  icon will flash, while it is flashing, press **WAKE 1** or **WAKE 2** to cancel the alarm. Corresponding **WAKE** indicator will disappear.
3. To activate the alarm again, press **WAKE 1** or **WAKE 2**, and the **WAKE** indicator will appear, the previous pre-set time remains unchanged.



Note:

You can activate the previous wake settings by pressing **WAKE 1** or **WAKE 2**.

Operating the Radio

Using the Weather Band

Weather information is given continuously from U.S. Government Weather Stations on frequencies from 162.4MHz to 162.55MHz.

The Weather transmission, broadcast 24 hours a day, are taped messages that are repeated every 4 to 6 minutes and revised and updated as needed to match the changing weather conditions. For additional information, check your location office of the National Weather Service (Department of Commerce).

1. Press **INSTANT WEATHER** to access Weather Bands with strong signals to the unit.
2. Press **REV** or **FWD** to select among the 7 weather channels.
3. **Wx** will light and the channel number will show on the display.

Weather Band

ch 1	162.400 MHz
ch 2	162.425 MHz
ch 3	162.450 MHz
ch 4	162.475 MHz
ch 5	162.500 MHz
ch 6	162.525 MHz
ch 7	162.550 MHz

TV Band

CH 2-13 are available for TV Band.

1. Press **RADIO ON / BAND** to access TV Bands.
2. Press **REV** or **FWD** to select among the TV channels.
3. **TV** will light and the channel number will show on the display.



IMPORTANT:

The listening range of NOAA weather stations varies from 10 miles up to a maximum of 40 miles from the station's transmitter. In some areas of the United States, weather transmissions cannot be monitored. The effective range of this radio will have side variations due to the height of the local transmitting antenna, atmospheric conditions, and the terrain between the transmitter and your radio's location.

TV Band

ch 2	59.75 MHz
ch 3	65.75 MHz
ch 4	71.75 MHz
ch 5	81.75 MHz
ch 6	87.75 MHz
ch 7	179.75 MHz
ch 8	185.75 MHz
ch 9	191.75 MHz
ch 10	197.75 MHz
ch 11	203.75 MHz
ch 12	209.75 MHz
ch 13	215.75 MHz

Operating the Radio

EN

Antennas

FM antenna - The power cord acts as your FM antenna. It picks up moderate to strong radio stations and eliminates the need for an external antenna in most strong signal areas. Be sure the power cord is stretched to its full length. Do not coil or bunch the cord together. Changing position of the power cord may improve reception.

AM Antenna - A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

Tuning the Stations

1. Press **RADIO ON/BAND** (located on the front of the radio) to turn on the radio.
2. Press **RADIO ON/BAND** repeatedly to select the desired broadcast band.
3. Press **REV** or **FWD** to tune to your desired radio station.
4. Press **VOLUME + / -** to adjust to your desired listening level.

 


Tip:

"UP" will show briefly on the display when you press **VOLUME+**.

When you press and hold **VOLUME+** until the maximum volume is reached, "UP" will flash on the display.

"dn" will show briefly on the display when you press **VOLUME-**. When you press and hold **VOLUME-** until the minimum volume is reached, "dn" will flash on the display.



Operating the Radio

EN

Setting the Preset Radio Stations

1. Press **RADIO ON/BAND** to turn on the radio.
2. Press **RADIO ON/BAND** to change the broadcast band.
3. Press **REV** or **FWD** to tune to your desired radio station.
4. If you want to memorize this radio station, press **MEMO/SET** once, and then press **RECALL** repeatedly to choose the radio station number you want to record in.
5. Press **MEMO/SET** again to confirm.
6. If you set the radio station in the **AL** location, it will be the wake up radio station of the alarm.



Note:

This unit can store up to 11 preset radio stations, while **AL** location is for the wake up radio station.

Automatic Radio Station Search

1. Press **RADIO ON/BAND** (located on the front of the radio) to turn on the radio.
2. Press and hold **REV** or **FWD** for 2 seconds, it will automatically search a radio station for you.

Selecting the Preset Radio Stations

1. Press **RADIO ON/BAND** to turn on the radio.
2. Press **RECALL** repeatedly to select your desired preset radio station.

Overwriting the Preset Radio Stations

 
1. Press **RADIO ON/BAND** to turn on the radio.
2. Press **REV** or **FWD** to tune to your desired preset radio station.
3. Press **MEMO/SET** once and then press **RECALL** repeatedly to choose the radio station number you want to overwrite.
4. Press **MEMO/SET** again to confirm.

Deleting the Preset Radio Stations





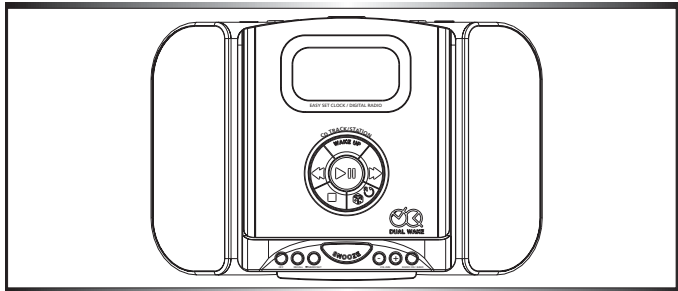

1. Press **RECALL** repeatedly to select your preset radio station you want to delete.
2. Press and hold **MEMO/SET** for 3 seconds to delete the selected preset radio station.

Operating the CD Player






EN



Listening to Compact Disc

1. Press **OPEN/CLOSE** to open the CD compartment.
2. Insert a disc, press **OPEN/CLOSE** to close the CD compartment door.
3. Press .
4. Press **VOLUME + / -** to adjust to your desired listening level.
5. Press  or  to skip backward or forward the CD track.
6. Press and hold  or  to search backward or forward within the CD track.
7. Press  to stop CD playback.

Selecting Play Mode

1. Start CD playback.
2. Press  to toggle between different play modes.
 -  - repeats the current track.
 -  - repeats the whole disc.
 -  - plays tracks randomly.
 -  - plays random track repeatedly.



Attention:


The unit only supports 5" CD, 3" CD may not be played properly.

Alarm Settings

EN

Setting Sleep Time

In sleep mode, the radio and CD will turn off automatically. To set the sleep time, simply:

1. Press **SLEEP**, then the time display will exhibit **0:59** and the radio will turn on (default). While holding **SLEEP**, press **REV** or **FWD** to set the sleep time. The time range is from 1 minute to 2 hours (default is 0:59).
2. Release **SLEEP** and the current time will be shown again,  will show on the display, and the sleep time is set.

Sleep to Radio

1. Under sleep mode, press **RADIO ON / BAND** to turn on the radio.
2. Sleep radio station will automatically switch to the current radio station, you may select the radio station as usual.
3. Once the sleep time is reached, the radio will turn off automatically.

You can reset to sleep to a different radio station, simply:


1. Press **RADIO ON/BAND**.
2. Press **REV** or **FWD** to tune to the radio station you want to sleep to.



Tip:

The unit will enter either CD or Radio mode after **SLEEP** is pressed, depending on the previous sleep setting.

Sleep to CD

1. Under sleep mode, press  to start CD playback.
2. CD play mode will be automatically in Repeat All mode when using Sleep to CD setting.
3. The unit will turn off automatically once the sleep time is reached.

Viewing Remaining Time

Press **SLEEP** to read the remaining sleep time.



Tip:

If you decide to turn off the unit sooner, press **SNOOZE** or **OFF**.



Tip:

When the sleep mode is activated again, the sleep time will be the same as the one you have set before.

Alarm Settings

EN

Nap Mode

For catnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time. Simply:

1. Press **NAP**, the **NAP** indicator will flash. While the **NAP** indicator is flashing, press **REV** or **FWD** to adjust nap time. The time range is from 10 minutes to 2 hours at 10 minutes interval (default is 20 minutes).
2. Wait 3 seconds or press **NAP** again to confirm, the **NAP** indicator will show on the display.
3. Press **NAP** once to show time left, after 3 seconds, the display will return to clock time.

Stopping the Nap Alarm

When the NAP alarm sounds, you can press **OFF** to stop it.

Cancelling the Nap Alarm

Press and hold **NAP** for 5 seconds to cancel the nap setting.



Tip:

Only alarm tone can be selected in NAP mode.

Snooze

This operation allows extra sleep time after the alarm is on. The alarm will be off by pressing **SNOOZE** until the snooze period is over. Snooze function can be used repeatedly up to 2 hours. After this, the alarm will turn off until the next alarm conditions are met. Set the "quiet" period as follow:

1. While pressing **SNOOZE**, press **REV** or **FWD** to set the "quiet" period (the default time is 9 minutes) from 1 minute to 30 minutes. Release **SNOOZE**, then the "quiet" period is set.


Auto Brightness

Slide the **AUTO BRIGHTNESS** switch ON  OFF at the back of the unit to the **ON** position. The brightness of the LCD display will vary automatically according to the environment.

Slide to the **OFF** position, the display will remain at its brightest level.

Backlight Color Select

You can choose among 4 different backlight color - green, blue, amber and white.

1. Before a specific color is set, the backlight color will keep changing.
2. Press **Color Select**  at the back of the unit to toggle among different backlight color.
3. If the AC power and backup batteries are removed, the 4 backlight colors will starting changing again once the AC power is resumed.

Care and Maintenance

EN

Handling Compact Discs

- Do not touch the signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speeds inside the player. Do not use damaged (cracked or warped) discs.

Cleaning Compact Discs

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

CD Lens Care

When your CD lens gets dirty it can also cause the unit to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality. For instructions on cleaning the CD lens, refer to the ones accompanying the lens care.

Cleaning the Exterior

Prior to cleaning the exterior, be sure to unplug the power cord from the AC power outlet. Wipe the exterior with a soft, clean, and slightly water-dampened cloth.

Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Warning: Never operate this product with the cabinet removed.
- The CD player of this unit uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. Also, to keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time.

U.S. Limited Warranty

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.
Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927**

- Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

U.S. Limited Warranty

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

This warranty does not apply. Contact your dealer for warranty information.

Canadian Limited Warranty

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.
6200 Edwards Blvd.,
Mississauga, Ontario, L5T 2V7
Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>