
Tocom: 5644 328A (EN/E)

RСЛ

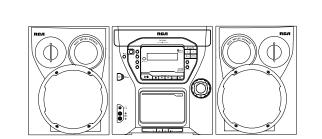

## EN/E

It is important to read this instruction prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipo

## Important information

#### Precations

 This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions. • Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs. • Do not touch the pick-up lens which is located inside the disc

compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses

General controls

**DEMO/DIMMER** – To turn the

to adjust display brightness

VOL+ / VOL- - To increase/

► II – To play and pause the

PREV/ Here .NEXT/ PREV - To tune

to fast search through the CD.

**STOP** – To stop playing CD.

radio frequency; to skip CD track;

OPEN/CLOSE - To open and close

REPEAT - To repeat a track, CD, or

decrease the volume

current CD

CD disc tray.

all CDs

feature demonstration on or off:

Headset safety Have a Blast-Just Not in your eardrums! Make sure vou turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in

that you are unable to hear

INTRO – To turn INTRO mode on

or off to play the first 10 seconds

◄ FOLDER/PRESET ► – To select

station and previous / next folder

SLEEP - To select the time interval

"R3" or "UM4" batteries

Cassette functions cannot

structure for simple mp3/WMA

only layer of folders, the tracks

The first 100 folders from the

The unit reads the first 412

first 255 files in each folder.

Please take care when

loading or unloading

discs in the disc drawe

Read below for details.

• Remove all discs from the

or transporting the unit.

of the disc drawer when

Do not put discs in the trays

disc drawer before moving

files from each discs and the

27

first 8 folder levels can be read

discs. If there are more than

may be rearranged.

on this unit.

be operated from the

24

in minutes before the unit turns

during mp3/WMA CD plavback.

previous / next tuner preset

• The remote control

must be inserted

with 2 "AAA" or

prior to use.

remote control.

of each track.

off

what is around you.

place.

Do not play your headset at high volume. Hearing experts warn against extended highvolume play.


user manual

RS2663

manual de usuario

If you experience ringing in your ears, reduce volume or discontinue use. You should use with extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high

FCC information This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures: Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference). · Move the unit away from the equipment that is receiving interference. Plug the unit into a different

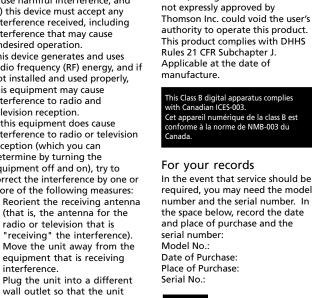



extended (you may even want to

if possible, the higher the better).

You'll also need to connect the

the unit if you listen to AM

stations. Rotate the AM loop

antenna for better reception.

BASS

[kHz]

1. Press and hold DIMMER•DEMO

repeatedly to select the desired

for more than 2 seconds. 2. While "DIMM" is displayed,

press DIMMER•DEMO

**Display brightness** 

level (DIMM 1-3)

Playing discs

playback.

Play and load

simultaneously

close the tray.

playing

track.

• Press ► u to begin or pause

1. Press OPEN/CLOSE or ≜ to

open the tray while a CD is

2. Load/change discs for available

trays by pressing **DISC SKIP**. 3. Press **OPEN/CLOSE** or **▲** to

Searching through a CD

Press and hold Here / Here to search

through a CD while it is playing.

mono and stereo for stereo FM

the appropriate function: CD,

Make sure headphones are not

TAPE, Tuner.

Make sure mute is off.

stations


playback, and STOP/= to stop

• Press + / >>> to select a specific

Volume level

AM antenna loop to the back of


tape it to the wall behind the unit

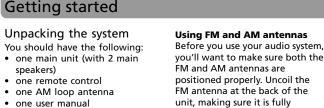

#### Connections Back view 1. FM pigtail antenna 2. AM loop antenna jack

branch circuits.

3. Main speaker jacks

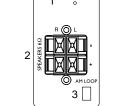

Display

Playback mode

Current mode

Current disc trav

Showing demonstration

display operations

Loading discs

select CD mod

open the drawer.

. Press SOURCE repeatedly to

2 Press OPEN/CLOSE or A to

3. Insert up to five discs with

to rotate the disc carrier.)

close the drawer. Loaded disc

4 Press OPEN/CLOSE or A to

Press DISC SKIP to skip discs.

Selecting folders (mp3/

to the previous folder

to the next folde

tracks (TT) is displayed

Press < FOLDER/PRESET to go

Press FOLDER/PRESET ► to go

The folder number (TF) shows

briefly then the total number of

position icon lights.

Selecting discs

WMA CDs only)

In stop mode,

label face up. (Press DISC SKIP

off demonstration mode. The

Press DIMMER • DEMO to turn on

demonstration scrolls through all



For your safety

The AC power plug is polarized

other) and only fits into AC power

outlets one way. If the plug won't

go into the outlet completely, turn

the plug over and try to insert it

the other way. If it still won't fit,

contact a qualified electrician to

different one. Do not attempt

to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC

SHOCK, MATCH WIDE BLADE OF

PLUG TO WIDE SLOT, FULLY

Connecting main speakers

Match the red wire (on the left

speaker) to red terminal for the

left speaker (L) on the back of the

unit and the black wire (on the left

speaker ) to the black terminal for

left speaker (L). Follow the same

procedure to connect the right (R)

NOTE: Make sure the insulation is

completely removed from the

Clock and timer

1. Press and hold **CLOCK** until

2. Press ◄< /► to set the hour

4. Press PROG•SET to save

• When system is ON,

to display the current

When the system is OFF

turn off to save power

Shuffling play order

of tracks in random order.

Sampling tracks

turn INTRO mode off.

Repeat

Press 🕸 to turn on/off the playing

Press **INTRO** to play the first 10

current disc, all discs in the tray, or

seconds of each track on the

Press **REPEAT** to repeat the

current track, current disc, all

discs, or turn REPEAT mode off.

time for about 2 seconds.

(standby), the display will

the hour flashes on the display

and then press **CLOCK** to shift

3. Press Hard / hard to set the minute.

settings or a to quit setting

you can press CLOCK

Setting the clock

to minute digits.

ends of the speaker wires at all

 $\bigcirc$ 

Release tab to

lock wire in the

terminal.

INSERT

speaker.

Push Speaker

down to insert

connection points

terminal tab

change the outlet, or use a

(one blade is wider than the

Product: Audio System Brand: RCA Model: RS2663 Power Supply: 120V ~ 60Hz Power Consumption: 120 Watts

Installation

free from other surfaces

4'

Front view

Setting the timer

the hour flashing.

minute digits.

2. For setting time, press ++ /

1. Press and hold TIMER until ON

► to set the hour and then

press TIMER to shift to the

3. Press I / I to set the minute

4. Press TIMER to change to OF

(timer off time) with hour

for timer off time setting.

source. Press ₩ / ► to select

6. Press TIMER to set the volume.

unit or press VOL +/- on the

remote control to select the

among TUNER, TAPE and DISC.

Adjust the volume on the mair

5. Press TIMER to select the

desired volume level.

Activating the timer

Press CD INFO

repeatedly to view

elapsed track time,

during playback.

them is repeated.

SHUFFLE functions

track number, track remain

time and disc remain time

The first 99 tracks of each

disc will be shuffled and

played once before any of

You may also press REPEAT

before activating INTRO &

In stop mode for mp3 and

WMA CDs, press **STOP** to

return to the first track of

the current disc. The total

current disc is displayed (TT)

Remote control does not work

Check that the batteries are

Check the system is plugged

Point the remote directly at

the system's front panel.

Move closer to the system.

Remove any obstacles between

the remote and the system.

Replace weak batteries

properly installed.

into power source

number of tracks on the

to select 1 disc or all discs

setting.

7. Press PROG•SET to save

settings or **STOP** to quit

Press and release TIMER to turn on/off the timer. The timer is

active when the clock icon () is

flashing. Repeat steps 2 & 3

(timer on time) appears with

A

ACCOMP THE PR


Service information This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide. Don't infringe This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for which it is not intended is unlawful and therefore not condoned by Thomson.

# Technical information Some of the following informa

tion may not apply to your particular product: however, as with any electronic product, precautions should be observed during handling and use. · Read these instructions Keep these instructions. • Heed all warnings. • Follow all instructions. • Do not use this apparatus near water. • Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat Do not defeat the safety purpose of the polarized or grounding-type plug. A A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is

Unplug this apparatus during lightning storms or when unused for long periods of polarized plug has two blades Refer all servicing to gualified with one wider than the other service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord o plug is damaged, liquid has provided for your safety. If the been spilled or objects have fallen into the apparatus, the provided plug does not fit into

# General controls

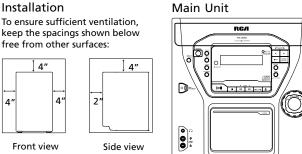

SOURCE – To select among CD player, tuner, tape player and AUX sources.

Sleep mode You can select the time interval in minutes before the unit turns off automatically. 1. Press SLEEP to select among OFF, 120, 90, 60, 45, 30, 15 and 5 minutes. The sleep icon flashes on the display when sleep mode is activated. 2. When sleep is activated, press SLEEP once to view remaining sleep time. Press SLEEP again when the remaining sleep time is displayed to change the sleep time. Sleep is automatically deactivated when the unit is turned off.

# PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE IMPORTANT SAFETY INSTRUCTIONS

the obsolete outlet.

particularly at plugs,

Use only with the cart,

or table specified by

the manufacturer, or

stand, tripod, bracket,

sold with the apparatus. When

moving the cart/apparatus

OPEN/CLOSE – To open or close

DISC SKIP - To skip to the next

VOLUME - To increase/decrease

the disc tray

CD in the tray.

the volume.

combination to avoid injury

a cart is used, use caution when

the apparatus.

manufacturer

from tip-over.

your outlet, consult an apparatus has been exposed to electrician for replacement of rain or moisture, does not operate normally, or has been Protect the power cord from dropped ADDITIONAL SAFETY being walked on or pinched INFORMATION convenience receptacles and Apparatus shall not be the point where they exit from exposed to dripping or splashing and no objects filled Only use attachments/ with liquids, such as vases, accessories specified by the shall be placed on the

apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through

vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product.

- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer

serviceable components

**ON BATTERIES**, adhere to the following precautions: A. Any battery may leak electrolyte if mixed with a different battery type, if inserted\ incorrectly, or if all batteries are not replaced at the same time. B. Any battery may leak electrolyte or explode it disposed of in fire or an attempt is made to charge a battery not intended to be recharged C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.

IF YOUR PRODUCT OPERATES

new settings for Clock and Timer modes BAND/AUTO PROG. - To change

between FM and AM tuner bands; to enter auto preset program in FM mode

CD INFO – To select among disc DIMMER•DEMO - To turn the display information.

> REPEAT – To select among repeat modes

the previous or next folder in

mp3/wma disc mode; to select the previous or next preset stations in tuner mode

GAME •mp3•L/R – Jacks for auxiliary input connection

Tape Player

■▲ STOP/EJECT

PLAY 

 $\Omega$  – Jack for connecting head-TAPE – To select the tape player phones

AUX – To select the Aux mode

CD INFO – To select among disc

►► FAST-FORWARD lisplay information

B. BOOST - To turn Bass Boost on or off.

# Sound features

Bass boost Press BASS BOOST to turn on/off boosting the bass frequency. The BASS icon lights on the display

Muting audio Press <a>A</a> on the remote control to cut or restore the sound.

# Tape player

when it is activated.

- 1. Press SOURCE repeatedly to
- select TAPE. 2. Press 
  to open the cassette
- 3. Insert a tape into the door and push the door closed.
- 4. Press ◀◀ ▶▶ to position the
- tape to the desired starting
- position.
- 5. Press ► to begin playback

#### feature demonstration on or off: to adjust display brightness. TIMER - To enter the timer setting mode and turn the timer on/off. **ON/STANDBY** - To turn power on CLOCK - To show time and enter or off (STANDBY mode). clock setting mode. BASS BOOST – To turn BASS Press ON/STANDBY to BOOST on or of 3º turn the system on in the previously used Image: A state of the state mode. Press CD, TAPE, TUNER to skip CD track: to fast search or AUX (Remote only) to select through the CD. the corresponding mode. Look at the display icons to identify I – To play or pause CD. the current mode – To stop CD playback PROG•SET – To enter program

mode for CD and tuner; to apply



 


# FOLDER/PRESET < / ► - to select


ပံ – To turn power on or off

CD – To select the CD player





Remote control

 

🕲 – To turn on/off random plavback.

FM ST. - To switch between FM stereo and mono modes

DISC SKIP - To skip to next CD

 $\odot$ 

# CD playback

This unit is compatible with CD-RW/ CD-R discs for playback.

## Notes on CD-R/RW Disc:

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/ RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to
- read the disc. Playback capability for CD-RW discs may vary due to variations in the quality of the

# used to create the disc. Notes on Simple mp3/WMA

#### Playback: This unit is compatible with

- simple mp3/WMA discs. Text information can be shown (e.g ID3 tags)
- It is strongly recommended that you use a single folder
- CD-RW disc and the recorder they are still moving. • Do not push or force the rotation of the disc trays Always use the **DISC SKIP** button.
  - Do not put discs in any unexposed disc trays. • When an error occurs and

desired frequency.

displayed.

number (1-32)

preset.

most recently accessed

program location will be

is preferred, press (44/) to

select to the desired preset

4. Press PROG•SET to store the

selected frequency at that

Auto preset programming (FM

the disc drawer does not close, empty all disc trays and try again.

# Radio

- Press SOURCE or TUNER on the remote control to select TUNER.
- Selecting tuner band Press BAND or TUNER to select between AM and FM radio bands
- Tuning to a station Press I / I to select frequencies. Press and hold to start auto seaching for the next available station

Preset and tune modes The tuner can be in either TUNE or PRESET mode. When in PRESET mode, the PROG light is on

only) Press and hold BAND (TUNER on the remote control) for 2 seconds to scan stations in the FM band. The stations will then be stored as preset channels. A maximum of 32 stations can be stored.

#### Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button.

Presetting stations You can stop the automatic scar Manually setting presets by pressing any button, but the erased stations cannot be 1. Press ₩ / ► to access the recovered. 2. Press PROG•SET button. The

#### Using presets Press **◄ FOLDER/PRESET ►** to access the previous or next preset 3. If a different program location station. The display first shows the preset program number and after a few seconds, the frequency will be displayed. (e.g. P:01 is preset 1)

# Troubleshooting tips

## System will not turn on Check power cord for a secure connection. Unplug the unit for a moment.

#### and then plug into power plugged in source again Check the outlet by plugging **Poor radio reception** in another device Check antenna connection

- Move antenna. No sound Turn off nearby electrical Increase the volume setting appliances, such as hair dryer, Check connection to speakers. vacuum cleaner, microwave,
- · Check that you have selected fluorescent lights

- Troubleshooting tips
- Suppressing stereo signal CD does not play Check that CD is in the tray. Press FM ST. to select between FM Check that CD label is facing Check that PAUSE mode is not Check that CD function is selected Use CD lens cleaner.
  - Clean the disc. • Try another CD. CD sound skips Clean the disc. Check disc for warping, scratches, or other damage
    - Check if something is causing the system to vibrate. If so. move the system. Make sure the speakers are at least 3 feet away or on a different surface from the main unit.

## CD button will not respond, or does not change discs when you press DISC SKIP

Switch to another function (TAPE, Tuner) and then back to CD.

EXTENT PROHIBITED BY

IMPLIED WARRANTY OF

ON THIS PRODUCT IS LIMITED

WARRANTY PERIOD SET FORTH

How state law relates to this

APPLICABLE LAW, ANY

TO THE APPLICABLE

ABOVE

warranty:

# Additional information

CD program

CDs in the trav.

24

You can program the CD player to

stopped, press PROG-SET to

available program number: "-P:01," with "- -" flashing,

prompts you for the first track

enter program mode. The

2. Press Here / Image / Image

(press **DISC SKIP** to select a

track from a different disc).

to assign the selected track to

the program number. After 3

seconds, you are prompted for

the next track in the program

list. (In CD program mode,

PROG icon will be lit.)

3. Immediately press PROG•SET

system displays the next

play up to any 32 tracks on the

1. While the CD player is

in the program list.

Playing a program List

. While the CD player

the program list.

"CLEAR".

enter PROGRAM mode

► IL.

While in PROGRAM mode, press

**Displaying the program List** 

stopped, press PROG•SET to

2. Press PROG•SET repeatedly to

list each track assignment in

**Deleting program List** While in PROGRAM mode, press

and hold STOP / 
for 3 seconds.

し、

They unit displays the message

Only the first 99 tracks

from each disc can be

programmed.

#### Disconnect the audio system from piece of adhesive tape over the the power source before performing any maintenance Quit Slacking - A little Cleaning bit of slack in your tapes can cause Clean the exterior of the system

scratches on the tape, using a soft dust cloth or worse yet, the tape could break. If you notice some slack in CD Player the tape, use a pencil to tighten it CAUTION! This system operates up before you insert it. with a laser. It must be opened by only a qualified technician

# Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

## To protect recordings on one or both sides of a tape, remove the

corresponding tab. If you later

want to

affix a

record on

the tape,

with a soft cloth from the 

Handling CDs




### CD Lens Care When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompany

back of the set. The descriptions and characteris tics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details


 Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs Cleaning CDs


# Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently

inner edge toward the outer perimeter

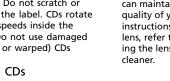

Unio

 

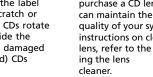

should any discrepancies arise in other languages.

Limited warranty

Limited Warranty (US) What your warranty covers: Defects in materials or

# workmanship. For how long after your

purchase: • One year from date of purchase. • The warranty period for rental

units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

## What we will do:

Thomson Inc Product Exchange Center Provide you with a new, or at 11721 B Alameda Avenue our option, a refurbished unit. Socorro, Texas 79927 The exchange unit is under warranty for the remainder of

 Insure your shipment for loss the original product's warranty

warranty.

prepaid.

claim:

packing materials.

How to make a warranty What your warranty does not cover: • Properly pack your unit. Customer instruction. (Your Include any cables, etc., which Owner's Manual provides were originally provided with information regarding operating Instructions and user the product. We recommend using the original carton and controls. For additional information, ask your dealer.) Include evidence of purchase Installation and set-up service date such as the bill of sale. adjustments. Also print your name and Batteries. address and a description of Damage from misuse or the defect. Send via standard neglect. UPS or its equivalent to: Products which have been modified or incorporated into other products. Products purchased or serviced outside the USA. • Acts of nature, such as but not limited to lightning damage.

Limitation of Warranty: THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE WARRANTY

 Some states do not allow the A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS exclusion nor limitation of incidental or consequential REPAIR OR REPLACEMENT AS damages, or limitations on how long an implied warranty PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE lasts, so the above limitations REMEDY OF THE CONSUMER or exclusions may not apply to THOMSON INC. SHALL NOT BE vou. • This warranty gives you specific LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES legal rights, and you also may **RESULTING FROM THE USE OF** have other rights that vary THIS PRODUCT OR ARISING from state to state. OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED

WARRANTY ARE GOVERNED If you purchased your product

BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE warranty information MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE

outside the USA: This warranty does not apply. Contact your dealer for


> IMPORTADOR Comercializadora Thomson de México, S.A. de C.V. Álvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuauhtémoc C.P. 06700. México, D.F. Telefono: 52-55-11-020360 RFC: CTM-980723-KS5

EXPORTER

# mp3/WMA playback sequence

- Refer to the diagram below for playback sequence details on multilevel folder structure
- Songs are played before playing songs placed in folders at each
- Folder playback sequence is indicated by the letters A to G. Song playback sequence is indicated by the numbers (1 to 15) in

front of the song name.

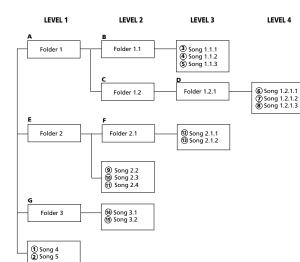

period. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

or damage. Thomson accepts Product Registration: no liability in case of damage Please complete and mail the or loss en route to Thomson Product registration Card Pay any charges billed to you packed with your unit. It will make it easier to contact you by the Exchange Center for service not covered by the should it ever be necessary. The return of the card is not A new or refurbished unit will required for warranty be shipped to you freight coverage.

Thomson Inc. P.O. Box 1976 Indianapolis, IN 46206 - 1976 ©2007 Thomson Inc. Trademark(s) ® Registered Marca(s) ® Registrada(s)

www.rcaaudiovideo.com

Printed in China / Impreso en China

Download from Www.Somanuals.com All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com