



QuickStartGuide

EZ300HD RCA Small Wonder Camcorder
www.rcaaudiovideo.com

Congratulations on purchasing your new RCA High Definition Small Wonder Camcorder.

Please read these instructions for quick tips on using the product.

 
Getting started

Charging the battery

Please charge the battery for at least 3 hours before first use. The battery can only be charged with the supplied battery charger. Refer to *Battery charger* on the back of this guide for more information.

Battery and memory card installation


- Slide the cover down and then lift up to open.
- Install the rechargeable lithium battery.
 - Make sure you insert the battery correctly as indicated.
 - In the case of low battery, a low battery icon () will flash on the screen. Please recharge the battery when battery icon is flashing.
- Your camcorder has 2 GB internal memory. To boost the memory, install an SD memory card. Align card with Card Symbol on camcorder and slide in until a click is heard. The card icon () appears on the screen with memory card inserted.
 - When the internal memory is full, recording will stop. Press the record button again to begin recording to the SD card.
 - To remove card, push card in until a click is heard and the card will pop out slightly, then remove the card.
- Push the cover down and slide up to close.

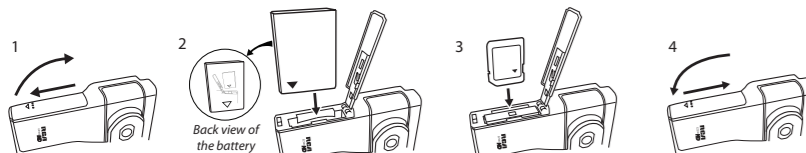


Setting date and time

- Press ◀ or ▶ to shift among month, date, hour and minute and press + or – to set the date/time values.
 - Press ◀ or ▶ to select *DONE* and then press the red RECORD button ■ to save settings. Or press **DELETE** to exit without saving.
- Date and time setting can be accessed by pressing and holding **PLAY/PAUSE** and **ON/OFF** together while the camcorder is turned off.

 Using your camcorder

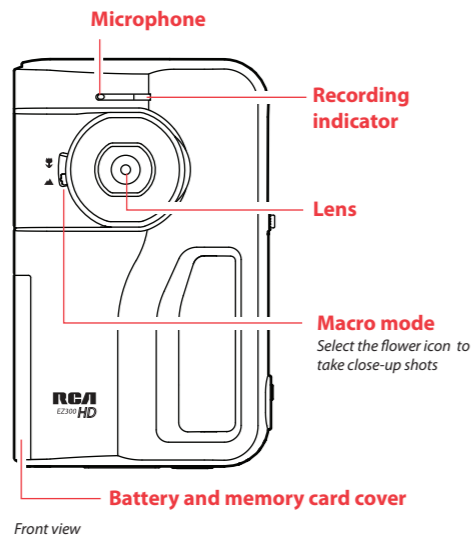

Bottom view

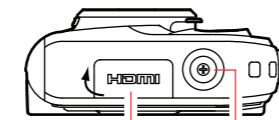 

HDMI video output
Lift up the cover to show the connector.

Tripod screw mount

Turn on/off

- Press **ON/OFF** to turn on.
- Press and hold **ON/OFF** to turn off.

- Camcorder will automatically turn off after 2 minutes if not in use.

Video quality selector

Refer to *Recording Quality* for more information.

Record

Press and release the red RECORD button ■ (after "READY" appears on the screen) to begin recording.

While recording:

- A red ● and the elapsed time appears at the top left corner of the screen.
- The red recording light on the camcorder front turns on.

Pausing a recording:



- Press **PLAY/PAUSE**.
- A pause indicator || replaces the red ● at the top left corner and "Recording Paused" flashes in the middle of the screen.
- To resume recording, press and release **PLAY/PAUSE** again.

Stop

While playing or recording, press and release the red RECORD button ■ to stop the playing or recording.

LCD screen

  For self recordings, the lens can be rotated 180°.

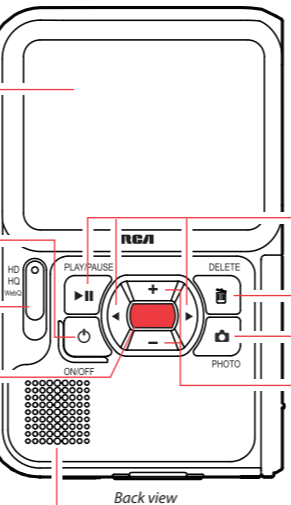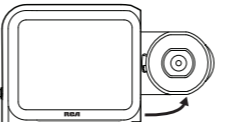

Audio speaker

Play

- Press **PLAY/PAUSE** to start playback of the most recent recording or the selected video. To select another video, refer to *Selecting videos*.
- Press and hold **PLAY/PAUSE** for three seconds to play all videos.

- If no video is selected after playback has finished, recording mode will resume after 5 seconds.

Search forward/backward:

- Hold down ▶ to fast forward the selected video during playback.
- Hold down ◀ to fast rewind the selected video during playback.

Pausing video playback:

- Press **PLAY/PAUSE** to pause playback (a pause indicator || and the remaining playback time flash at the top left corner of the screen).
- Press **PLAY/PAUSE** again to resume playback.

Selecting videos:

- Press and release ▶ to cue the next video.
- Press and release ◀ to cue the previous video.

Delete

- Press **DELETE** and the last recording and "DELETE VIDEO ?" appear on the screen.
- To select another video, refer to *Selecting videos*.
- Press and hold **DELETE** until the selected video is deleted.
- To delete all videos, press & hold **DELETE** for 3 seconds and then repeat step 2.

Take photo

- Press and release **PHOTO** to take photo (photo resolution: 5.0 mega pixels).

Zoom

Before or during recording:

- Press + to zoom in.
- Press – to zoom out.

Volume

During playback:

- Press + to increase volume.
- Press – to decrease volume.

Recording quality

Settings	Quality	Approx. recording duration*
HD (High Definition mode)	HD	60 minutes
HQ (High Quality mode)	DVD	120 minutes
webQ (Web Quality mode)	Good	360 minutes

 
- The selected setting (HD, HQ or webQ) appears on the display screen during recording.
- The HD setting is recommended when planning to view video on a TV directly from the camcorder.

* Recording duration is based on 2 GB internal memory. Actual recording capacity depends on type of video content being recorded.

USB Connector ARM

Extending the USB Connector ARM:

- Press down on the USB Connector ARM button.
 - Slide out to extend the Connector ARM.
- Refer to "Connecting to a PC" for more information.
 - Use USB Extension Cable (provided) if USB Connector ARM is obstructed or space does not permit connection to PC.
 - To retreat the ARM, press down on the USB Connector ARM button and slide in.

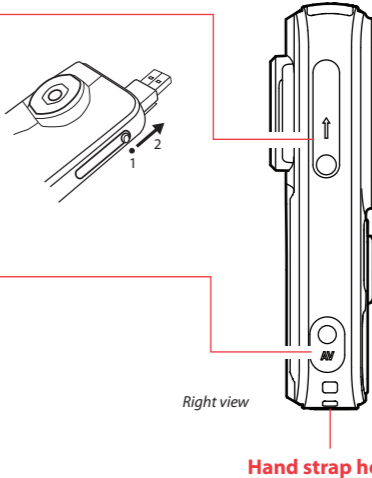


AV output

Audio/Video output for connecting to TV or other AV equipment with the included AV cable.

- Refer to "Viewing videos on TV" and "Recording videos to VHS tape or DVD" for more information.

Viewing videos on TV

 - Plug in the AV cable (provided) – Insert the single connector end into the camcorder (AV jack) and connect the double connector ends to the corresponding video (yellow) and audio (white) input jacks on the TV. (TV output standard: NTSC)
- For best output quality, use the HDMI connector at the bottom of the camcorder with an HDMI cable (not included).
- Turn on the TV and the camcorder.
- Switch the TV to the selected video input (refer to your TV manual for instructions).
- You may play and delete videos viewed on the TV by using the camcorder buttons.

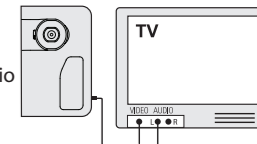

Recording videos to VHS tape or DVD

- Plug in the AV cable (provided) – Insert the single connector end into the camcorder and connect the double connector ends to corresponding video (yellow) and audio (white) inputs of the recording device (VHS or DVD recorder).
- For best output quality, use the HDMI connector at the bottom of the camcorder with an HDMI cable (not included).
- Turn on the camcorder and the recording device.
- Switch recording device to the video input connected to the camcorder. (Refer to your user manual of the recording device for instructions).
- Start recording of your recording device and press and hold **PLAY/PAUSE** on the camcorder for 3 seconds to play all videos on the camcorder.

Managing videos on your computer

 
Windows computer requirements

- Intel Pentium 4, 2.4 GHz or better with at least 1 GB of RAM (2 GB recommended)
- Microsoft Windows® XP with Service Pack 2 or Windows Vista™
- SVGA or better display monitor
- Sound Card
- Video card with 64 MB RAM (128 MB recommended) and display settings set at a screen resolution of 800x600 or higher
- Windows Media Player 9 or later*

* Available for free download at www.microsoft.com

Connecting to a PC

1. Extend the USB Connector ARM.
 - Refer to "USB Connector ARM" for more information.
2. Align the USB Connector ARM to USB jack of computer and insert.
 - Please use the supplied USB Extender Cable if the USB Connector ARM of the camcorder is obstructed or space does not permit direct connection to PC.
 - Camcorder will not record when it is connected to computer.
3. The first time you connect the camcorder to a PC, the RCA Memory Manager application will start installation automatically. Follow the instructions on screen for installation.
 - If the installation does not start automatically, open My Computer and double-click the **SmallWonder** icon. Double-click **rcasw_setup** to start the installation.
 - The installation sequence will only appear the first time you connect your camcorder to a PC. Each subsequent time you connect the camcorder to that PC, the RCA Memory Manager application should open automatically.
4. The SD card (if installed) and the internal memory of the camcorder are recognized as two separate memory devices when connected to a PC.

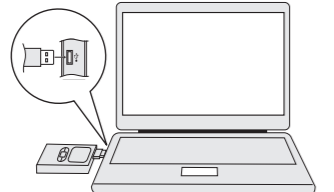

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Save

To save all videos:

- From the **View videos** tab, click the **SELECT** button in the upper right corner to check all videos and then click the **SAVE** button.

To save selected videos:

- From the **View videos** tab, click the checkbox next to the video(s) you wish to save then click the **SAVE** button in the upper right corner.
- All videos will be saved to the default location: **My Documents\My Videos\RCA Small Wonder\Saved Videos\“Category”**. (Category refers to the genre or category you assigned to the video in the Video Details screen.) If no category was assigned, the video will be saved under the default locations, ... \Default.
- You can add descriptive information about your videos by clicking the **Video Details** option found on the single view mode under the **View videos** tab.

Delete

Deleting can be done in both the View and Share videos tabs.

1. Select the video(s) to be deleted by clicking on the checkbox next to the video(s).
2. Click the **DELETE** button (trash icon) located near the upper right corner.

- In the **Share videos** tab, you must first select **Email Videos** or **Upload Videos** before following the steps above to delete videos.

Playback

- While in the **View videos** tab, double-click any preview image, thumbnail or file name (depending on the viewing mode) to launch the video in larger single view mode.

Email

1. Click the **Share videos** tab.
 2. Select **Email Videos**.
 3. Select the video(s) you wish to email by clicking on the checkbox next to the video(s) you wish to send.
 4. Click the **EMAIL** button.
- Videos will be automatically compressed into a more email friendly WMV format and size for sending. If you have a lengthy recording of 5MB or larger file, you may wish to use the **Upload** feature instead.

Upload

Uploading is another way to share larger videos/files or to share a video with someone using dial-up modem connection.

1. Click the **Share videos** tab.
2. Select **Upload Videos** from either YouTube™ or Box.net
3. Login to the online account provided by YouTube or Box.net. (Registration is free)
4. Select the video you wish to upload by clicking on the button next to it.
5. Click the **Upload Video** button.

- *Optional: Enter the email address of anyone you wish to notify of the video. An email containing a hyperlink to view the video online will be sent to them. No registration is required to view the video.*
- *Videos will be compressed into a more web friendly WMV format and size for uploading. The maximum size for a single upload is 35 MB.*

Edit

Trim your video clips to include only the best footage. Better yet, trim several video clips and then join them together into one movie.

 
1. Click the **Edit videos** tab.
2. Click and drag the desired video(s) from the thumbnail collection to the Stage at the bottom of the page.
3. Click on a video in the Stage to load it into the edit window to the right.
4. Use the markers to set the new Start and End points of the video clip.
5. Repeat this with any or all videos in the Stage until completed.
6. You may rearrange the order of the videos in the Stage by clicking and dragging them left or right.
7. Click on the **Save** button to save the new movie.
 - The original video clips will remain untouched in their current location. The new movie will be saved to **My Documents\My Videos\RCA Small Wonder\Edited Movies** directory.

For more detailed instructions on using RCA Memory Manager, please refer to the help section in the software.

Battery charger

Charging the battery

- Please charge the battery for at least 3 hours before first use.
- Insert the plug and battery into the charger as illustrated and then connect the plug to an electricity supply (100 - 240V, 50/60Hz).
- The indicator on the charger is red during charging. Charging is completed when the indicator turns green.

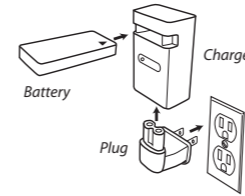

Important battery information

Warning: Your product contains a battery and charging system which is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in a closed automobile or the trunk of an automobile where temperatures may exceed 50°C may result in permanent battery damage, fire, or explosion. Please remove your product from the automobile when you exit, do not place your product in the trunk of your automobile, and do not leave your product in any location where temperatures may exceed 50°C.

Important Battery Precautions

- **CAUTION** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

To minimize the risk of fire, explosion, or chemical burn, observe the following precautions:

- Do not use an unauthorized battery. Use only the rechargeable battery that came with your product.
- Do not use unauthorized chargers or power adapters. Use only chargers that came with your product.
- Do not attempt to open the rechargeable battery or battery pack. There are no user serviceable parts inside.
- Do not leave in a hot automobile or in temperatures exceeding 50°C (122°F).

Use only the specific chargers which were packaged with the product. Use of another charger may present a risk of fire or explosion.

Rechargeable battery recycling information (RBRC)

The RBRC seal on the rechargeable battery used in this product indicates that we are participating in a program to collect and recycle the rechargeable battery. For more information, go to the RBRC web site at www.rbrc.org, or call 1-800-8-BATTERY, or contact a local recycling center.

For customer service and technical support

Web: www.rcaaudiovideo.com

FCC Information

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In accordance with FCC requirements, changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this product.

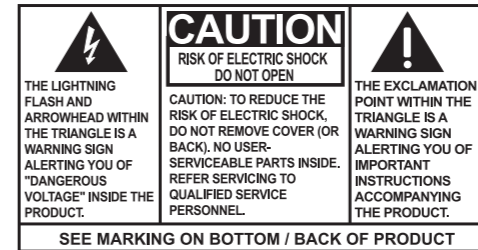

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Manufacturer/ Responsible party

Audiovox Electronics Corp,
150 Marcus Blvd, Hauppauge, NY 11788
1-877-932-2269

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:
Model No.
Date of Purchase
Place of Purchase
Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Technical Specification

Product: Digital Camera Recorder
Brand: RCA
Model: EZ300HD
Electrical Consumption: 3.7V Lithium battery



The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Audiovox Electronics Corp.
150 Marcus Blvd, Hauppauge, NY 11788
www.rcaaudiovideo.com
© 2008 Audiovox Electronics Corp.
Trademark Registered
Marca Registrada
Marque Déposée

Warranty information

12 Month Limited Warranty

Applies to RCA Audio/Video Products

- AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.
- To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.
- This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.
- This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.
- This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.
- Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

How to make a warranty claim:

- If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.
- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Audiovox Electronics Corp., Attn: Service Department., 150 Marcus Blvd., Hauppauge N.Y. 11788

1-800-645-4994

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What we will do:

Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

For Canada Customers, please ship to:

Audiovox Return Centre, c/o Genco, 6685 Kennedy Road, Unit#3, Door 16, Mississauga, Ontario, L5T 3A5

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>