

LCD TV/DVD

QUICK
START
GUIDE

RCA

www.rca.com/television

Choose Your Connections


Make your connection decision easier by taking a few minutes to review the jacks on your new TV/DVD. Compare the jacks on the device you want to connect and see if the same jacks are available on your TV/DVD. Then refer to the chart below to determine the best connection to make.

For more information about connecting your TV/DVD to other devices, refer to OWNER'S MANUAL. Make sure you read the provided safety information before you connect and operate your TV/DVD.

Jacks	Quality	Connects to ...	Cable needed (not included)
	★★★★	Devices with an HDMI™ or a DVI output, such as Satellite Receivers and Cable Boxes.	HDMI Or if connecting to a DVI device, use these with an HDMI cable Audio + DVI Adapter
	★★★	Devices with Y Pb Pr (component) outputs, such as Satellite Receivers, Cable Boxes, PVRs, and DVD Players	Component Video Audio
	★★	Devices with S-Video or Video (composite) outputs, such as DVD Players, VCRs, Satellite Receivers, and Cable Boxes	S-Video Audio
	★		Audio Video

1

Connect a Signal Source

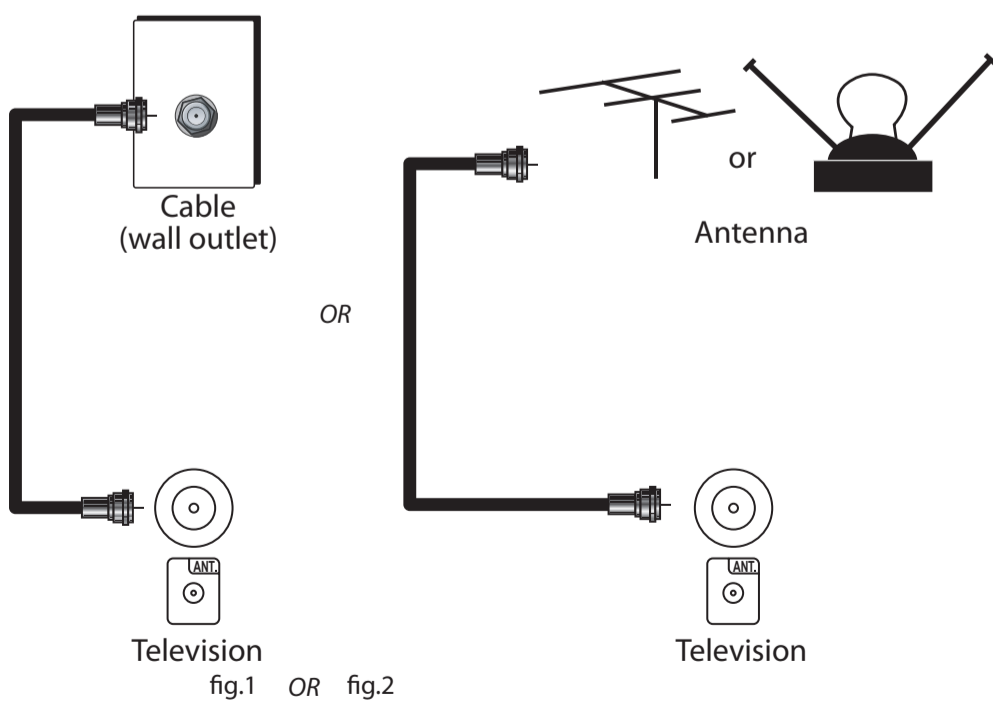

Connect your TV/DVD to cable or an antenna in order to receive TV channels. Connect the cables as shown in fig.1 or fig.2.

Note: If you have regular cable, your TV is able to receive some digital channels because it has a capability called QAM. QAM is a tuner that enables reception of unscrambled digital cable content. Check with your cable provider for information about content availability in your area. Refer to Step 2, Operate Your TV/DVD, for information on viewing digital channels.

If you're connecting a cable box or satellite receiver use the chart above to help determine which jacks to use for the best connection. Your cable box or satellite receiver needs to be high definition if you want to receive high definition programming. Check with your cable provider for more information.

Continue to Step 2, *Set Up Your TV/DVD*, on the back page.



2

Set Up Your TV/DVD

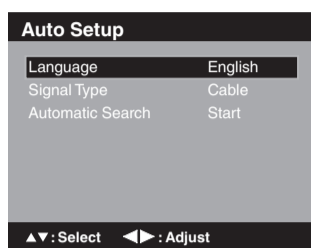 


fig.3

Make sure you have already connected your TV/DVD to devices and a signal source, plugged in the TV/DVD, and put batteries in the remote.

Now, turn on the TV/DVD and start the setup. (POWER indicator on the front of the unit changes green. It may take approx. 10 seconds for a picture to appear on screen.)

Starting setup

The Starting Setup menu (fig.3) appears the first time you turn on the TV.

• Set the on-screen language

(If English is your preferred language, you can skip below and advance to the next step.)

Press ◀ or ▶ until your language is shown.

• Choose the Signal Type (Air/Cable selection)

Press ▲ or ▼ to select "Signal Type"

(If you connected Cable TV service to your ANT jack, you can skip below and advance to the next step.)

Press ◀ or ▶ to choose "Air" (this is for antenna users).

• Automatic Search

 
Press ▲ or ▼ to select "Automatic Search", then press ▶ or **ENTER** to begin the "Automatic Search".

The search takes some time as it is looking for analog, digital and digital sub channels. Once the search is complete, the TV/DVD tunes to a channel.

– For more information, see OWNER'S MANUAL, page 15 –

3

Operate Your TV/DVD

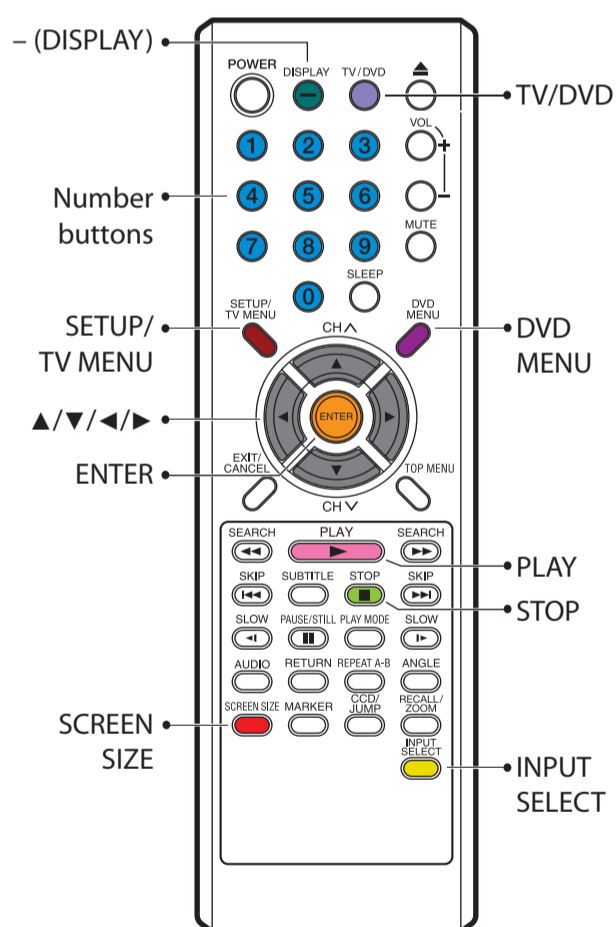

Using the DVD player

To use the DVD player, press **TV/DVD** ("DVD" appears at the bottom of the screen). Insert a disc into the side slot load with disc's label facing towards you. If necessary, press **PLAY** to play the disc. To switch back to TV mode, press **TV/DVD**.

The DVD player can play DVD discs, Audio CD discs, CD-R/RW discs with mp3, Windows Media-formatted content, and JPEG files.

Using the Menu System

The **SETUP/TV MENU** button accesses both the DVD player's main menu and TV's menu. To access the DVD player's main menu, while a disc is playing first press **STOP** and then press **SETUP/TV MENU**. Use ▲ or ▼ to scroll up or down; ◀ or ▶ to scroll left or right; and **ENTER** to make selections.

A disc is capable of having an on-screen menu that is separate from the DVD player's main menu. The disc menu might only contain a list of the titles and chapters, or it may allow you to change features such as language and playback settings. To access the disc menu, press **DVD MENU**.

Watching TV

Entering Channel Numbers

Digital channels can have both primary channels (like the analog channel number) and sub channels. If 15 is the primary channel and 1 is the sub channel the channel looks like 15-1 on screen. To tune to a such channel, press the first 3 digits, then press the **(DISPLAY)** button, followed by the remaining 3 digit, as **0, 1, 5, -, 0, 0, 1**, then press **ENTER**.

Changing Screen Formats

Your TV allows you to change the format of the picture you're viewing by pressing the **SCREEN SIZE** on the remote control. Depending on the type of signal you're viewing, you might not be able to change the format.

Viewing Devices Connected to Your TV/DVD

To view devices connected to your TV/DVD, first make sure you are in TV mode. Press **INPUT SELECT**.

Choose the input where you connected the device.

Your choices are TV, Video, Component, HDMI, PC or DVD (DVD mode).

Thank you for your purchase. Before making a trip back to the retailer, please visit www.rca.com/television for more information or contact us at 1-800-336-1900 so that we may assist you in operating the unit, replacing missing parts, and ensuring your satisfaction with the product.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>