


Dual Display Indoor/Outdoor Thermometer

www.radioshack.com

Your RadioShack Dual Display Indoor/Outdoor Thermometer lets you measure the indoor and outdoor temperature and keeps track of the highest and lowest temperatures it records. 63-1035

CONTROLS AND

SETUP **INSTALLING BATTERIES**

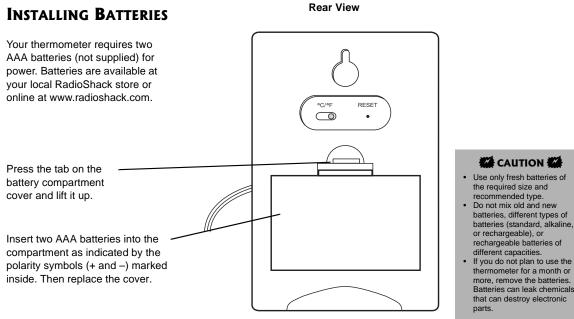

MOUNTING

You can mount the thermometer on any flat surface using its built-in stand, or mount it on a wall using a screw (not supplied).

Choose a location indoors near a window so you can route the thermometer's outdoor sensor outside.

CAUTION

- Do not place the thermometer or remote sensor in direct sunlight.
- Do not place the thermometer and sensor near electrical appliances or heating or air conditioning vents and radiators.
- Do not place the thermometer in water or in a location where it is likely to get

wet. Only the remote sensor and its cord are water-resistant

CHANGING THE DEGREE FORMAT

You can view the temperature in either Fahrenheit (F) or Celsius (C) format. To change the degree format, set **C/F** on the back of the thermometer to the desired format.

RESETTING THE THERMOMETER

If the thermometer stops operating properly, use a pointed object such as a straightened paper clip to press RESET on the back of the thermometer.


LOW BATTERY INDICATION

If the battery is weak, the display dims and the thermometer's sound becomes weak. 2 appears on the display.

To mount the thermometer on a wall, you need a screw (not supplied) with a head that fits into the keyhole slot on the back of the thermometer.

Mark the position of the screw hole, then drill a hole slightly smaller than the screw in the marked location. Using a screwdriver, drive the screw into the wall, letting the head extend 1/8-inch from the wall. Then align the keyhole slot on the back of the thermometer with the screw head, then carefully push the thermometer onto the screw head and slide it down into place.

SCIPE

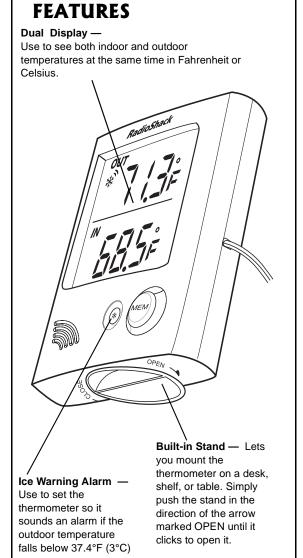

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES. INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICUL LAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPON-SIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY. LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPE-CIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POS SIBILITY OF SUCH DAMAGES

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.


In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the perfor-mance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility: (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or in-surance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102 12/99

OPERATION

USING MAXIMUM/MINIMUM TEMPERATURE MEMORY

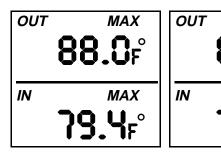

Press MEM once. The maximum (MAX) indoor and outdoor temperatures appear for about 5 seconds.

indoor and outdoor temperatures appear for about 5 seconds

USING THE ICE WARNING ALARM

To set the thermometer so flashes	То
when the temperature is lower than	ala
37.4°F (3°C), press 💥 once.	tha

Press MEM 🚜 to silence the alarm sooner.

SPECIFICATIONS

 
Power..... Temperature Operating Range 23°F to 122°F (-5°C to 50°C) Indoor .. Outdoor -58°F to 158°F (-50°C to 70°C) 0.1°F (0.1°C) Resolution Accuracy +/- 4°F (+/- 2°C) at 23 to 32°F (-5 to 0°C) Indoor +/- 2°F (+/- 1°C) at 32 to 104°F (0 to 40°C) +/- 4°F (+/- 2°C) at 104 to 122°F (40 to 50°C) +/- 4° (+/- 2°C) at -40 to 32°F Outdoor (-40 to 0°C) +/- 2°F (+/- 1°C) at 32 to 104°F (0 to 40°C) +/- 4°F (+/- 2°C) at 104 to 122°F (40 to 50°C) +/- 6°F (+/- 3°C) at -58 to -40°F (-50 to -40°C) +/- 6°F (+/- 3°C) at 122 to 158°F (50 to 70°C) Weight

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.


CARE

Keep the thermometer dry; if it gets wet, wipe it dry immediately. Use and store the thermometer only in normal temperature environments. Handle the thermometer carefully; do not drop it. Keep the thermometer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

RadioShack Corporation Fort Worth, Texas 76102



Press MEM again within 5 seconds. The minimum (MIN)

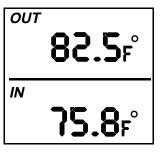

Press MEM again. The current indoor and outdoor temperatures appear.

The current indoor and outdoor temperatures appear even if you do not press MEM.

	B NOTE B
•	Remove the protective film from the display
	before use.
٠	Your thermometer

beeps each time you press a key.

To clear the temperature memory and reset it to the current temperature, hold down **MEM** for about 2 seconds.

To turn off the ice warning alarm, press 💥 again.



set the thermometer so 🔊 flashes and an

arm sounds when the temperature is lower nan 37.4°F (3°C), press 💥 twice.

..... 3V with 2 AAA batteries (not supplied)

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com