



## **RCRH02BR**

### **2-Device Universal Remote Control User's Guide**

Congratulations on your purchase of the RCRH02BR. This 2-Device Remote Control does just what a basic remote should: simplify! Made for streamlined 2-device TV and cable/satellite/digital TV converter setups, this remote is the ultimate in de-cluttering, leaving you just the buttons you need and none of the ones you don't. And with tactile cues on the channel and volume keys, all it takes is a touch to know what you're doing. Like all RCA remotes, this 2-Device Remote is easy to program, with support for over 210 brands\* of TVs, satellite receivers, cable boxes and digital TV converter boxes.

*\* May not operate all models of all brands.*

## **RCRH02BR**

### **Guía del Usuario del Control Remoto Universal para 2 Aparatos**

Felicitaciones por la compra del RCRH02BR. Este Control Remoto para 2 Aparatos hace justo lo que un control remoto básico debería hacer: ¡simplificar! Fabricado para configuraciones de 2 aparatos, TV y convertidores para TV por cable/satelital/digital, este control remoto es lo más avanzado en sencillez, dejándole sólo los botones que usted necesita y ninguno de los que usted no requiere. Y con señales táctiles en las teclas de volumen y canal, todo lo que precisa es un toque para saber lo que está haciendo. Como todos los controles remotos RCA, este control remoto para 2 aparatos es fácil de programar, con soporte para más de 210 marcas\* de TVs, receptores satelitales, convertidores para TV por cable y convertidores para TV digital.

*\* Puede no funcionar en todos los modelos de todas las marcas.*

©2011 Audiovox Accessories Corporation  
111 Congressional Blvd., Suite 350  
Carmel, IN 46032

Made in China  
Fabriqué en Chine  
Hecho en China

RCRH02BR NA IB 01  
UEI 16K Codes 2011 00

Trademarks © Registered.  
Marques © déposées.  
Marcas registradas ©.

[www.rcaaudiovideo.com](http://www.rcaaudiovideo.com)

## Step 1: Install Batteries

Your RCRH02BR universal remote requires 2 new AAA alkaline batteries (sold separately).

### To install the batteries:

1. Turn the unit over, remove screw and remove the battery door compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

### Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

## Step 2: Program the Remote

 
To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are three ways you can program the universal remote to operate your devices:

- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control. It's the easiest method, but it can sometimes take longer than some of the other programming methods.
- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device. It's not as easy as the other methods, but it's potentially the fastest method.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

### Auto Code Search

The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.


1. Manually turn on the component you want to program the remote to operate.



2. Press and hold the **CODE SEARCH** key until the indicator light turns on.



 3. Press the component key you want to program—**TV** or **SAT-CBL-DTC**. The indicator light blinks once and remains lit.



**Important:** Find the **ENTER** key on your remote (don't press it yet). You will need to press this key quickly in step 5 below.

4. Point the remote directly at the front panel of the device you want to control. Press the **POWER** key and wait for the indicator light to blink. Each time the indicator light blinks, the remote is testing a code with the device. Make sure you keep the remote pointed at the device you want to operate.



5. As soon as the component turns off, press the **ENTER** key within 4 seconds.

**Note:** If you wait longer than 4 seconds to press **ENTER**, the remote goes to the next code—you will need to start the code search from step 1 again.

The indicator light flashes 8 times and turns off when the remote has searched all the codes. If this happens, try one of the other programming methods.




6. Test the remote with your component to make sure you can control most of the device's functions. If some features don't work, try the Direct Code Entry method.

### Direct Code Entry

 Direct Code Entry lets you enter a code from the code list at the end of this manual for your brand of device. It's not as easy as the other methods, but it's potentially the fastest method.

1. Manually turn on the component you want to program the remote to operate.




2. Find the four-digit code for your brand of TV, satellite receiver, cable box, or digital TV converter in the code list at the end of this manual.

3. Press and hold the **CODE SEARCH** key until the indicator light turns on.



 4. Press the component key you want to program—**TV** or **SAT-CBL-DTC**. The indicator light blinks and then remains lit.



**Note:** "DTC" stands for Digital TV Converter.

5. Enter the four-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.

**Note:** If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.



- Aim the remote at the component and press the **POWER** key.

**If the component turns off:** The remote is programmed to operate this component.

**If the component does NOT turn off:** Try the next code for your brand.


**Note:** If no codes work, or if your brand is not listed, try the Auto Code Search or Manual Code Search.



## Manual Code Search

 The Manual Code Search lets you go one-by-one through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

- Manually turn on the component you want to program the remote to operate.




- Press and hold the **CODE SEARCH** key until the indicator light turns on.




- Press the component key you want to program—**TV** or **SAT-CBL-DTC**. The indicator light blinks once and remains lit.

 **Important:** Find the **ENTER** key on your remote (don't press it yet). You will need to press this key quickly in step 5 below.



- Point the remote directly at the front panel of the device you want to control. Press the **POWER** key once every 2-3 seconds until your component turns off.

 **Note:** Since this remote has hundreds of codes, you may have to press the **POWER** key many (perhaps hundreds of) times using this method.



- As soon as the component turns off, press the **ENTER** key within 4 seconds.

**Note:** If you wait longer than 4 seconds to press **ENTER**, the remote goes to the next code—you will need to start the code search from step 1 again.

The indicator light flashes 8 times and turns off when the remote has searched all the codes. If this happens, try one of the other programming methods.



- Test the remote with your component to make sure you can control most of the device's functions. If some features don't work, try the Direct Code Entry method.

## Accessing Menus

This remote supports menu access, navigation and selection for many makes and models of TV and satellite receivers, cable boxes or digital TV converters. The amount of menu functionality varies from model to model and from brand to brand.

**To use the Menu function:**

- Press the component button whose menu you wish to access (**TV** or **SAT-CBL-DTC**).
- Press the **MENU** key. The menu of the chosen component is shown. While in Menu Mode the Red LED will blink until you exit or Menu function times out. the keys on this remote function as follows:

Vol up/ down	Ch +/-
Cursor moves right/left	Cursor moves up/down

**Note:** Some functions of some brands may not be fully supported.

- To exit the menu mode press the corresponding component key on the remote (**TV** or **SAT-CBL-DTC**).

## Accessing Digital Channels

The INPUT and — (dash) key lets you enter a digital sub-channel number, like 59.1, directly. Use the number keys to enter the main channel number (in this case, "59"). Then press the INPUT (–) key and press the subchannel number (in this case, "1"). When you're not entering channel numbers, the INPUT key toggles through all the video sources connected to your TV as well.

## Programming Channel Control Lock

By default, in TV mode the remote control's channel-control capabilities are locked to the Cable Box or Satellite Receiver or Digital TV Converter. The affected keys are 1 through 0, Ch ▲, CH ▼ and Go Back. This will guarantee that you do not inadvertently change a channel on your TV. However you can deactivate this feature to allow full access to these keys in TV mode.

**Unlocking Channel Control**

- On the remote Control, press SAT/CBL/DTC key and hold the key down. At the same time press and hold down the CH ▼ until the LED turns red and stays on. Then press the Enter key to unlock and save.  
Now the remote control will provide TV channel control capabilities while in the TV mode.

**Locking Channel Control to SAT/CBL/DTC**

- On the remote Control, press SAT/CBL/DTC key and hold the key down. At the same time press and hold down the Ch ▲ until the LED turns red and stays on. Then press the Enter key to lock and save.  
Now the remote control will provide channel control capabilities while in the SAT/CBL/DTC mode.

## Retrieving Remote Codes

Once you've found the code that works best with your component, you might want to write it down so that you can use it if you ever need to program a remote for this component again. That's easy if you used the Direct Code Entry method—just write down the code you used from the list. However, if you used the Auto Code Search or Manual Code Search, you will need to go through the following steps to know exactly which code you're using.

- Press and hold the **CODE SEARCH** key until the indicator light turns on.
- Press the component key that matches the component's code you are retrieving (**TV**, **SAT-CBL-DTC**). The indicator light blinks once and then remains lit.

3. Press the **CODE SEARCH** key again. The indicator light turns off.
4. Starting with **0** on the keypad, press the number keys in order (**0-9**) until the indicator light turns on. The number that causes the indicator light to light up is the first digit of your code. Write it down in the space provided below.
5. Repeat step 4 until you have retrieved all four numbers of the code.

<b>TV</b>			

<b>SAT•CBL•DTC</b>			

## **Limited Lifetime Warranty**

Audiovox Electronics Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the retailer.

This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.

**U.S.A.:** Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788

**CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5

**For more information, please visit [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com)**

**Consumer Help Line: 1-800-420-7968**

## **Care and Maintenance**

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>