 


REMINGTON®

MicroScreen® 1 CORDLESS RECHARGEABLE SHAVER

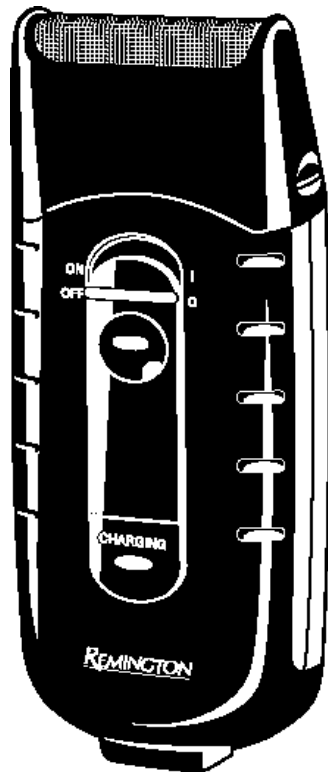

SF-3

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this shaver. When using an electric shaver, basic precautions should always be followed, including the following.

DANGER

To reduce the risk of electric shock:

- Do not reach for a shaver that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store shaver where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this shaver from the electrical outlet immediately after using.
- Unplug this shaver before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- A shaver should never be left unattended when plugged in, except when charging your rechargeable shaver.
- Close supervision is necessary when this shaver is used by, on or near children or invalids.

- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this shaver if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the shaver to a service center for examination and repair.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this shaver with a damaged or broken cutting unit, as facial injury may occur.
- Always attach plug to shaver, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet, then detach power cord from the shaver for storage.
- Always store your shaver and cord in a moisture-free area. Make sure the cord is disconnected from the shaver.
- Household use only.

SAVE THESE INSTRUCTIONS

CONGRATULATIONS. We at Remington want to thank you for purchasing this fine quality Remington MicroScreen® 1 Shaver. We are confident that you will find great satisfaction with our product. The ultra-thin single flexible foil and independent floating cutter will provide a close, smooth comfortable shave. Please take a moment to read the instructions and helpful hints to maximize your shaving pleasure with our product. Again, thanks for choosing the Remington MicroScreen® 1 Shaver.

For best shaving performance, it is recommended that you use your new shaver daily for two or three weeks to allow time to find the optimum shaving method for your particular type beard and hair growth patterns (direction) for each area of your face and neck.

To Shave

 
■ Push the ON/OFF button locking bar inward and push upward on the ON/OFF button to actuate the shaver for shaving.

Charging Operation

■ To recharge, place ON/OFF button in the OFF position, connect cord to shaver and then to electric outlet. The Green indicator light will glow, indicating your shaver is charging. The shaver will be completely recharged in 14-16 hours. The shaver cannot be overcharged, so you may leave it on charge between shaves.

To Trim

■ Push the trimmer actuating button upward to activate the pop-out trimmer. To trim mustache, sideburns, beard or to remove stubborn neck hairs, stroke lightly as shown. Do not hold shaver at an angle.

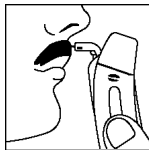

NOTE: When the trimmer is activated, the shaver can be used for shaving as well as trimming. To conserve battery energy it is recommended to use the trimmer

only when needed for trimming.

Shaving Longer Hairs

■ Use trimmer to remove long hairs which may exist under your chin or neck area. Use light pressure to avoid nicks.

Shaving Tips and Instructions

For a smoother, more comfortable, moisture free shave, use a Remington Pre-Shave Powder Stick.

DO's

■ For best shaving performance, it is recommended that you use your new shaver daily for two to three weeks to allow time to find the optimum shaving method for your particular type beard and hair growth patterns (direction) for each area of your face and neck.

■ Wait at least 15 minutes after getting up before shaving.

■ Thoroughly cleanse and dry skin prior to shaving.

■ IMPORTANT: Always hold the shaver at a right angle to your skin using moderate to slow stroke movements.

■ The use of short circular strokes in stubborn areas may help obtain a closer shave, especially along chin line.

■ Daily cleaning of the cutting system is recommended to ensure optimum shaving performance.

 
■ The use of pre-shaves and powders will require more frequent cleaning due to additional residue build up on foils and cutters, which may reduce shaving time.

■ Worn or damaged parts should be replaced with Remington replacement parts only.

DON'Ts

■ Do not hold at an angle. This will distort the foil and may cause the cutter to damage the foil.

■ To avoid foil damage, do not press hard against the skin. Holding the shaver so that the shaving head is at a right angle to the skin without heavy pressure will result in close

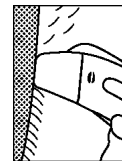


Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and recycled or disposed of properly in accordance with your local and state requirements.



 The following procedure should be followed for battery removal:

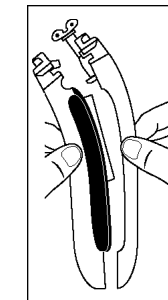

■ To avoid a possible shock hazard, unplug cord from electrical outlet and shaver.

■ Remove the head assembly by grasping the tabs on both sides of head assembly between thumb and forefinger and pull straight upward to remove.

■ Remove the two screws on the upper front side of the shaver.

■ Pull or pry the shaver halves apart.

 
■ Pull or pry the batteries outward from the shaver.

■ Pull and twist batteries to break the wire connections.

CAUTIONS: Do not put in fire or mutilate your batteries when disposing as they may burst or release toxic materials. Do not short circuit as it may cause burns. Dispose properly in accordance with your local and state requirements.

CAUTION: THESE NICKEL-CADMIUM BATTERIES MUST BE RECYCLED OR DISPOSED IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS. Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as it may cause burns.

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Remington is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERY™ for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Remington involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.*

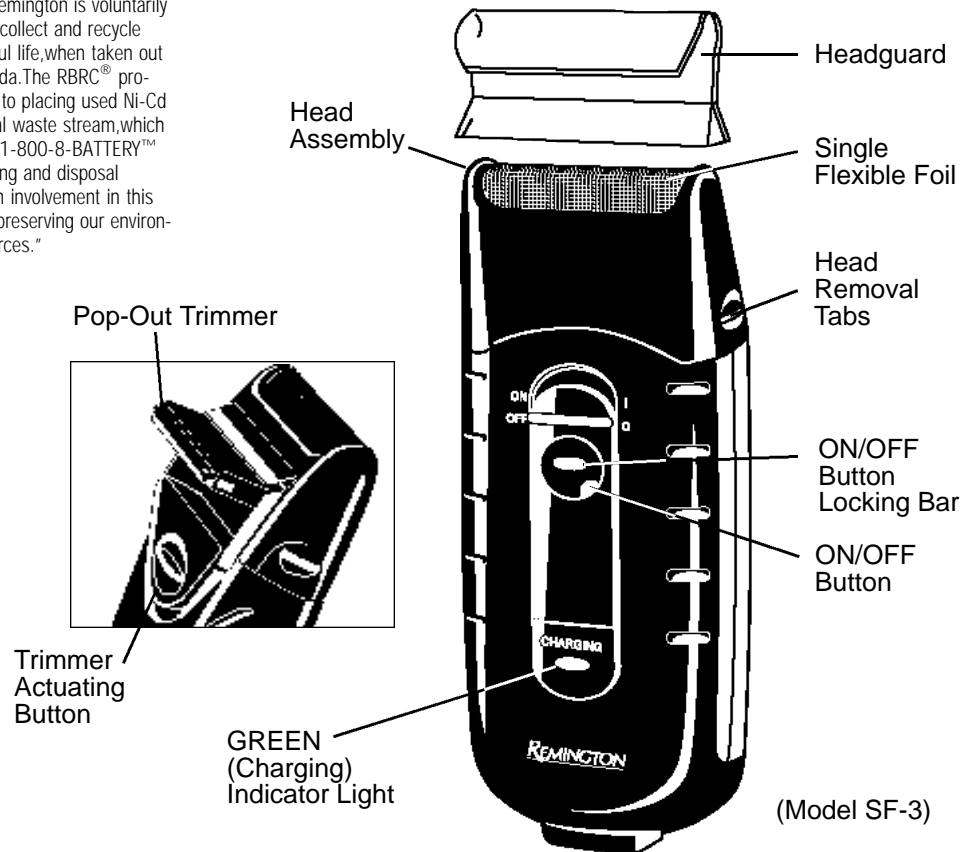

PLEASE NOTE: Before your first use, you may notice what appears to be small particles of white or gray dust on the foil and in or around the area of the cutter assembly. The particles are from a coating of Molybdenum lubricant which is applied to the new foil and cutters to provide you with extra smooth optimum shaving performance.

Cleaning & Maintenance

Cleaning Your Shaver

 
 
 
 
TO ASSURE SMOOTH, EFFICIENT PERFORMANCE, IT IS IMPORTANT TO CLEAN YOUR SHAVER.

CAUTION: Do not remove or replace the head assembly while shaver is running as it may cause damage to the unit.

■ After each shave, turn off shaver and remove the head assembly by grasping the head removal tabs on both sides of head assembly between thumb and forefinger and pull straight upward to remove.

■ Holding the cutter as shown, brush and blow out the hair clippings from the cutter. Lightly tap base of head assembly on a flat surface. Do not remove screen assembly from head assembly. Do not use cleaning brush on screen as it may damage it. When replacing head assembly do not press or touch the screen.

■ To avoid possible damage, it is not recommended to remove the cutter assembly except for replacement. However, if necessary to remove the cutter assembly, grasp cutter between thumb and forefinger and gently lift upward to remove cutter from oscillator tip. Please note the spring seated on the

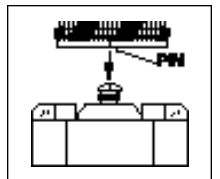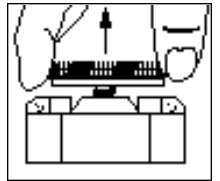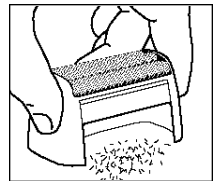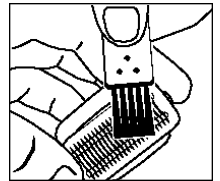

oscillator tip. Be careful not to lose the spring. To replace the cutter assembly, place pin on bottom of cutter in slot of oscillator tip and gently press downward in center of cutter until cutter snaps into place.

When Is It Time to Replace Your Foil and Cutter?

It is very important to replace your foil and cutter when necessary to ensure a close, comfortable shave without irritation. We recommend that the foil be replaced every 6 months and the cutter be replaced every 12 months. Here are some signs of foil and cutter wear, indicating that replacement is needed.

 
IRRITATION: As the foil gets excessively worn there may be some skin irritation. This would be especially noticed when applying After Shave lotion. When the cutter wears, you may feel a sense of "pulling" and a loss of closeness when you shave. This is an indication that it is time to replace your cutter and foil. Visually check for any signs that the cutter has worn through the foil. It is always best when replacing the cutter to replace the foil at the same time.

Remington Pre-Shave Powder Stick

Absorbs moisture and facial oils...shaver glides easily over your skin. Sets up beard for a smooth, close shave. Makes shaving quicker and more comfortable.

Remington Shaver Saver Lubricant

A spray to clean and lubricate your shavers'cutters and head assembly. Helps remove hair chips while it reduces wear. Just a quick spray after each shave keeps your shaver operating at peak performance.

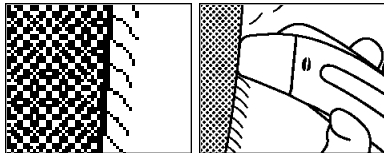

BEFORE

AFTER

Performance Guarantee

Remington® Money-Back Offer

If within 30 days after you have purchased your Remington Cordless Rechargeable Shaver, you are not satisfied and would like a refund, just take back the shaver and sales slip indicating purchase price and date of purchase to the retailer from whom the shaver was purchased. Remington will reimburse all retailers who accept the shaver within 30 days from date of purchase. If you have any questions concerning the money back guarantee, please call (800) 736-4648.

Warranty – One Full Year

Remington warrants that your product, except as noted below, is, on the date of purchase, free from defect in material and workmanship for a period of one year. Remington will replace any product defective in materials or workmanship without charge if you return the complete product either in person or by mail, postpaid, to a Remington Company-Owned Service Center within one year of the date of purchase. Please include with the returned item a letter stating the reason for the return and the receipt showing the date of purchase.

Do not return the product to the retailer from which it was purchased if defective. Warranty service must be performed by a Remington Company-Owned Service Center. The addresses of our Company-Owned Service Centers are enclosed. If you wish, you may mail the product, postpaid, to:

Remington Products Company, L.L.C.
60 Main Street
Bridgeport, CT 06604
Attention: Service Department

Please allow 6 to 10 weeks for delivery of a replacement product.

This warranty does not cover damage by accident, misuse, abuse, lack of reasonable care, affixing an unauthorized accessory, loss of parts or alteration to the product. REMINGTON WILL NOT PAY FOR WARRANTY SERVICE BY A NONAUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM SERVICE PERFORMED BY A NONAUTHORIZED REPAIR SERVICE. REMINGTON SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Some states do not allow the exclusion limitation of incidental or consequential damages or limitations on how long a warranty lasts, so that the above limitations and exclusions may not apply to you.

Warranty Service

Warranty service must be performed by a Remington Company-owned Service Center or Authorized Service Dealer and damage or loss of any kind resulting from servicing by any other person is not covered under warranty. Enclosed is a listing of Company-owned Service Centers. Authorized Service Center Dealers may be found in the yellow pages of your directory. If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604 Attention: Service Department.

U.S. Warranty Service

In the United States, service is provided by our Company-owned Service Centers and over 300 Authorized Service Dealers. The addresses of our Company-owned Service Centers are enclosed. For the address of your nearest Authorized Service Dealer, please consult the Yellow Pages under "Shaver - Electric - Repair." If you wish, you may mail the product, postpaid, to Remington Products Company, L.L.C., 60 Main Street, Bridgeport, CT 06604, Attention: Service Department.

For questions or comments, please write:

Remington Products Company, L.L.C.
P.O. Box 1536,
Horsham, PA 19044-6536
Attention: Consumer Affairs

International Warranty Service

Service under the Remington warranty can be obtained outside the United States in Canada and England. Please consult your local telephone directory for the nearest location. If you like, you may mail the product to the above listed address. Please allow eight to twelve weeks for delivery of a replacement product.

For questions or comments, please write:

Remington Products Company, L.L.C.
P.O. Box 1536
Horsham, PA 19044-6536
Attn: Customer Service
Or call: 1-800-736-4648.



Questions or Comments: Please call 1-800-736-4648.

Visit us at <http://www.remington-products.com>

REMINGTON
PRODUCTS COMPANY, L.L.C.
60 Main Street, Bridgeport, CT 06604

Remington and MicroScreen
are trademarks of
Remington Corporation, L.L.C.
© 1998 RPC, L.L.C. Rev. 7/98

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>