



REMINGTON

REMINGTON

Dual Foil Shaver FLEX AND PIVOT TECHNOLOGY



REMINGTON



F3790

09/UK/F3790 Version 02/09 Part No. T22-28181

Remington® Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str. 9

 
 
 
 
 
 
 
 
 
 
73479 Ellwangen

Germany

www.remington-europe.com

© 2009 SBI



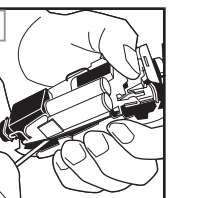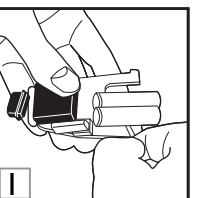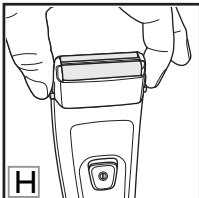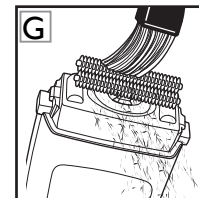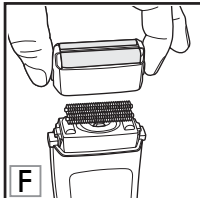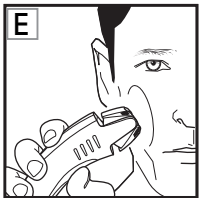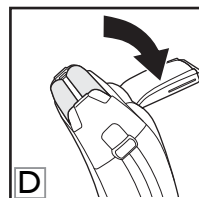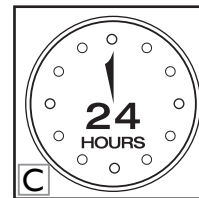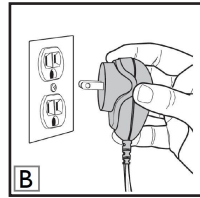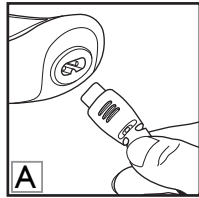

United Kingdom

+44 0800 212 438 (free call)

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk

ENGLISH

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.

CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

DESCRIPTION

- 1 On/Off switch
- 2 Screens
- 3 Cutter assembly
- 4 Head release button
- 5 Charging indicator
- 6 Pop up trimmer
- 7 Head guard
- 8 Power cord
- 9 Cleaning brush

ENGLISH

	F3790
POWER SYSTEM	Rechargeable
FULL CHARGE TIME	16 hours
CORDLESS SHAVING TIME	40 mins
INDICATOR	LED Charging indicator
VOLTAGE TYPE	220-240V



GETTING STARTED

For best shaving performance, it is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

■ CHARGING YOUR SHAVER

- ▶ Ensure the product is switched off. Connect the shaver to the adapter (Fig. A), then to the mains (Fig. B) and charge for at least 24 hours when using for the first time (Fig C).
- ▶ When plugged, the charging indicator will light up.
- ▶ Fully recharge for 24 hours every 6 months to maintain battery condition.
- ▶ When empty, the battery will be charged within 16 hours to provide 40 mins of shaving time.



HOW TO USE

SHAVING

- ▶ Make sure your shaver is properly charged
- ▶ Begin by removing the protective head guard from your shaver.
- ▶ Switch the shaver on.
- ▶ Push the trimmer button down to release the trimmer and use to remove long hair first. Then, fold back the trimmer when finished. (Fig. D)
- ▶ Stretch the skin with your free hand so the hairs stand upright.
- ▶ Hold the shaving head so all foils touch your skin simultaneously. The independently floating foils automatically adjust to the contours of your face. Only apply light pressure on the shaving head whilst shaving and use short, circular strokes. (Fig. E)
- ▶ After shaving turn the shaver off.

TRIMMING

- ▶ Push the trimmer button down
- ▶ Place trimmer at desired trim line for a quick, easy, professional trim.
- ▶ To retract and switch off the trimmer, fold the trimmer back until it locks into position

TIPS FOR BEST RESULTS

Ensure your skin is dry. Always hold the shaver at right angles to the skin so that both foils are touching the skin with equal pressure. Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line. DO NOT hold the shaver at an angle whereby only one foil is touching the skin. This will distort the foil and may cause the cutters to damage the foil. DO NOT press hard against the skin in order to avoid damage to the foil.




CARE FOR YOUR SHAVER

Care for your product to ensure a long lasting performance. We recommend you clean your shaver after each use. Using the brush supplied clean the internal parts of the head assembly and shaver body. Always keep the protective cap on the shaving head and keep the trimmer in the "off" position when the shaver is not in use.

CLEANING

- ▶ Press the head release button to remove the head assembly. (Fig. F)
- ▶ Thoroughly blow out the stubble from the foils and cutters.
- ▶ Use the cleaning brush to sweep out the cutters. Do not use the cleaning brush on the foils. Damage may occur to the holes of the foils. (Fig.G)
- ▶ Replace head assembly. (Fig. H)


CAUTION:



Do not clean the shaving foil with the brush.
Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's foils and cutters.

To clean the external surfaces of the shaver, use a damp cloth.
Do not use strong detergents or other chemicals.

To dry, wipe the surface of the shaver with a dry towel.
Never submerge your shaver in water.



REPLACING THE FOILS & CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing:

- ▶ Irritation: As foils get worn, you may experience skin irritation.
- ▶ Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- ▶ Wear through: You may notice that the cutters have worn through the foils.

ENGLISH

TO REPLACE THE FOIL

- ▶ Pull the foil assembly down to remove from the hair pocket.
- ▶ Insert new foil assembly in hair pocket until it snaps in place.

TO REPLACE THE CUTTERS

- ▶ Grasp cutter between thumb and forefinger and turn the assembly 90 degrees.
- ▶ Place the new cutters on the pin at 90 degrees and rotate 90 degrees to lock in place.

Spare Parts F3790

Replacement model :

SP-62

Note: Do not press on the cutter ends as this may cause damage.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged in to a power outlet, except when charging.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the shaver with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via the Remington® Service Center.
- ▶ Store the product at a temperature between 0°C and 32°C.
- ▶ Only use the parts supplied with this appliance. Use of non Remington® parts with this product may give rise to a hazardous condition.
- ▶ Do not submerge or place under running water.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Keep the appliance dry.

ENGLISH



PROTECT THE ENVIRONMENT

The shaver contains NiMH cell unit. This cell does not contain any harmful metals. Do not dispose the shaver in household waste at the end of its useful life. Disposal can take place at the Remington® Service Center or appropriate collection sites. However, if you prefer to dispose the cell unit yourself, please follow the instructions as shown in Fig. I & J .

⚡ CAUTION:

Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



■ For further information on recycling see www.remington-europe.com



BATTERY REMOVAL

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver without the batteries.

⚡ CAUTION:

Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements. The battery must be removed from the appliance before it is scrapped. The appliance must be disconnected from the supply mains when removing the battery. The battery is to be disposed of safely.

To Remove the Rechargeable Battery:

- 1 Remove head guard and hair pocket from shaver.
- 2 Using Phillips screwdriver remove (2) screws from the top cover plate and (1) screw from the rear housing.
- 3 Take rear housing off of shaver to expose batteries.
- 4 Cut wires connecting batteries to the circuit board.
- 5 Remove batteries and dispose of properly. (Fig. I & J)

ENGLISH



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>