


Remotec
1279041

Universal Remote Control (URC)

Operating Instructions

PRODUCT DIAGRAM

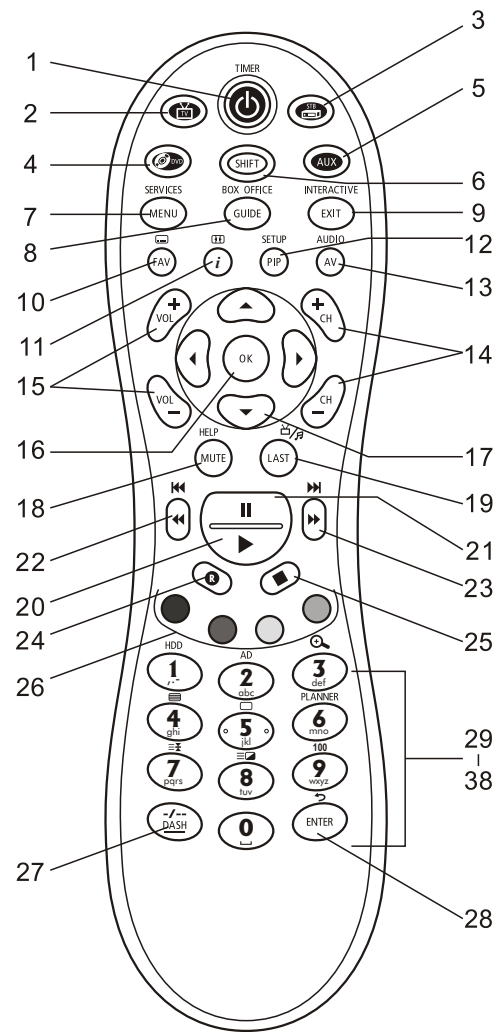

KEY FUNCTION DESCRIPTIONS

1. Turns on or off a home entertainment device, also **TIMER** for sleep mode when in shift mode.
2. Turns the remote to TV mode.
3. Turns the remote to (STB) set top box mode.
4. Turns the TV to DVD mode.
5. Turns the TV to auxiliary device mode.
6. Press once to access secondary functions of certain buttons. The indicator light under the button will light. If no button is pressed within 8 seconds or press it again (While the indicator light under the button is lit), the unit will automatically return to primary functions and the indicator light will go out.
7. **MENU** Enter the menu for the selected AV device, also **SERVICES** function when in shift mode, which is to set up a range of features as your original Pay TV remote.
8. **GUIDE** Displays program guide, also **BOX OFFICE** function when in shift mode, which is to order movies from pay TV **BOX OFFICE**.
9. **EXIT** Exits out of your cable converters menu and guide, also **INTERACTIVE** function when in shift mode.
10. **FAV** Cycles through your favorite channels stored in your cable converter, also **SUBTITLE** function when in shift mode.
11. **i** Displays the current channel and program information, also **ASPECT** function when in shift mode which is to change the aspect ratio of the show you are watching.
12. **PIP** Picture in picture, also **SETUP** function when in shift mode, which is to display the setup screen, to alter the pay TV settings.
13. **AV** Scrolls through different AV source modes, also **AUDIO** function when in shift mode.
14. **+CH** Changes channel up and down.
15. **+VOL** Changes volume up and down.
16. **OK** Confirms choices in menus and displays the i-search banner.
17. Use the cursor keys to move the cursor in the program guide and menu screens and to navigate within the interactive service.
18. **MUTE** Turns the sound on or off, also **HELP** function when in shift mode, which is to tune to the customer care channel or display help information.
19. **LAST** Recalls the last channel, also **TV/RADIO** function when in shift mode.
20. Play when in DVD, VCR, CD or DVR mode.
21. Pause when in DVD, VCR, CD or DVR mode.
22. Rewind when in DVD, VCR, CD or DVR mode, also **SKIP** back function when in shift mode.
23. Fast-forward when in DVD, VCR, CD or DVR mode, also **SKIP** forward function when in shift mode.
24. Record when in DVD, VCR, CD or DVR mode.
25. Stop when in DVD, VCR, CD or DVR mode.
26. **RED, GREEN, YELLOW, BLUE**, fasttext keys, use to select a variety of onscreen options.
27. **DASH** Separate the main and sub-channel numbers, also **SETTINGS** when in shift mode, which is to display available interactive services.
28. **ENTER** Channel enter, use after direct channel number to change to selected channel immediately, also **ZOOM** in screen when in shift mode.
29. **1** Numeric number 1, also **HDD** function when in shift mode, which is to open/close "Recordings" menu.
30. **2** Numeric number 2, also **AD** menu for DVD when in shift mode.
31. **3** Numeric number 3, also **ZOOM** function when in shift mode.
32. **4** Numeric number 4, also Teletext **Text On** mode when in shift mode.
33. **5** Numeric number 5, also Teletext **Text Off** mode when in Shift mode, switch the devices (TV and/or STB) back to regular viewing mode. On some devices, this may be done by pressing the **TEXT ON** key several times.
34. **6** Numeric number 6, also **PLANNER** function when in shift mode, which is to Display your personal planner to view program reminders.
35. **7** Numeric number 7, also Teletext **HOLD/STOP** mode, stops changing pages when in Shift mode.
36. **8** Numeric number 8, also Teletext **Mix** mode when in shift mode.
37. **9** Numeric number 9, also Teletext **Index** mode when in shift mode.
38. **0** Numeric number 0.

IMPORTANT SAFETY INFORMATION

This appliance is intended for domestic / household use only, and should not be used for any other purpose.

Any other use may invalidate the warranty and might be dangerous.

If the product is not to be used for a prolonged time, remove the batteries as corrosive damage may occur due to battery leakage.

If battery fluid comes into contact with skin or eyes, wash immediately under running water.

Do not dispose of batteries in a fire, danger of explosion.

380 x 180mm (fold to 95 x 180mm)

Congratulations! Your Universal Remote Control (URC) is a state-of-the-art device which integrates many different infra-red remote controls to deliver instant A/V action to your fingertips.

Before operating the remote, please read thoroughly (1) the inside of the coversheet and (2) this manual. Then store them for future reference.

1 HOW TO INSTALL THE BATTERIES

Alkaline batteries are recommended. The batteries required are 2 x AAA 1.5V or equivalent.

1. Remove the battery cover on the back of your URC.
2. Insert the batteries observing the "+/-" marks inside the battery compartment.
3. Push the battery cover back in place.

NOTE:

The memory inside the remote will retain its settings for short periods of time with the batteries removed (When changing batteries for instance).

2 HOW TO SET UP THE URC

By entering Device Code

You may setup the URC by following the code entering instructions.

1. Referring to the DEVICE CODE LIST, look up the 4-digit Device Code which corresponds to the brand of your A/V equipment. If there is more than one Device Code listed under your brand, start from the first code.
2. Press the desired Device Mode Key (e.g. TV).
3. Hold down "CH +" and "VOL -" on the URC simultaneously for 2 seconds until the indicator light under the power key lights up.
4. Use the number keys "0" - "9" to enter your 4-digit Device Code. The indicator should go out after the 4th digit is entered.

Turn on your device (e.g. TV), then try the function keys on the URC. If your device (e.g. TV) responds to your activated function correctly, you have entered the right Device Code. Otherwise, repeat the above steps with the next available Device Codes until your device (e.g. TV) responds to your activated function, and most keys work correctly.

- * Simply repeat the above procedures to enter the Device Codes for your DVD and AUX devices. (Remember to press the correct Device Mode Key in step 2 above)

Note:

If the indicator light under the power key flashes twice in step 4, a wrong Device Code has been entered. You are required to repeat step 2 to 4 again.

Suggestion :

- If you cannot find a correct Device Code for your equipment, see **2** HOW TO SET UP THE URC - By Searching Through the Library.
- For future reference you are recommended to take a note of your Device Codes in the space provided on the product's back label after setting up the URC correctly.

4

By Searching Through the Library

If you cannot identify a correct Device Code for your equipment from the Device Code list, you may search for the code in the library:-

1. Turn on your device manually (e.g. TV).
2. Press a desired Device Mode Key (e.g. TV).
3. Hold down "CH +" and "VOL -" on the URC simultaneously for 2 seconds until the indicator under the power key lights up.
4. Enter a corresponding Magic Search Code from the following table. The indicator light under the power key should go out after the 4th digit is entered.

DEVICE TYPE:	TV	VCR	STB	CTV	DVD
MAGIC SEARCH CODE:	0001	0002	0003	0004	0005

(e.g. press "TV" device mode key, then press "CH +" and "VOL -", and enter TV Magic Search Code 0001.)

5. Press the same desired device mode key again as in step 2 above. (e.g. TV)
 6. Hold down "CH +" & "VOL -" simultaneously for 2 seconds until the indicator light under the power key lights up, and your URC is ready to start searching.
 7. Aim the URC at your device (e.g. TV), press the "⏻" key slowly and repeatedly until the device has been turned off. Once your device has been turned off, immediately press Device Mode Key (e.g. TV) to lock the code, the indicator light under the power key will go out.
- * Simply repeat the above setup procedures to search for the Device Code for your VCR, STB, DVD or CTV. (Remember to press the correct Device Mode Key and correct Magic Search Code in step 2-5 above)

IMPORTANT:

- If the power on/off function of your device is not infra-red controlled, you need to follow steps 2 to 6 above and start searching:-
- Press "⏻" and another function key alternately until your device responds to the expected function, then press the same Device Mode Key (e.g. TV) to lock in the code.
e.g. Press "⏻" & "1" alternately, or ;
Press "⏻" & "▶" alternately.

Note:

- DVD, CTV and other device codes can be searched for and locked into any device modes. Simply press the corresponding device mode key in step 2 & 5 and enter an appropriate Magic Search Code for your DVD, CTV and other devices.
- Each time you press the "⏻", the URC will skip to the next code and send out a POWER signal trying to turn off your device.
If you fail to stop pressing "⏻" in time when your device has been turned off, turn your device on again immediately. Before the indicator under the power key goes out, press "⏻" on the URC to skip backward. Repeat step 7 above and lock in the code.
- If the indicator light under the power key flashes twice after your pressing of "⏻" key, you are already at the last code of the library. Press "CH +" and "VOL -" to resume the URC and repeat the above procedures carefully to search again.

5

3 OPERATING THE URC

Normal Operation

Once you have set up the URC for your A/V equipment, it works like your original remote control. To operate, just aim it at your equipment, press an appropriate device mode key and invoke the desired function by pressing a corresponding key on the URC. The indicator light under the power key flashes during signal transmission and as confirmation of key touch.

Punch Through

Punch Through Channel

Punch through channel allows you to operate channel up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through channel setting:

1. Press desired Device Mode Key of the device in use.
2. Press and Hold "CH +" key.
3. Press desired Device Mode Key of the device you want to change the channel on.
4. Release "CH +" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the punch through channel setting:

1. Press desired Device Mode Key of the device in use.
2. Press and Hold "CH -" key.
3. Press desired device Mode Key of the device you want to change the channel on.
4. Release "CH -" (the indicator light under the power key flashes twice if the setting is activated).

Punch Through Volume

Punch through volume allows you to operate volume up and down without having to switch the device modes repeatedly even when your URC is in other operating modes.

To activate the punch through volume setting:

1. Press desired Device Mode Key of the device in use.
2. Press and Hold "VOL +" key.
3. Press desired Device Mode Key of the device you want to change the volume on.
4. Release "VOL +" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the punch through volume setting:

1. Press desired Device Mode Key of the device in use.
2. Press and Hold "VOL -" key.
3. Press desired Device Mode Key of the device you want to change the volume on.
4. Release "VOL -" (the indicator light under the power key flashes twice if the setting is deactivated).

6

Macro Power

Macro Power allows you to turn two of your A/V equipment on/off simultaneously.

To activate the macro power setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "⏻" key.
3. Press desired Device Mode Key (e.g. STB).
4. Release "⏻" (the indicator light under the power key flashes once if the setting is activated).

To deactivate the macro power setting:

1. Press desired Device Mode Key (e.g. TV).
2. Press and Hold "⏻" key.
3. Press desired Device Mode Key (e.g. STB).
4. Release "⏻" (the indicator light under the power key flashes twice if the setting is deactivated).

4 MAINTENANCE

1. Do not expose your URC to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
2. Do not use old and new batteries together as old batteries tend to leak.
3. Do not use corrosive or abrasive cleansers on your URC.
4. Keep the unit dust free by wiping it with a soft, dry cloth.
5. Do not disassemble your URC, it contains no user-serviceable parts.

5 TROUBLESHOOTING

Q. My URC does not work at all!

A. Check your A/V device, if the device's main switch is turned off, your URC cannot operate your device.

A. Check whether your batteries are inserted properly and are in the correct +/- position.

A. Check whether you have pressed the corresponding device mode key for your device.

A. If the batteries are low, replace the batteries.

Q. If several Device Codes are listed under the brand of my A/V device, how can I select the correct Device Code?

A. To seek the correct Device Code for your A/V device, test the codes one by one until most keys work properly.

Q. My A/V equipment responds only to some of the commands.

A. You have set a code for which only some commands work properly but some do not. Try other codes until most keys work properly.

7

F820-8362-0001

380 x 180mm (fold to 95 x 180mm)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>