Opus 21 s30 Integrated Amplifier Owner's Manual



From all of us at Resolution AV, thank you for choosing the Opus 21 s30 amplifier. We went to great lengths to design and produce an integrated amplifier that offers musical pleasure and superior performance.

Unpacking

After unpacking your Opus 21 s30 amplifier, inspect it for any shipping damage and contact us immediately if any is found. Do not plug it into the power supply if you find any shipping damage.

Please keep all packing materials for future transport of your amplifier. Shipping the Opus 21 in anything other than its original crate may result in damage that is not covered by warranty. If you require a replacement crate or packing materials, please contact Resolution AV.

Should you need to repack the unit, be certain to place the amplifier between the supplied foam sheets, with the accessory box on top.

The accessory box contains the following items:

- Opus PowerLink cable
- Toroidal power transformer for installation in your Opus 21 Power Centre
- Hardware to install the transformer
- An integrated circuit to update the software in your Opus 21 Power Centre, if necessary

Installation

The s30 amplfier must be used in conjunction with your Opus 21 cd player and Power Centre.

If the toroidal power transformer has not yet been installed in your Power Centre, contact your dealer or Resolution AV directly for assistance.

The s30 amplifier must be located directly beneath your Opus 21 source components.

First, remove the dust cover from the connector located on the bottom of your Opus 21 cd player. Next, position the cd player directly on top of the s30, ensuring the connectors are aligned. Press the connectors firmly together to secure the connection.

Locate the Opus 21 cd+s30 and Power Centre on your shelf.

Be sure to leave space around the s30. It should be placed on a firm surface to allow adequate ventilation. We recommend that the Power Centre be placed on a separate shelf for optimum performance.

Turn off any associated components prior to connecting the Opus 21.

This minimizes the chance of momentary electrical surges disturbing your system.

Connect the OpusLink interconnect to both the cd player and Power Centre.

Note that the cable can only be installed in one direction. Secure the connectors by hand-tightening the integral screws.

Connect the Opus PowerLink cable to both the s30 and Power Centre.

Note that the cable can only be installed in one direction.

Connect your speaker cables to the s30 using either spade lugs or banana jacks.

The optional binding posts work best with spade lugs. Ensure proper polarity, which is indicated on the top of the connector. If your speaker is fitted with a separate ground connection, it may be attached to the center (yellow) banana jack, which is returned to the amplifier star-ground.

With the power switch in the OFF position, attach the power cord and connect it to your outlet.

The OFF position is selected when the O symbol on the switch is depressed.

Turn on the main power switch.

The ON position is selected when the | symbol on the switch is depressed. The Opus 21 will take a few seconds to initialize and read the disc if present. The s30 selects the cd as the default input.

Turn on the rest of your system.

It is a good habit to turn the amplifier on last, and off first, to prevent surges and transients from reaching your loudspeakers.

Insert a disc and press PLAY, or select another input.

The s30 amplifier will automatically select the cd input when a disc is played. Analog inputs may be selected from the remote control or directly from the front panel. The digital input of the cd player is accessed only from the remote control.

The Opus 21 is designed to remain powered continuously. In standby mode, the display is turned off and the output is muted, but all of the circuitry remains powered. Output-stage bias current is also reduced in standby. If you do not intend to use the player for an extended period of time, the power may be removed via the power switch in the rear. When power is re-applied, the Opus 21 will warm up and sound its best in about 1 hour.

Safety Precautions





The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

- Check that the operating voltage of your unit is identical to that of your local power supply.
- Replace fuses only with identically rated fuses.
- To reduce risk of electrical shock, keep the unit dry and grounded. Do not operate the unit near water.
- If the unit causes RF interference with another product, move one unit or both until the interference is eliminated. If the interference cannot be sufficiently reduced, cease operation and consult Resolution AV.

- Clean the chassis, faceplate, and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.
- Do not discard the original box and packing materials.
 When shipping the unit to another location or for repair work, repack in original material.
- Do not attempt to service this product. All servicing should be referred to qualified service personnel.
- Do not install the unit in a location near heat sources such as radiators or heat ducts, or in a place subject to mechanical vibration or shock.

Warranty


Resolution AV warrants all products against faulty workmanship or defective materials for a period of three (3) years from date of shipment, with the exception of transport mechanisms. Transport mechanisms are covered for one (1) year. If a defect occurs within this period, Resolution AV will repair, replace, or issue a credit for the product at our discretion. Prior to return, authorization is required. All merchandise must be returned in the original packing material with all accessories. If a product is recalled and it is not returned within 90 days, the warranty is void. This warranty is not transferrable. Resolution AV assumes no responsibility for defects resulting from misuse, neglect, improper installation, unauthorized repair, alteration, inadequate packing, or accident. No other obligations expressed or implied shall be assumed by Resolution AV.

Warranty Registration

SAVE YOUR SALES SLIP AND REGISTER AT WWW.RESOLUTIONAUDIO.COM

	You must be able to show evidence of purchase date to obtain warranty parts and service	Model:	Opus 21 s30 Integrated Amplifier
;	Warranty registration of your unit ensures that you will be contacted immediately if there should be a safety inspection, modification, or other product recall under applicable laws or regulations or otherwise. If you did not purchase directly from Resolution AV, please visit www.resolutionaudio.com to register your player.	Serial Number: Purchase Date:	
		Purchased From:	

Front Panel and Controls

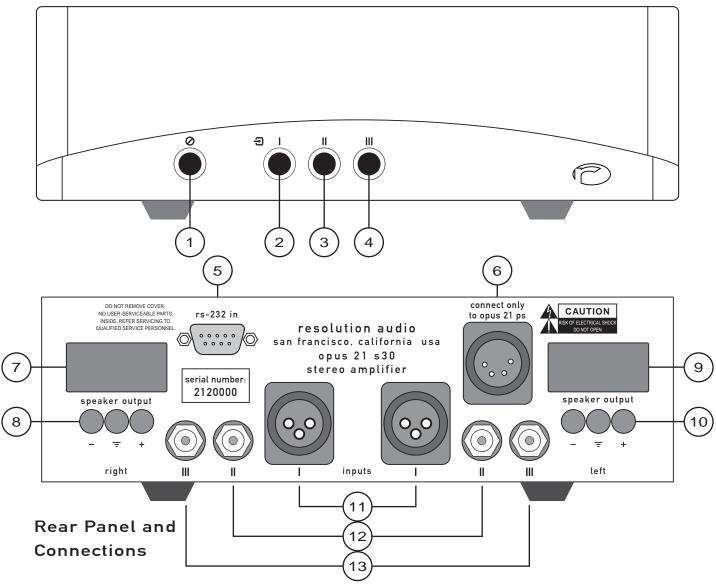

Press to mute/un-mute the output. The volume level display will flash when muted. Press to select input 1, balanced (XLR). П Press to select input 2, unbalanced (RCA). Press to select input 3, unbalanced (RCA). RS-232 Input - DB9 female For automated systems, connect to serial controller (listen-only). Opus PowerLink connection - 4 pin XLR male connector Connect only to Opus 21 Power Centre using supplied cable. Speaker Output Left - Binding Post (optional) Designed for cables with spade lugs. Observe polarity (+/-) markings on the top of the connector. Speaker Output Left - 4mm Banana Observe polarity (red +, blue -). Connect the center (yellow) jack to loudspeaker ground if available. Speaker Output Right - Binding Post (optional) Designed for cables with spade lugs. Observe polarity (+/-) markings on the top of the connector. Speaker Output Right - 4mm Banana Observe polarity (red +, blue -). Connect the center (yellow) jack to loudspeaker ground if available. Analog input 1 - XLR female connector, pin 2 non-inverting, pin 3 inverting Connect to balanced source. 20 Vrms maximum, 20 kOhm input impedance (10 kOhm per phase). Analog input 2 - RCA connector Connect to unbalanced source. 10 Vrms maximum, 10 kOhm input impedance. Analog input 3 - RCA connector

Connect to unbalanced source. 10 Vrms maximum, 10 kOhm input impedance.

RS-232 Serial Control

The s30 amplifier contains a serial control input which allows your entire Opus 21 family to be operated from an automated controller. The RS-232 port operates in listen-only mode and is opto-coupled to prevent ground loops. Programming commands and configuration details are available on our web site.

Thermal Protection

If the s30 is driven at high levels for excessive periods of time, the integral thermal protection may trigger, causing the amplifier to mute the outputs. The display will indicate the temperature of the internal heatsinks. Once the amplifier has cooled sufficiently, the display will return to normal and the amplifier can then be un-muted.

Specifications

Dimensions 24 x 25 x 7.5 cm / 9.5 x 9.8 x 3" W x D x H

Weight 9.5 kgs / 21 lbs. shipping

Power Output 30 Watts continuous into 8 Ohms

Frequency Response +/- 0.1 dB from 20 Hz - 20 kHz

Maximum Gain +26 dB at volume level 99

Attenuation 0.5 dB steps from -30 dB to full scale

1.0 dB steps from -69 dB to -31dB

Inputs Direct connection to Opus 21 sources / cd player

(1 pair) Analog balanced via XLR

(2 pair) Analog single-ended via RCA

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com