

RICCAR®

R-Series

R500 R600 R700
R800 R800C

Owner's Manual



Contents

IMPORTANT SAFETY INSTRUCTIONS	2
Polarization instructions.....	3
Thermal fuse protection.....	4
Description of the vacuum.....	5
Assembly & Operation	
Attaching the handle.....	6
On/Off switch.....	7
Handle adjustments.....	7
Replacing vacuum bag.....	8
Replacing secondary and post filters.....	9
Removing and reinstalling bottom plate.....	10
Replacing headlight bulb.....	11
Replacing agitator belt.....	11
Unclogging nozzle and hose.....	12
Full bag indicator light.....	13
Tools	
FastTask™ cleaning tools.....	14
Optional cleaning tools.....	15
Owner's information	16
Warranty	17

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: The manufacturer cannot accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to your Authorized Retailer for service.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without vacuum bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not attempt to service the unit while appliance is plugged in.
- Do not use vacuum to pick up water or any wet materials.
- Use extra care when cleaning on stairs. To avoid injury and damage, vacuum should remain at base of stairs while in use.


SAVE THESE INSTRUCTIONS.

Polarization instructions

Power Cord - 2-Wire Polarized

Household models R500, R600, R700 & R800

To reduce the risk of electric shock this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

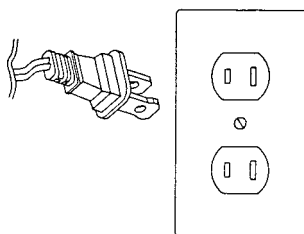


Grounding Instructions

Model R800C Only

This vacuum cleaner must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This vacuum cleaner is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This vacuum cleaner is for use on a nominal 120-volt circuit and has a ground plug (see illustration). Make sure that the vacuum is connected to an outlet having the same configuration as the plug. No adapter should be used with this vacuum.

WARNING – Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the vacuum – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

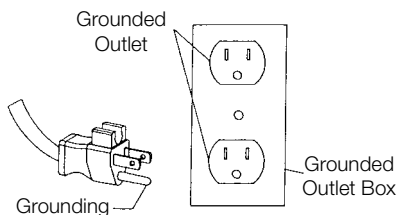

Thermal fuse protection

Your Riccar vacuum cleaner comes equipped with a Manual Reset Thermal Fuse Protector. This thermal protector is designed to protect your vacuum cleaner from overheating due to a restriction in airflow (i.e. clogged hose, operating the vacuum without a bag). Should this situation occur, the thermal fuse protector will safely shut off the vacuum cleaner to avoid any potential damage.


NOTE: To determine it was the thermal fuse protector that turned off your vacuum cleaner, please refer to the vacuum cleaner's headlight. If the headlight is on while the motor is off, then the thermal fuse protector did safely shut down the motor. If both the headlight and motor are off, then there is some reason other than the thermal protector (i.e. pulled plug) your vacuum is off.

To reset the thermal fuse:

1. Unplug the vacuum cleaner
2. Check for problem – over-filled bag, clog in hose, clogged filters, etc.
3. Correct problem
4. Locate "tripped" fuse – the small white button located on the bottom of the back side of the main body (roughly one inch to the right of the left wheel)
5. Using a pencil, paper clip or other pointed object, push the reset button in
6. Plug vacuum cleaner in and resume use

Please contact your Authorized Riccar Retailer with any questions.

Description of the vacuum

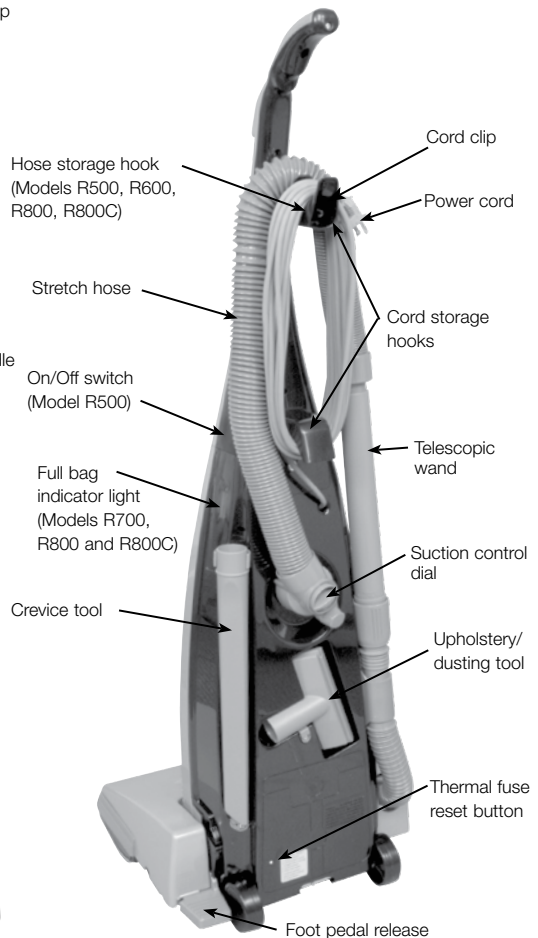

Riccar Replacement Parts

**Genuine Riccar High Flow
HEPA Vacuum Bags**
Part #C13H-6 6 per package

**Genuine Riccar EcoPure
Vacuum Filter Bags**
Part #C13-6 6 per package

Vacuum Agitator Belt
Part #A20-R2P

Secondary Filter
Part #B222-0500

Light Bulbs, Xenon
Part #A350-0000
Wedge Base, 0.917amp
T 3 ¼ Xenon

Post Filter
Part #RF4-2

Operation

Attaching the handle

The vacuum cleaner and the handle are packed separately.

1. After first removing the handle screw [Fig. 1], position the handle behind the vacuum cleaner and level with the top of the unit. Hold the power cord down and away from the vacuum while the handle is being attached [Fig. 2]. Make sure that the switch on the handle is positioned toward the front of the vacuum cleaner.
2. On the bottom of the handle are two “T-shaped” rails that slide forward onto two guides located on the top of the vacuum cleaner. Line up the handle so that the “T” rails will slide into the guides and push the handle forward [Fig. 3].
3. Insert the handle screw and tighten securely.
4. Attach the power cord at the clip located on the upper cord hook [Fig. 4].
5. Turn the upper cord storage hook to the upright position and wind the power cord around the cord storage hooks when storing the vacuum cleaner.



Fig. 1



Fig. 2

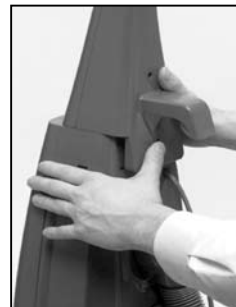


Fig. 3



Fig. 4

On/Off switch

1. To start the vacuum cleaner, flip the ON/OFF switch (located on the handle on Models R600, R700, R800 and R800C or on the side of bag compartment on Model R500) to the ON position as indicated by “I” on the switch [Figs. 5 and 6].
2. To stop the vacuum cleaner, flip the ON/OFF switch to the OFF position as indicated by “O” on the switch.
3. Turn the vacuum cleaner off before unplugging from electrical outlet.



Fig. 5



Fig. 6

Handle adjustments

The handle can be set to one of three positions: Upright, Middle or Low. To release the handle, step on the pedal at the left rear corner of the vacuum cleaner [Fig. 7].

1. Upright Position: Handle locks in this position for vacuum cleaner storage [Fig. 7]. The handle should always be in the upright position when cleaning tools are used.
2. Middle Position: This position is for normal cleaning [Fig. 8]. While in the middle position, the front of the nozzle can be raised for crossing thresholds between rooms by lowering the handle.
3. Low Position: With the handle in the middle position, press the foot pedal release again to allow the vacuum to achieve the low position. This position is used for cleaning under furniture [Fig. 9].



Fig. 7



Fig. 8



Operation

Replacing vacuum bag

Genuine Riccar vacuum bags should be used for best performance and air filtration. Always operate the vacuum cleaner with a vacuum bag installed.

NOTE: If secondary or post filters need to be replaced, see page 9 before replacing the vacuum bag.

1. Remove the used vacuum bag by pulling bag collar off the bag holder [Fig. 10]. Do not re-use filled vacuum bags.
2. Attach the new vacuum bag onto the bag holder.
3. Re-insert the tab on bottom edge of bag compartment cover into the groove on the bag compartment housing [Fig. 11]. Press it into place and close the bag compartment cover tightly.



Fig. 10



Fig. 11

Replacing secondary filter

The secondary filter protects the motor from dust and dirt. Before installing a new vacuum bag, check the filter. Accumulated dirt in the bag compartment will be collected on this filter and may restrict motor performance when the filter becomes dirty.

1. Remove the vacuum bag to access the secondary filter.
2. Remove secondary filter from bottom of bag compartment [Fig. 12].
3. The secondary filter can be washed or replaced. If washed, make sure filter is completely dry before reinstalling.
4. Reinstall by sliding filter under bag support fingers [Fig. 13].

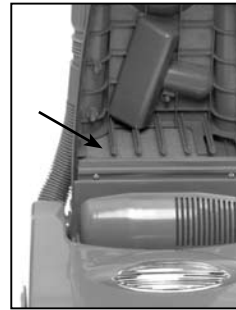


Fig. 12



Fig. 13

Replacing post filter

Your Riccar vacuum cleaner is equipped with an auxiliary post filter to capture fine dust particles and purify the air before it exits the machine. It is important to change the post filter regularly – approximately every third vacuum bag change, or as needed.

1. Remove bag compartment cover and locate the post filter on inner bottom of cover [Fig. 14].
2. Remove used filter.
3. Align slits in new filter over tabs and press securely into place.

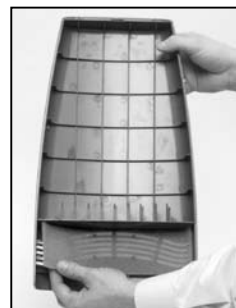


Fig. 14

NOTE: Post filters cannot be washed.

Operation

Removing and reinstalling bottom plate

CAUTION: Disconnect the vacuum cleaner from the electrical outlet before removing the bottom plate.

1. Depress handle release pedal twice and place the vacuum cleaner in the low position.
2. Turn vacuum cleaner over, exposing the underside [Fig. 15].
3. Slide locking latch to the right [Fig. 16].
4. Press tabs inward on each side [Fig. 17] and pull bottom plate off.
5. Reinstall by placing lower edge of bottom plate along lower edge of nozzle [Fig. 18]. Snap plate into place. Slide locking latch to the left to secure.



Fig. 15



Fig. 16



Fig. 17

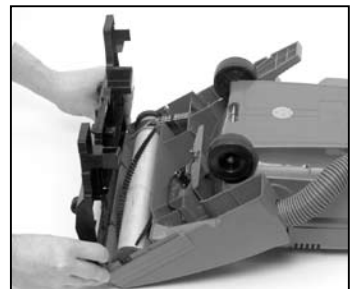


Fig. 18

Replacing headlight bulb

CAUTION: Disconnect the vacuum cleaner from the electrical outlet before replacing bulb.

1. Remove bottom plate (See "Removing and reinstalling bottom plate").
2. Remove the headlight bracket by pulling upward on bracket [Fig. 19]. To remove the light bulb, pull straight out of socket. To install new bulb, simply push bulb straight into socket for a secure fit. Reinsert bracket back into nozzle.
3. Re-install bottom plate (See "Removing and reinstalling bottom plate").

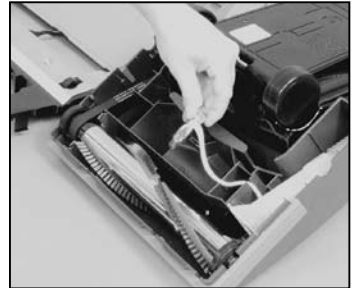


Fig. 19

Replacing agitator belt

CAUTION: Disconnect the vacuum cleaner from the electrical outlet before replacing belt.

1. Remove bottom plate (See "Removing and reinstalling bottom plate"). Remove vented support fitting [Fig. 20] and belt guard [Fig. 21].
2. Take out the agitator assembly and remove worn or broken belt from agitator pulley and motor drive shaft [Fig. 21].
3. Loop new belt around the agitator pulley and the motor drive shaft and re-insert the agitator assembly back into the housing. Turn the agitator assembly by hand, making sure the belt is not twisted and all rotating parts move smoothly [Fig. 22].
4. Re-insert the vented support fitting and belt guard, making sure that they are in place before fastening the bottom plate to the two ribs at the front of the housing. Re-install bottom plate.



Fig. 20



Fig. 21



Fig. 22

NOTE: To ensure maximum cleaning efficiency, the condition of the belt should be checked regularly. If belt is stretched, cracked or if excessive slipping is occurring, replace the belt.

Operation

Unclogging nozzle and hose

CAUTION: Disconnect the vacuum cleaner from the electrical outlet before cleaning nozzle housing.

The nozzle hose, located on the back of the vacuum, carries the dirt from the nozzle to the vacuum bag. The hose also functions as the attachment cleaning hose. First check to see that a bag is installed or that the bag has not broken open.

If the hose should become clogged:

1. Pull out and turn the lid of the cleaning attachment opening. Remove the clog or blockage [Fig. 23].
2. Remove hose cuff from nozzle inlet and check for clog [Fig. 24].
3. Turn unit over and remove bottom plate (See "Removing and re-installing bottom plate"). Check nozzle inlet tube for obstructions [Fig. 25]. Clear tube and re-install bottom plate.



Fig. 23



Fig. 24



Fig. 25

Full bag indicator light

Models R700, R800 and R800C

The warning light is located on top of the bag compartment (see Fig. 26). The light will trigger if the vacuum bag is full or if there is a clog in the vacuum cleaner. If the light indicator turns on, check the vacuum bag. If it is not full, check the vacuum cleaner for clogs by inspecting the agitator area (see "Removing and re-installing bottom plate"), hose and/or attachment inlet.

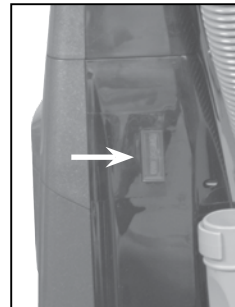


Fig. 26

Please disregard the indicator light during attachment cleaning. The light is designed to indicate air flow restriction during carpet cleaning. When using cleaning attachments, the indicator will light periodically due to normal attachment air flow restrictions.

Edge cleaning

The edge cleaning feature provides for improved cleaning of carpets near walls and stationary furniture. For maximum edge cleaning, place the right side of the nozzle against the wall or furniture.

Automatic carpet height adjustment

Your Riccar upright vacuum cleaner is designed with an Automatic Self-Adjusting Rug Nozzle. No manual adjustments are required. The height of the rug nozzle is instantly and automatically adjusted to carpet pile height. This self adjusting feature allows the rug nozzle to float evenly over all carpet pile surfaces.

Tools

FastTask™ cleaning tools

(Models R500, R600, R800 and R800C)

Select models are equipped with FastTask™ cleaning tools which include a combination upholstery/dusting tool, crevice tool and stretch hose.

1. Remove the telescopic wand from the body of the vacuum [Fig. 27]. Unlock wand collar (located on end of wand) [Fig. 28], extend wand and re-lock the wand collar.

NOTE: Wand collar locking rotation is marked with arrows on wand. Wand collar lock and unlock functions require only 1/2 turn of collar.

2. Remove the crevice tool on left side of vacuum cleaner and insert into end of wand [Fig. 29]. The vacuum is now ready for crevice cleaning.
3. Insert the combination upholstery/dusting tool (located conveniently in the back of the bag compartment) onto the end of the crevice tool [Fig. 30]. The combination tool can also be inserted directly onto the telescopic wand. To convert the dusting brush to an upholstery tool, simply slide the brush off [Fig. 31].



Fig. 27



Fig. 28



Fig. 29



Fig. 30



Fig. 31

Optional cleaning tools

All Riccar upright vacuum cleaners offer an attachment port that enables you to insert optional cleaning tools (available through your Riccar Retailer). Should you have carpeted stairs, for example, it is highly recommended to use one of the two kits pictured, since each offers either a 12- or 15-foot hose for safe stair cleaning. These kits are effective overall cleaning tools to address some of the hard to reach areas of your home or car. Talk to your Riccar Retailer to see which tools might be beneficial for your home.

For models without on-board tools

Deluxe Attachment Set (Fig. 32)

1. 12-foot hose
2. Curved wand
3. Extension wand (2 pieces)
4. Dusting brush
5. Crevice tool
6. Upholstery tool
7. Upholstery brush insert
8. Deluxe floor brush

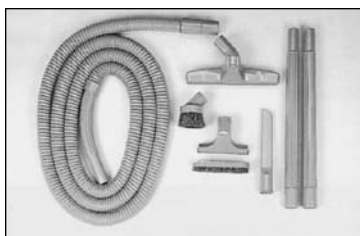


Fig. 32

1. **How to connect the hose assembly to the vacuum cleaner:** Pull out and open the suction control dial by turning the lid located on the back of the vacuum cleaner. Insert the soft, rubber end of the hose assembly into the cleaning attachment opening. Push in while twisting the hose end to ensure the hose is fastened securely (Fig. 34).
2. **How to connect the tool:** You can connect any of the cleaning tools to the end of the extension wand(s) or curved wand and twist for a secure fit. To remove the cleaning tool from the extension wand(s) or curved wand, simply twist and pull apart.

WARNING: There is no way to turn this vacuum's brushroll off. Therefore, when using the cleaning tools it is important to keep your Riccar vacuum from running in the same spot for a period of time, as carpet or flooring damage could result. If you need to keep the vacuum in the same spot for a period of time, such as at the base of the stairs when cleaning the stairs, place something, like a flattened cardboard box, under the vacuum to prevent damage to the floor.

For models with on-board tools

Attachment Set (Fig. 33)

1. 15-foot hose
2. Curved wand
3. Deluxe floor brush



Fig. 33



Fig. 34

Owner's information (keep this for your records)

The model and serial number of this product may be found on the back side of the unit. You should note the model and serial number of your unit in the spaces provided below, and retain this book as a permanent record of your purchase.

Date of purchase _____

Serial number _____

Model number _____

Purchased from:

Store name _____

Address _____

City, State, Zip _____

Telephone _____

Your Riccar vacuum cleaner is a product of high quality materials and superior workmanship. Your new Riccar vacuum cleaner will work on carpets, floors and for many other cleaning needs in your home. We urge you to read these operating instructions carefully before you use this vacuum cleaner, in order to obtain the full performance and satisfaction it can offer you.

For Best Performance

- Before you plug in your Riccar vacuum cleaner, make sure that the voltage indicated on the rating plate (located near the bottom on the back of the vacuum) is the same as your local supply.
- Keep machine and all accessories clean and in good operating condition.
- Store machine carefully in a dry area.
- Always use genuine Riccar vacuum bags and filters. Use of other products may result in poor cleaning or filtration performance. Riccar filtration products are designed for maximum performance.
- Have machine checked periodically by an Authorized Riccar Vacuum Service Center.
- Use only Riccar Vacuum Cleaner Authorized Service Centers for parts and service.
- For optimum cleaning performance and safety, follow your Owner's Manual and keep it for future reference.

What is Covered:

This warranty covers any defects in material and workmanship in your new Riccar vacuum.

How Long Coverage Lasts:

Warranty coverage for Riccar R-Series household model vacuums lasts three years and one year for R-Series commercial model vacuums. Household models used commercially are only warranted for 90 days.

What is Not Covered:

- Damage to the vacuum which occurs from neglect, abuse, alterations, accident, misuse or improper maintenance.
- Normal replacement items: agitator brushes, belts, light bulbs, disposable bags and disposable filters.

What Riccar Will Do:

This warranty provides, at no cost to you, all labor and parts to place this vacuum in correct operating condition during the warranted period.

How to Get Service:

Warranty service can only be obtained by presenting the vacuum to an Authorized Riccar Retailer. A proof-of-purchase and product serial number will be required before service is rendered. To locate your nearest Riccar Retailer, please call 1-888-6-RICCAR or visit the Riccar website at www.riccar.com.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL, EXPRESSED OR IMPLIED, (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). THIS WARRANTY DISCLAIMS LIABILITY FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

How State Law Applies:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RICCAR®
www.riccar.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>