


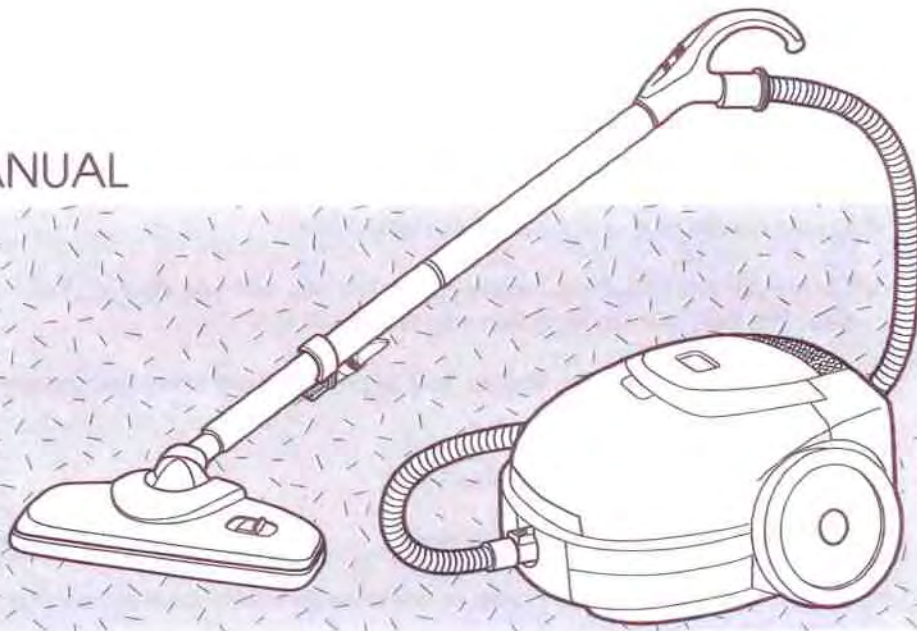

VACUUM CLEANER

RC 1100

OWNER'S MANUAL



READ AND KEEP THIS

- Thank you for purchasing this vacuum cleaner.
- For proper operation, please read this manual carefully before using.

IMPORTANT SAFEGUARDS

Read All Instructions Carefully Before Using

When using an electrical appliance, basic precautions should always be followed including the following.

WARNING - To reduce the risk of fire, electric shock, or injury


1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as description in this manual.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. This appliance is intended for household use only and not for commercial or industrial use.

SAVE THESE INSTRUCTIONS



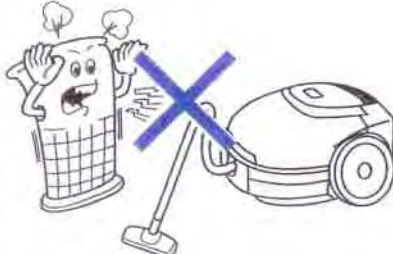
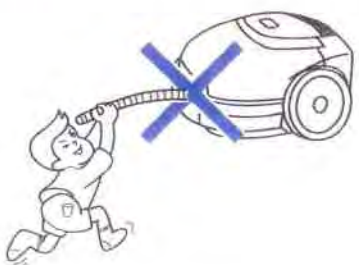
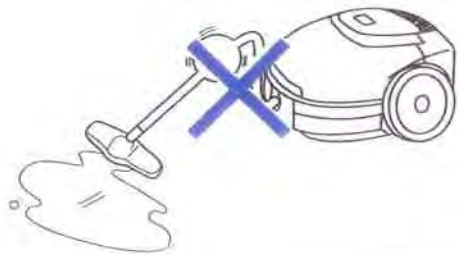
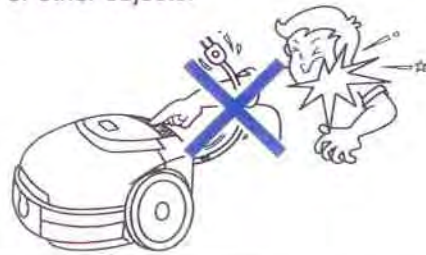
CONTENTS

Description	4
Precautions for safe use	5
How to use	6
Before asking for service	9

Description

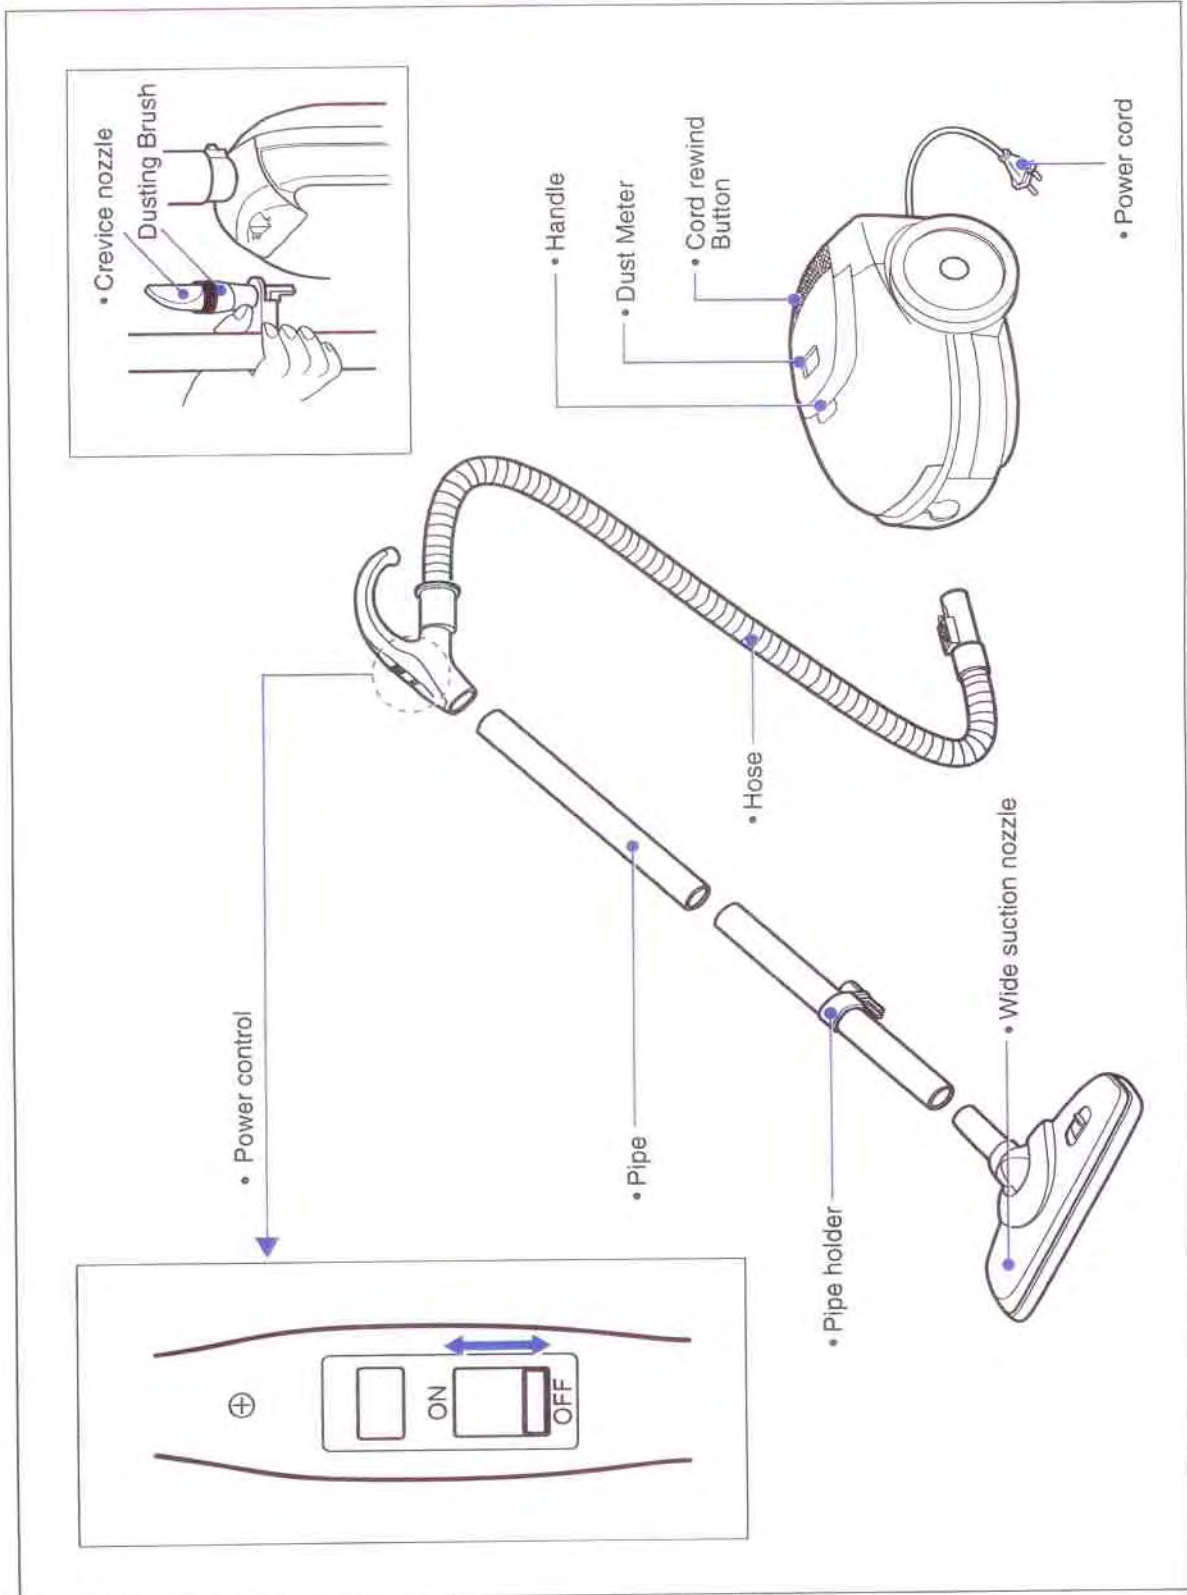


Precautions for Safe Use
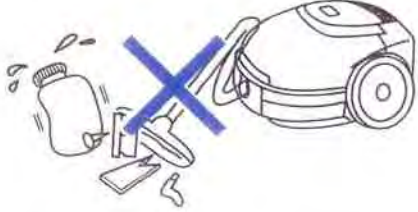
<ul style="list-style-type: none">• This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.	<ul style="list-style-type: none">• Do not vacuum inflammable materials, needles, pins, razor blades, etc. 
<ul style="list-style-type: none">• Do not vacuum without a dust bag. If no dust bag, the dust cover would not be closed completely. 	<ul style="list-style-type: none">• Keep the unit away from heat sources such as a heater. 
<ul style="list-style-type: none">• Do not step on the hose or pull it forcibly. The hose may be flattened or torn. 	<ul style="list-style-type: none">• This product is provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.
<ul style="list-style-type: none">• Do not vacuum dust which contains moisture/water. 	<ul style="list-style-type: none">• When rewinding the power cord, hold the plug body before pressing the cord rewind button. The cord moves quickly and might hit you or other objects. 


How to Use

1. How to operate

- Put together as shown on page 3. Description.
- Plug the power cord into a 120V AC 60Hz ; receptacle outlet.
- Set the remote control switch "ON".
- The vacuum cleaner will be vacuuming at this time.
- If you continue to push the remote control switch, the air hole opens and the suction power decreases.
- Adjust the switch as needed for different cleaning jobs.

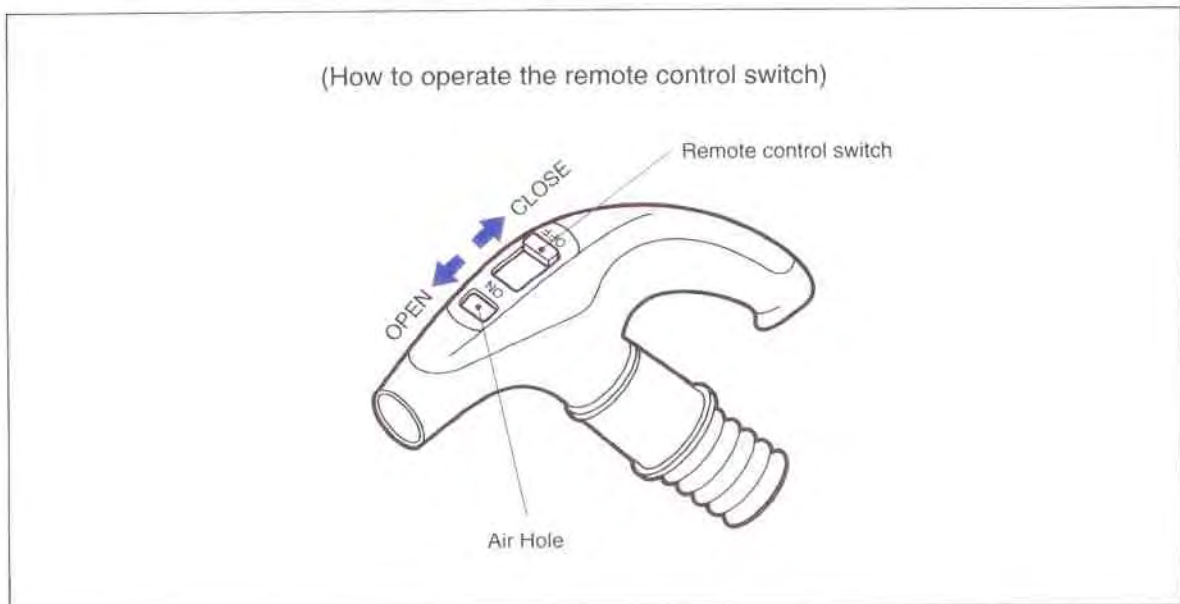


2. How to change the dust bag.

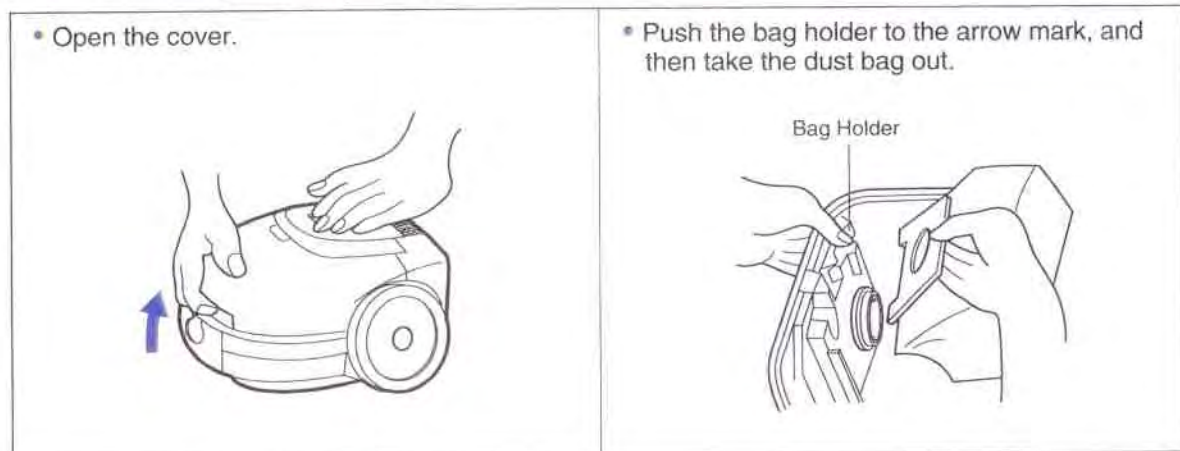


5. How to use the crevice nozzle

- Cleaning window frames or narrow spaces between furnitures, walls, and floor.

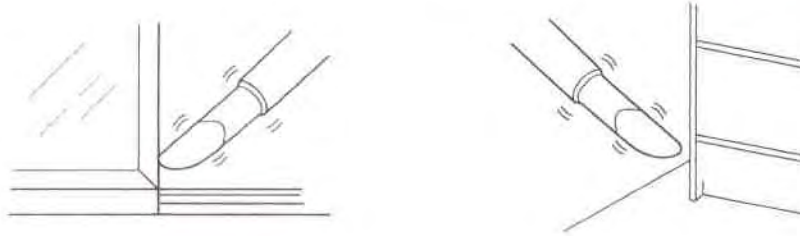

- Cleaning curtains, sofa, etc.

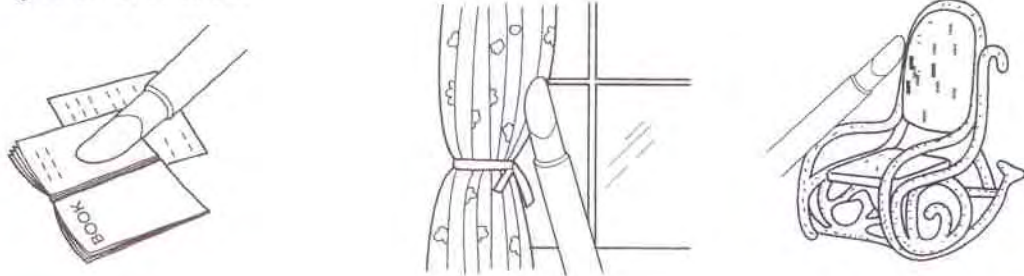


6. How to clean the filter.

- Open the cover.
- Please pull out the plug before cleaning.




- Pull the filter out from the unit while lifting the gasket.

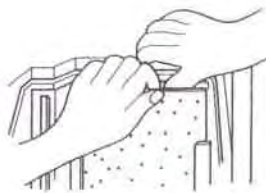

- After washing the filter with water, dry it completely.




- Insert it again originally.

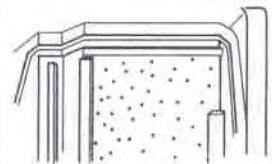


7. How to store the vacuum cleaner

- Put the pipe holder on the groove of the cleaner body.

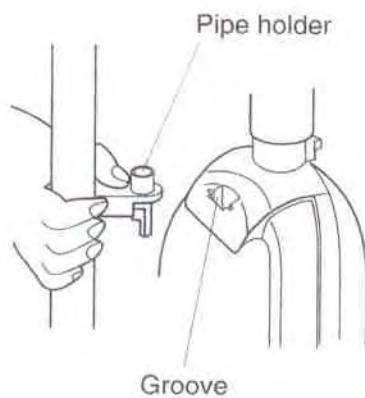

- Wind the hose around the hose handle as shown below.

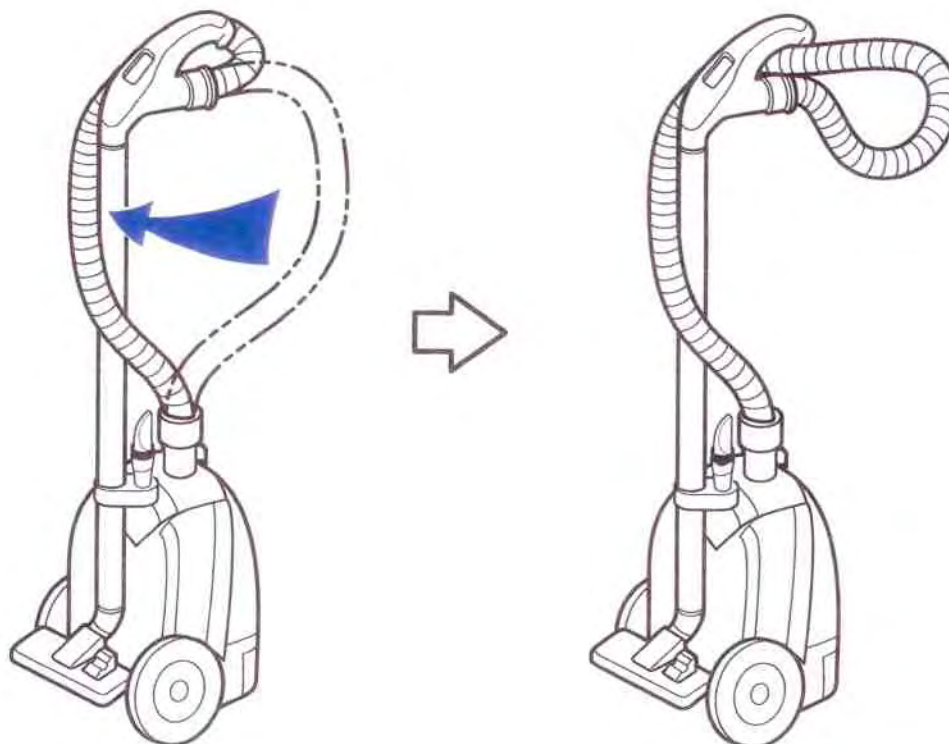

Before Asking for Service

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	<ul style="list-style-type: none">• Dust bag• Pipe or hose	If dust bag is dirty, clean it. If clogged or blocked, remove the object.
The cleaner does not work.	<ul style="list-style-type: none">• Power cord• Suction hose	Check if power cord is plugged. Check if hose is attached firmly into suction hole.
Power cord does not rewind.	<ul style="list-style-type: none">• Power cord	Pull the power cord out a little and press the cord rewind button.
When the dust bag is full or blocked or any of the accessories is blocked, the over-heating protection for the motor is activated.		Switch off and unplug the cleaner and check the dust bag, accessories and blockages, then allow the motor to cool down. The cleaner can be switched on again about 30 minutes.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>