 


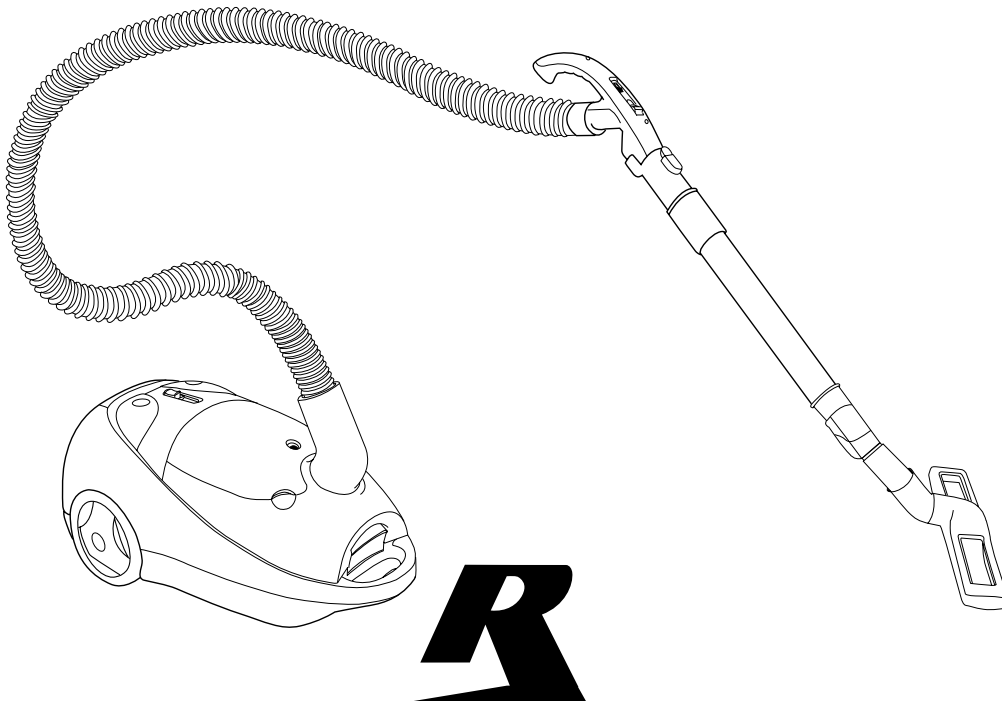

Canister Vacuum Cleaner

Operating Instructions

For models RC-1500S



Thank you for purchasing a Riccar product.

To ensure you get the best results, before operating the unit, please read this manual completely and follow the user instructions. This manual should be kept for any future reference. To locate your nearest Authorized Riccar Retailer for sales or service, please visit our website at www.riccar.com or call from within the USA at 877-302-4746.

IMPORTANT SAFETY INSTRUCTIONS

Read All Instructions Carefully Before Using This Appliance

When using an electrical appliance, basic precautions should always be followed, including the following :

WARNING - To reduce the risk of fire, electric shock, or injury :

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used near children.
4. Use only as described in this manual.
Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked: keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. This appliance is intended for household use only and not for commercial or industrial use
15. Do not operate the cleaner if :
 - the power cord is damaged.
 - the hose shows visible signs of damage.
- 16 . Do not use without dust bag and/or filters in place.
- 17 . Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.
18. The hose contains electrical wires. Do not use if damaged, cut or punctured.
Avoid picking up sharp objects.
19. To reduce the risk of electric shock, this appliance has a polarized plug.

SAVE THESE INSTRUCTIONS

CONTENTS

DESCRIPTION AND USING	4~5
PRECAUTION FOR SAFE USE	6
REPLACING BAGS & FILTERS	7
BEFORE ASKING FOR SERVICE	8

DESCRIPTION AND USING

DUST METER

 
How to check the DUST METER :

To operate the cleaner with MAX power, keep the wide suction brush apart from the floor.

- If the red indicator of the DUST METER appears.
 - Empty the dust bag.
 - In case the hose is blocked with a large object, remove it.
- When cleaning with a tool (dusting brush, upholstery nozzle, crevice nozzle), the red indicator may appear. In this case, continue cleaning.

HOSE ADAPTER


- When separating the hose from the body, pull the hose adapter while pressing the button.

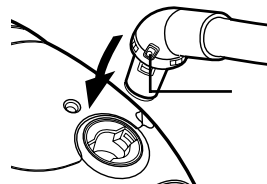

HOSE HANDLE




 
HARD SURFACE FLOOR TOOL

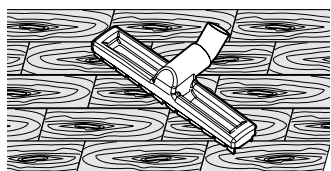

- For use on tile hard wood, and linoleum floors


CLEANING TOOLS

  Dusting Brush Upholstery Nozzle

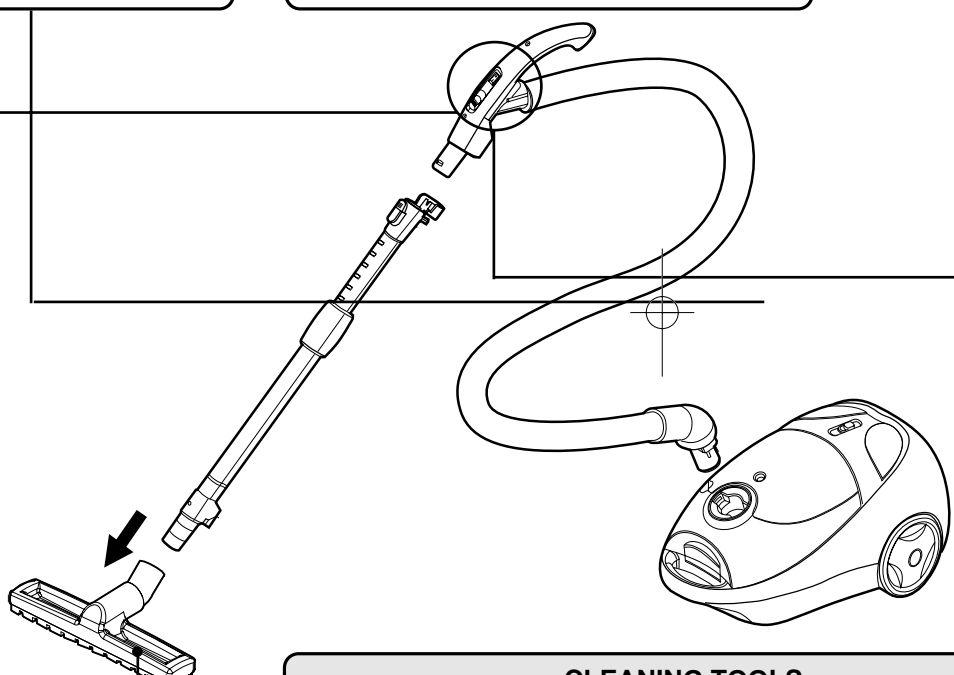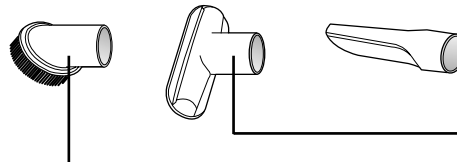


ADAPTER

 Remove the adapter from the body, pull the adapter button.


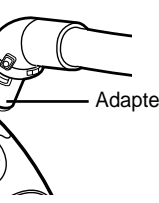


Adapter button

 CORD REWIND

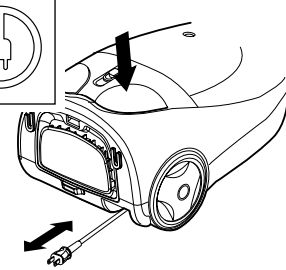


SWITCH ON / OFF

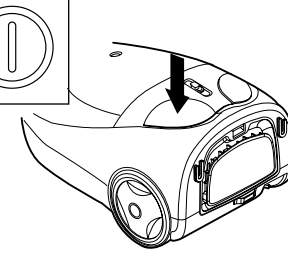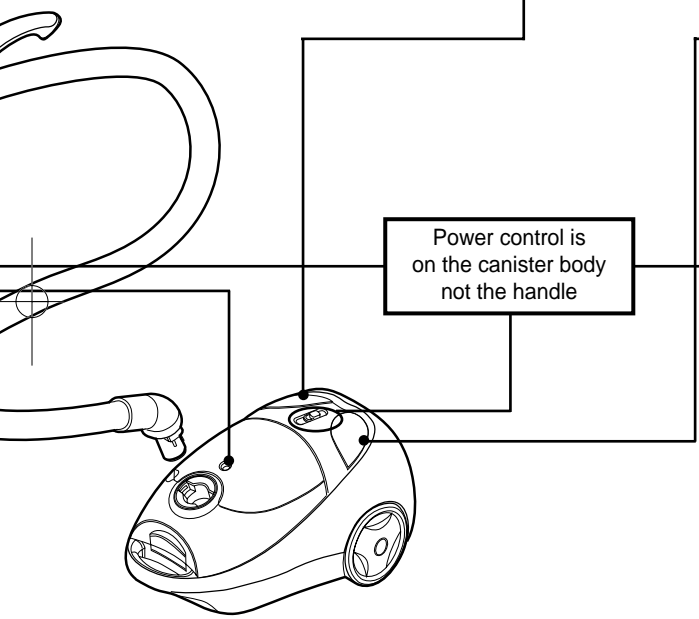  
Power control is on the canister body not the handle

 POWER CONTROL

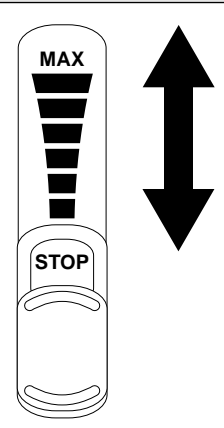


CLEANING TOOLS

 Crevice Nozzle Crevice Tool

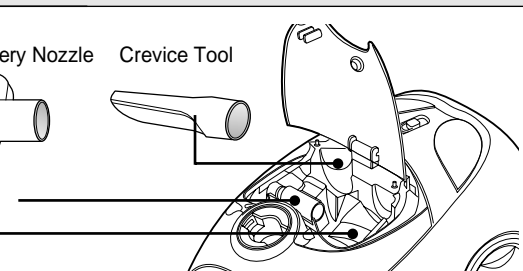

STORAGE

 - Insert the brush holder into the groove.

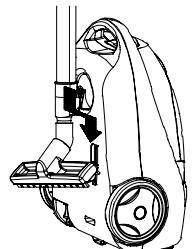


PRECAUTIONS FOR SAFE USE

This vacuum cleaner should only be used for normal dry household dust and dirt.


The manufacturer cannot be held responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly used for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.

 
- Do not vacuum areas which contain moisture or water, inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag.

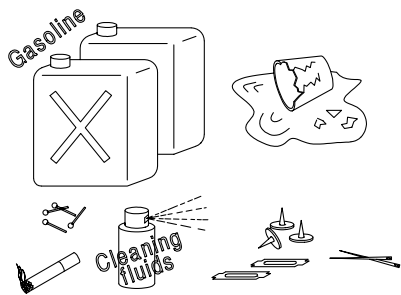

 
- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord out beyond the red mark.

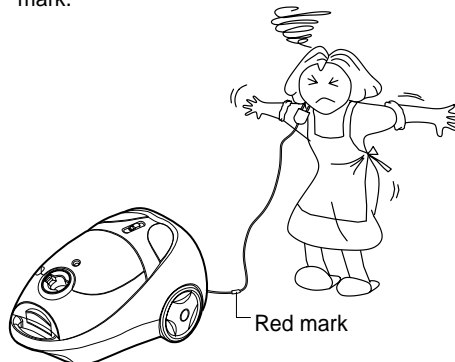

 - Make sure a dust bag and a motor protection filter are always inserted.

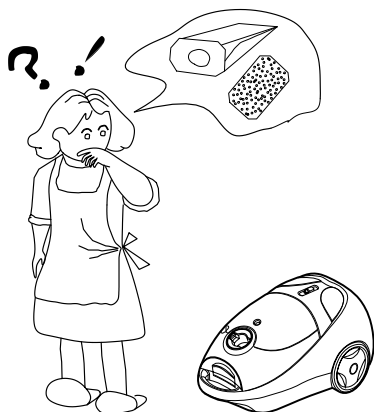


- This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

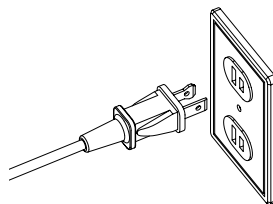 

REPLACING DUST BAG & FILTERS

 REPLACING THE DUST BAG

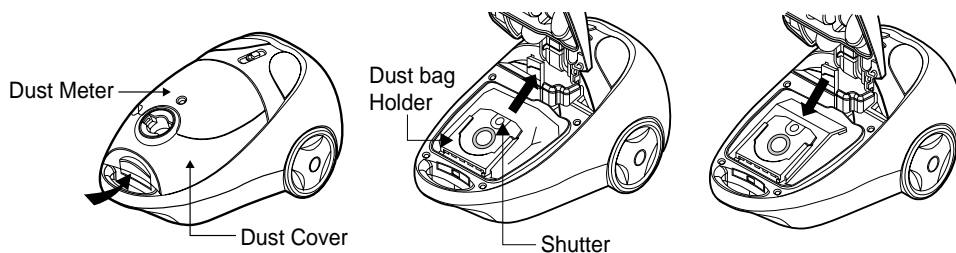


- Switch off and open the dust cover.
- Pull the shutter of the dust bag.
- Hold the cover while separating the dust bag from the dustbag holder
- Insert the new bag.

NOTE: We recommend that the dust bag is changed when dust meter indicates RED or suction power is weak. If no dust bag has been placed into the dustbag holder, the cover can not be closed.


REPLACING THE FILTERS

Secondary Filter Inlet

 - Switch off and open the cover.
- Separate Filter inlet.
- Shake the dust out of the filter.
- Insert the filter and close the cover.

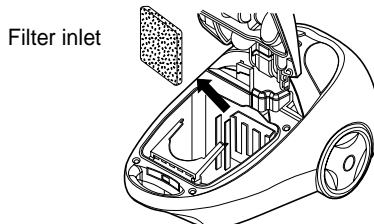

Post Filter

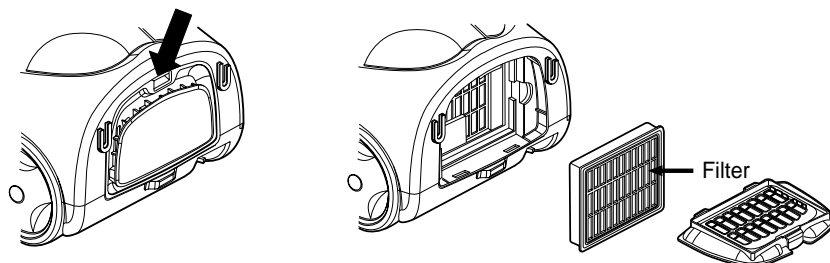 

- Switch off and open the grill
- Remove the filter and replace it

BEFORE ASKING FOR SERVICE

- Please check each item below if you have trouble with your cleaner.
Before checking, ensure that the cleaner is unplugged from the power supply.

Problem	Check Point	Note
<ul style="list-style-type: none"> Suction power is weak. 	<ul style="list-style-type: none"> Dust bag Wand or hose 	<ul style="list-style-type: none"> If dust bag is full, replace it. If clogged or blocked, remove the object.
<ul style="list-style-type: none"> The cleaner does not work. 	<ul style="list-style-type: none"> Is the hose adapter inserted into the suction opening of the cleaner completely ? When the dust bag is full or blocked or any of the accessories are blocked, the over-heating protection for the motor is activated. 	<ul style="list-style-type: none"> Insert it completely. Switch off and unplug the cleaner and check the dust bag and accessories and remove any blockages. The cleaner can be switched on again after approximately 20 minutes.
<ul style="list-style-type: none"> Power cord does not rewind. 	<ul style="list-style-type: none"> Power cord 	<ul style="list-style-type: none"> Pull the power cord out a little and press the cord rewind button.
<ul style="list-style-type: none"> Power cord won't pull out of the cleaner. 	<ul style="list-style-type: none"> Power cord 	<ul style="list-style-type: none"> Do not pull it by force. Rewind it a little by pressing the cord rewind button and pull it out

SPECIFICATIONS

Model	RC-1500S
Rating	120V/60Hz
Ampere	9.5A
Weights(Net)	15.5 Pounds
Dimension (L X W X H)	19" x 12.5" x 9.3"
Cord Length	19.5 feet

- Specifications can be changed for improvement without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>