

Mini Twin Desktop Charger for Nokia 5100/6100 Cellular Phones

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Mini Twin Desktop Charger for Nokia 5100/6100 Cellular Phones lets you charge or discharge lithium ion, nickel-metal hydride, or nickel-cadmium rechargeable batteries for Nokia 5100/6100 cellular telephones. You can keep the phone with a battery installed in the front chamber and a spare battery in the rear chamber, so you always have the power you need to stay connected.

The charger has these features:

Battery Condition Detection — automatically detects whether the battery is discharging, charging, or fully charged.


2 LED Charging/Discharging Indicators — lets you see the battery's condition at a glance.

Short Circuit, Peak Voltage, and 4 1/2-Hour Maximum Time Protection — uses three different circuits to protect the battery in the rear slot from being damaged during charging or discharging.

Caution: Do not use any lithium ion battery other than one that is sold by RadioShack or manufactured by the original phone manufacturer.

OPERATION

1. Insert the supplied AC adapter's barrel plug into the charger's DC 6V jack, then plug the adapter's AC plug into a standard AC outlet. The green indicator lights for one second.

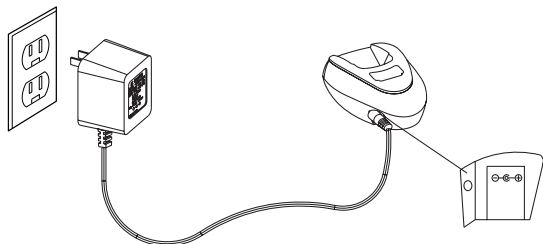


Cautions:



You must use a Class 2 power source that supplies at least 6V DC and delivers at least 300 mA. Its center tip must be set to positive and its plug must fit the charger's DC 6V jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the charger or the adapter.

- Always connect the AC adapter to the charger before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the charger.

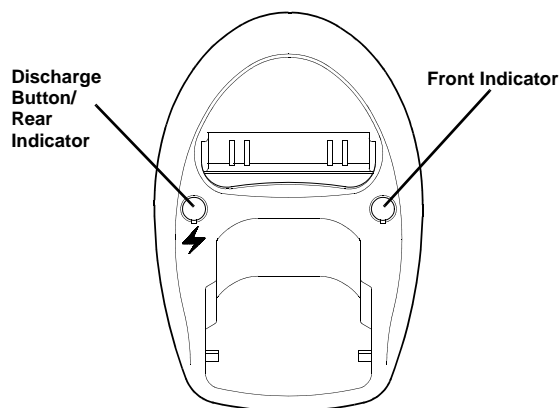

2. To charge a battery that is installed in a Nokia 5100 or 6100 cellular phone, insert the phone into the charger's front chamber. The red indicator lights. The indicator does not change, since charge status is indicated by the phone.
3. To charge an additional battery, simply insert it in the rear chamber. The charger starts charging the battery.

To discharge the battery, press the discharge button. The charger starts discharging the battery, then automatically starts charging when the battery is discharged completely.

Note: You cannot discharge a battery in the front chamber.

The rear indicator appears as follows:

Flashing Amber — standby

Red — charging

Steady Amber — discharging

Green — fully charged

Notes:

When a battery is installed in the rear chamber, pressing the discharge button reverses the process to discharge (if the battery is charging) or charging (if the battery is discharging).

The charger stops charging automatically if the battery cannot be charged to a minimum working voltage. If the rear indicator goes from red to flashing amber, replace the battery with a new one of the same type.

Do not store the battery in the charger for more than one week.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>