

# Riōvolt™

## Getting Started

Second Edition, August, 2001

Part Number 41000608-002

### Prog. — Create playlists of your favorite songs.

1. Press and hold the **Prog. Button** when CD is not in play.
2. Press the **▶▶**, **◀◀** or **+10** buttons to locate the tracks you want in your playlist.
3. Press the **Prog. Button** to select each track.
4. Repeat Steps 2 and 3 until you have finished selecting tracks.
5. Press **Play/Pause** to begin playing the playlist of tracks.
6. Press **Stop** to stop playing the playlist and to clear it from memory.

**+10** — Skip 10 tracks ahead.

### Mode

- |       |                          |
|-------|--------------------------|
| 1     | Repeat Current Song      |
| All   | Repeat All Songs         |
| S D   | Shuffle Directory        |
| S All | Shuffle/Repeat All Songs |

### Release Latch



### EQ

Press to cycle through:

(1) Normal, (2) Rock, (3) Jazz, (4) Classical, or (5) Ultra Bass

OR

Press and hold for 1.5 seconds to enter **Menu Mode**.

Press the **Joypad** to make changes and selections.

**Fast Forward** ▶▶ Next Menu/Select

**Rewind** ◀◀ Go Back/Exit

**Play/Pause** ▶|| Toggles options (On/Off, 1x/2x, etc.)

**Stop** ■ Escape Menu Mode.

1. **SPEED SCAN** — Controls the speed at which you can scan through directories. (1x, 2x, 4x, 6x)
2. **BEEP control** — When enabled, pushing certain buttons will produce audible beeps.
3. **EXT control** — Controls whether file extensions (MP3, WMA, CD, & ASF) are displayed.
4. **TAG control** — Controls whether ID3 tag information is displayed.

**Navi** — Press once to access directories on CD.


Press the **Joypad** to scroll through directories and to make selections.

**Fast Forward** ▶▶ Next Menu/Select

**Rewind** ◀◀ Go Back/Exit

**Play/Pause** ▶|| Move Up

**Stop** ■ Move Down

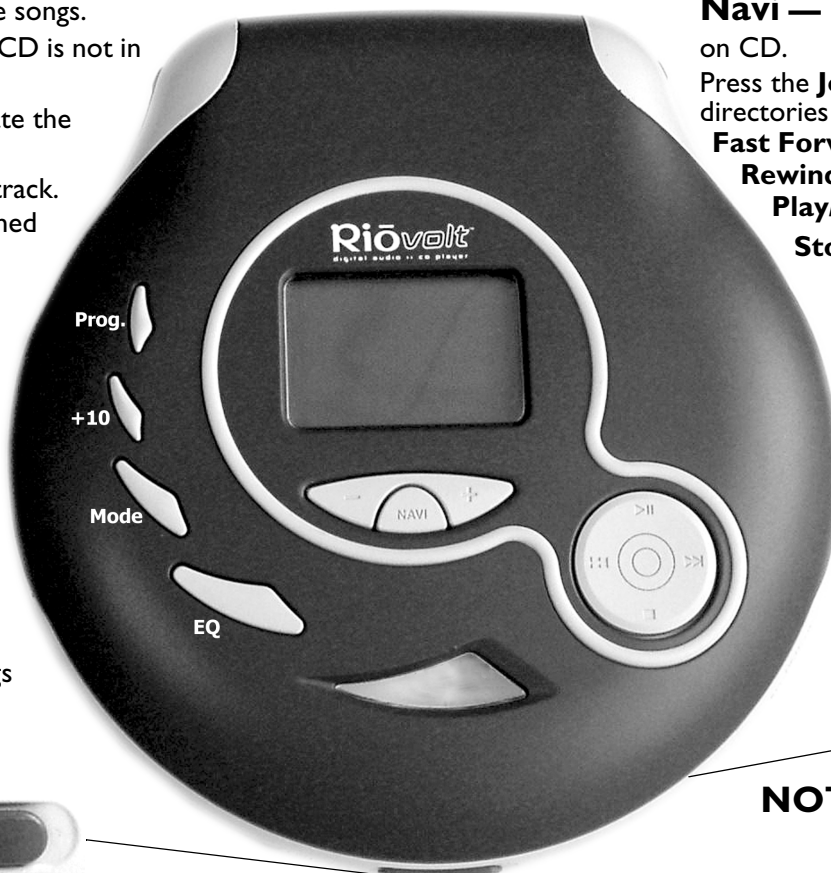

### Volume Bar

- Decrease
- + Increase

### Hold Switch



**NOTE:** The Hold Switch must be **OFF** to power on the RioVolt.

### How to Start:

1. Unpack the RioVolt SP90 and all of its components.
2. Remove the **Battery Door** and insert **2 AA Alkaline batteries** (included) and replace the **Battery Door**.
3. Plug the **Headphones** into the **Headphones Port**.
4. Slide the **Release Latch** to open the RioVolt.
5. Insert a music or digital audio CD into the RioVolt.
6. Snap lid shut.
7. Press and hold the **Play/Pause** button on the **Joypad** to turn the RioVolt SP90 on.

**NOTE:** If the RioVolt SP90 demonstrates no activity, check the **Hold Switch** on the RioVolt to make sure it is in the **OFF** position.

### Joypad

**Play/Pause** ▶||

Press to play or to pause.

Press and hold to turn on.

**Fast Forward** ▶▶

Press to go to next track.

Press and hold to fastforward through current track.

**Rewind** ◀◀

Press to return to previous track.


Press and hold to rewind through current track.

**Stop** ■

Press to stop.

Press and hold to turn off.

Refer to EQ and Navi functions for additional uses.

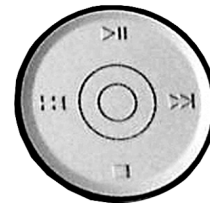

### Copyright/Trademark

© 2001 SONICblue, Incorporated. All Rights Reserved.

SONICblue, Incorporated does not assume any responsibility for errors or omissions in this document or make any commitment to update the information contained herein.

Rio® is a registered trademark of RioPort, Inc. in the United States and/or other countries and is used under license. All other brand and product names are trademarks of their respective companies or organizations.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>