


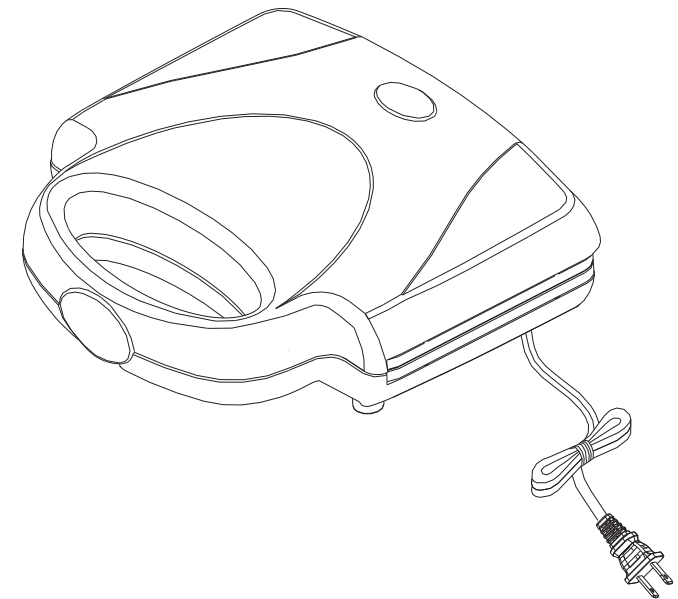

Instruction Manual
SANDWICH MAKER
MODEL: DC-SWM169



**READ ALL INSTRUCTIONS
BEFORE USING THIS APPLIANCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before using.**
- Do not touch hot surfaces. Use handles and knob.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. No user-serviceable parts inside. Return appliance to the nearest authorized service facility or call our toll-free customer service number 866-321-9509 for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Preheat the unit about 2 minutes before using.
- This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)
- **Warning: Do not use this appliance near water.**
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. Where the likelihood of immersion or splashing could occur.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Do not leave the appliance unattended when switched on.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord in the wall outlet.
- To disconnect, remove plug from wall outlet.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The appliance is only to be operated in the closed position.
- **WARNING: To prevent electric shock, unplug before cleaning.**
- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS

ADDITIONAL SAFEGUARD

Consumer Safety Information

THIS APPLIANCE IS INTENDED FOR INDOOR HOUSEHOLD USE ONLY.

DO NOT OPERATE APPLIANCE IF THIS LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

SHORT CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used,


- 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS

1. Handle Clip
2. Power Indicator Light
3. Top Housing
4. Top Cooking Plate
5. Bottom Cooking Plate
6. Bottom Housing
7. Power Cord and Plug

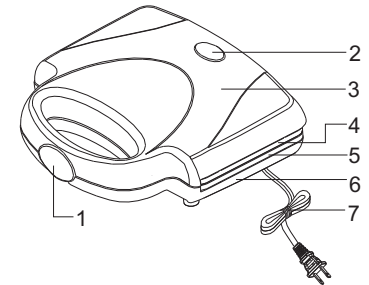

FEATURES

- 2-slice Baking Plate
- Power and Ready Indicator
- Non-stick Coating for Easy Cleanup
- Compact Upright Storage and Cord Wrap
- Skid-resistant Feet

OPERATING INSTRUCTIONS

NOTE: When using the Sandwich Maker for the first time, after unpacking your Sandwich Maker, open the lid, clean the cooking surfaces thoroughly by whipping with a damp sponge and dry the surfaces with a paper towel. For best results, prepare the non-stick surfaces by using a paper towel to wipe a thin layer of vegetable shortening or oil onto the non-stick surfaces of the Sandwich Maker.

CAUTION: Always use protective, heat-resistant, gloves or mitts when handling this product to avoid steam or other burns.

How to make sandwiches

1. Always preheat before use. Plug cord into a rating 120-volt AC power outlet while preparing the fillings.
2. The indicator light will illuminate when the plug is connected to the main outlet; it will stay on during preheating. The indicator light shuts off when appliance is preheated (preheat appliance for approximately 2 minutes).

CAUTION: Always preheat before use.

3. Lightly glaze both heating plates with a small amount of vegetable oil or a non-stick spray, and close the casing for the sandwich maker to heat up.
4. Prepare sandwiches by buttering bread on outer surfaces and placing desired ingredients within. Lift safety catch and open the sandwich maker. Place sandwiches on the heating plates.

CAUTION: Cooking surface is hot; handle with care.

5. Close the casing to ensure that the sandwich is placed evenly. Lock the safety catch. Normal cooking times will be 3~6 minutes for each sandwich. The red light will turn on and off during cooking as the thermostat keeps the sandwich maker at the proper baking temperature.

CAUTION: The appliance is not to be operated in the open position.

6. Remove the sandwiches from the heating plates with a plastic or wooden spatula. BE CAREFUL with your sandwiches, the fillings will be quite hot. Allow to cool for a few minutes before enjoying.
7. Unplug the power supply cord after cooking, and allow the sandwich maker to cool down.

SANDWICH RECIPES

You can use your Sandwich Maker around the clock - breakfast, lunch, dinner, dessert and snacks. Try your own creativity and transform leftovers into tasty delights or use traditional sandwich ingredients and fillings. Fruits and pie fillings make delicious treats when toasted between slices of bread and sprinkled with powdered sugar.

BREAKFAST

BREAKFAST SANDWICH (Makes 2 sandwiches)

1. 2 eggs
2. 6 oz grated cheese (Cheddar, Monterey jack or Swiss)
3. 2 oz cooked meat or vegetables.
4. 4 slices of bread of choice (butter or margarine optional)
5. Place two slices of bread, buttered side down, onto heating plates. Place cheese in center of each slice. Gently pour the beaten egg over cheese and cooked meat (ham, bacon) or vegetables. Top with remaining bread slices, buttered side up. Close and latch cover. Cook for 2 minutes.

FRIED EGGS (Makes 2 servings)

1. 4 eggs
2. Spices (to taste)
3. 1/2 teaspoon butter/margarine
4. Brush top and bottom well with butter or margarine for flavor. Crack one egg directly into each well of heating plates (1~4 eggs can be cooked at same time) close cover but do not latch. Cook for 1~3 minutes for desired results.

LUNCH OR SNACKS

BASIC GRILLED CHEESE SANDWICH (Makes 1 sandwich)

1. 2 slices bread, any kind
2. 2 oz grated cheese or two slices
3. Place one slice bread onto one side of heating plates. Add cheese. Top with other slice. Close cover and latch. Cook for two minutes.

MONTE CRISTO (Makes 2 sandwiches)

1. 2 thin slices Swiss cheese
2. 4 slices white bread
3. 4 thin slices cooked ham
4. 1 egg
5. 1/3 cup milk
6. Preheat sandwich maker. Place one slice of ham, a slice of Swiss cheese and another of ham (all cut to fit the bread size) on each of two slices of bread. Top with remaining bread slices. Combine milk and egg; dip sandwiches on side at a time in egg mixture. Place onto heating plates. Close cover catching latch and cook for 2~3 minutes.

DESSERTS:

BANANA TREATS (Makes 2)

1. 4 slices of bread
2. 1 banana peeled
3. 1~2 teaspoons sugar
4. Butter outsides of bread and place two slices of bread, buttered side down, into sandwich maker. Slice banana, and place half of the banana onto each slice of bread, sprinkle with sugar. Top with remaining slices bread, and toast for 1~2 minutes.

APPLE TURNOVERS (Makes 4)

1. 1 oz apple or 1 oz canned apple-pie filling
2. 1 teaspoon castor (icing) sugar
3. 1/2 teaspoon cinnamon
4. Optional: 3 teaspoons raisins, raisin bread
5. Place a slice of bread (buttered side down) onto the sandwich maker. Form a hollow and add apple. Sprinkle with (icing) sugar and cinnamon. Top with a slice bread (buttered side up) lower lid and toast for 1 minute, serve immediately.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing needed.

CLEANING

- Always unplug this Sandwich Maker from power source and wait until it cools down before cleaning.
- There is no need to take your Sandwich Maker apart for cleaning. Dry with a paper towel to absorb excess oil. Brush crumbs from the grooves, and wipe with damp cloth and mild soap.
- Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
- Do not use cleansers or oven cleaners on the heating plates.
- To clean handles and other parts, use a damp cloth with mild soap and towel dry.
- Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, when the filling has softened.
- **CAUTION: DO NOT IMMERSE IN WATER**

WARRANTY SERVICE

1. **1 year limited warranty offered by Wal-Mart Stores, Inc.**
2. **If any parts are missing or defective under this warranty, please contact the Customer Service Department of your nearest Wal-Mart store for replacement or return with sales receipt or call 866-321-9509.**

Rival® logo is a registered trademark of Sunbeam Products, Inc. used under license by Wal-Mart Stores, Inc. Bentonville, AR 72716.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>