




**Instruction Manual**  
**WAFFLE MAKER**  
**MODEL: DC-WM169**

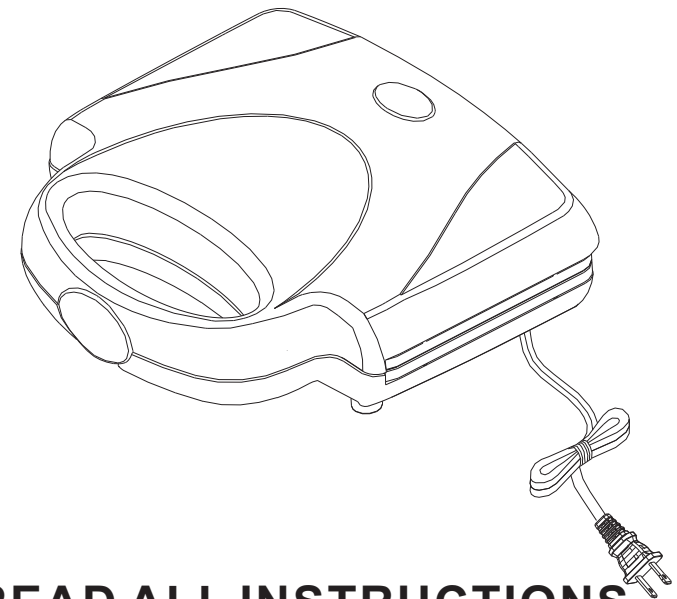

**READ ALL INSTRUCTIONS  
BEFORE USING THIS APPLIANCE**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before using**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. No user-serviceable parts inside. Return appliance to the nearest authorized service facility or call our toll-free customer service number 866-321-9509 for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Preheat the unit about 2 minutes before using.
- This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)
- Warning: Do not use this appliance near water.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Do not leave the appliance unattended when switched on.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord in the wall outlet.
- To disconnect, remove plug from wall outlet.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The appliance is only to be operated in the closed position.
- **WARNING: To prevent electric shock, unplug before cleaning.**
- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating.

## SAVE THESE INSTRUCTIONS

## ADDITIONAL SAFEGUARD

### Consumer Safety Information

***THIS APPLIANCE IS INTENDED FOR INDOOR HOUSEHOLD USE ONLY.***

**DO NOT OPERATE APPLIANCE IF THIS LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

### SHORT CORD INSTRUCTIONS

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used,


- 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PARTS

1. Handle Clip
2. Power Indicator Light
3. Top Housing
4. Top Cooking Plate
5. Bottom Cooking Plate
6. Bottom Housing
7. Power Cord and Plug

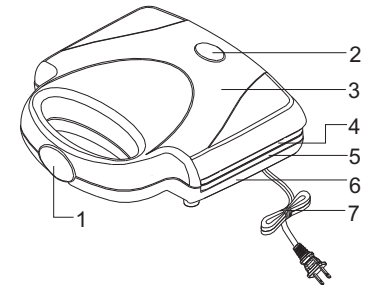

## FEATURES

- Cooks Belgian -style Waffles
- Power Indicator
- Non-stick Coated Plate for Easy Cleaning
- Compact Upright Storage and Cord Wrap
- Skid-resistant Feet

## OPERATING INSTRUCTIONS

**NOTE:** When using the Waffle Maker for the first time, after unpacking your Waffle Maker, open the lid, clean the cooking surfaces thoroughly by whipping with a damp sponge and dry the surfaces with a paper towel. For best results, prepare the non-stick surfaces by using a paper towel to wipe a thin layer of vegetable shortening or oil onto the non-stick surfaces of the Waffle Maker.

**CAUTION:** Always use protective, heat-resistant, gloves or mitts when handling this product to avoid steam or other burns.

### How to make waffles

1. Always preheat before use. Plug cord into a rating 120-volt AC power outlet while preparing the fillings.
2. The indicator light will illuminate when the plug is connected to the main outlet; it will stay on during preheating. The indicator light shuts off when appliance is preheated (preheat appliance for approximately 2 minutes).

**CAUTION: Always preheat before use.**

3. When the appliance has heated to the appropriate temperature, the indicator light will come off, and the appliance is ready for use.
4. Pour batter dough evenly in the center of the bottom cooking plate. It is recommended that 2.5 oz. of batter be used to make the waffles.
5. Close the Waffle Maker by lowering the upper plate onto the lower plate.
6. During baking, the indicator light will come on and off intermittently so that the correct temperature is maintained.
7. The waffle will be ready in 4 to 6 minutes (or longer depending on personal preference). Do not open the Waffle Maker during the first minute of cooking. The waffles are ready when steam stops escaping.

**CAUTION: The appliance is not to be operated in the open position.**

8. Once the waffles are cooked, carefully remove them, use a wooden or plastic spatula to remove waffle from the baking plate. Make sure not to touch the cooking surface with sharp, pointed or metal objects, this could damage the non-stick surface.
9. After use, disconnect the plug from power outlet and allow the Waffle Maker to cool down.

**CAUTION: Cooking surface is hot, do not touch until it cools down thoroughly.**

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing needed.

## CLEANING

- Always unplug this Waffle Maker from power source and wait until it cools down before cleaning.
- There is no need to take your Waffle Maker apart for cleaning. Dry with a paper towel to absorb excess oil. Brush crumbs from the grooves, and wipe with damp cloth and mild soap.
- Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.

- Do not use cleansers or oven cleaners on the heating plates.
- To clean handles and other parts, use a damp cloth with mild soap and towel dry.
- Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, when the filling has softened.
- **CAUTION: DO NOT IMMERSE IN WATER**

## WARRANTY SERVICE

1. 1 year limited warranty offered by Wal-Mart Stores, Inc.
2. If any parts are missing or defective under this warranty, please contact the Customer Service Department of your nearest Wal-Mart store for replacement or return with sales receipt or call 866-321-9509.

Rival® logo is a registered trademark of Sunbeam Products, Inc. used under license by Wal-Mart Stores, Inc. Bentonville, AR 72716.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>