


# ROBERTS

Sound for Generations


# R984

LW/MW/FM STEREO  
3-BAND RADIO

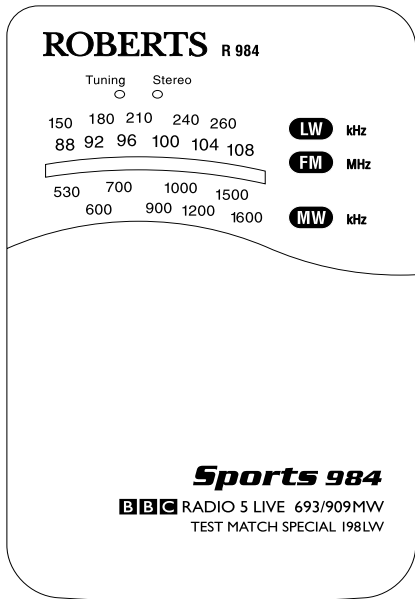

Operating Instructions


## Controls

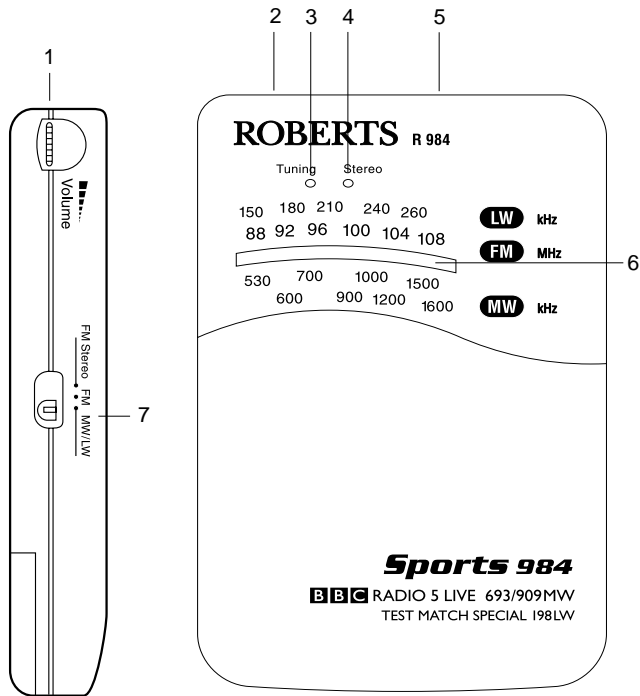

1. Volume control.
2. Earphone socket
3. Tuning indicator
4. Stereo indicator.

5. On/Off switch.
6. Dial pointer.
7. Waveband switch.

## Controls cont.

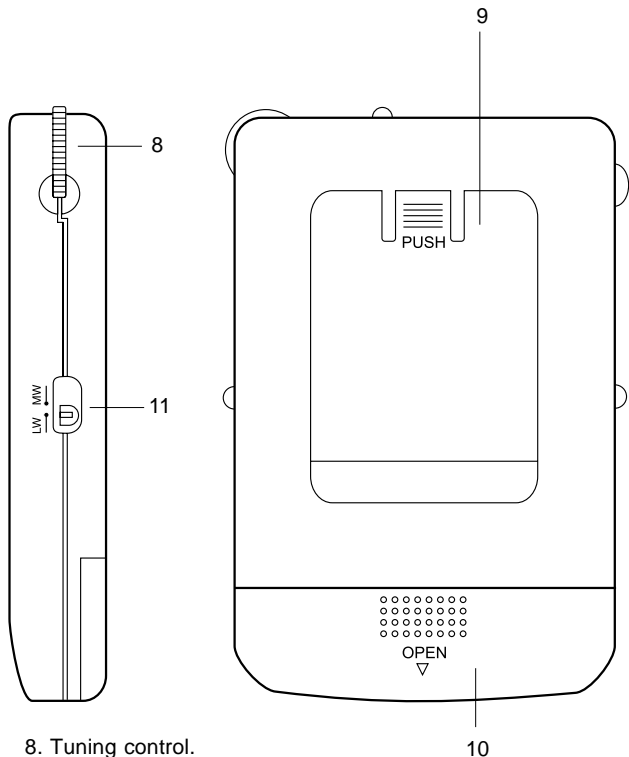

8. Tuning control.

9. Belt clip.

10. Battery compartment.

11. MW/LW switch.

## **General**

Do not allow this unit to be exposed to water, steam or sand. Do not leave the unit where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the FM band be used where ever possible as better results in terms of quality and freedom from interference will usually be obtained than on the MW and LW bands.

## **Battery**

To insert the batteries first open the battery cover (10) by sliding it in the direction shown by the arrow. Insert two LR03 ( AAA) size batteries into the compartment. Ensure that batteries are inserted in accordance with the diagrams shown inside the battery compartment.

## **Earphones**

Plug the earphones supplied into the earphone jack (2) located on the top of the radio.

## **Aerials**

The earphones act as an FM aerial when plugged into the earphone socket. The earphone lead should be fully uncoiled for best reception. There is a separate directional aerial built into the radio for MW and LW reception. To achieve the best MW/LW reception, it may be necessary to rotate the radio.

## **Power On/Off switch**

Turn on the radio by setting the power switch (5) to the "On" position. Return the power switch to the "Off" position to turn off the radio.

## Waveband selector switch

For MW and LW reception set the waveband switch (7) to the "MW/LW" position. Select the required MW or LW band by using the MW/LW switch (11).

For FM stereo reception set the waveband switch (7) to the "FM ST" position. If the FM signal becomes weak or is accompanied by a high level of background hiss, you may select MONO mode by setting the switch to the "FM" position.

## Tuning Control

Slowly rotate the tuning control (8) to select the desired station.

## Tuning Indicator

The tuning indicator (3) will light up when a station is correctly tuned.  
*Note : the tuning indicator may not light up when receiving a weak station or if the batteries are low.*

## Stereo Indicator (FM only)

When a station being received is in stereo the stereo Indicator (4) will light up.

## Dial Pointer

Rotate the tuning control until the dial pointer (6) corresponds to the frequency of the desired station.

## Volume Control

Adjust the volume control (1) to the desired level of sound. Rotating the control clockwise will increase the sound level.

## Specifications

Batteries:	2 x AAA (LR03)
Battery Life:	Approx. 15hrs using alkaline batteries
Frequency coverage:	MW 530 - 1710kHz FM 87.5 - 108MHz
Semiconductors:	2 Integrated circuits 2 LED's 1 Diode
Output Power:	0.8mW .
Earphone Socket:	3.5mm dia (Stereo)

## Accessories supplied

Stereo earphones

*The company reserves the right to amend the specification without notice*

# Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services department at the address shown on the rear of this manual before taking further action.

*These statements do not affect the statutory rights of a consumer.*

**ROBERTS RADIO TECHNICAL SERVICES DEPARTMENT**

97-99 WORTON ROAD  
ISLEWORTH MIDDLESEX  
TW7 6EG

*If you need any further advice, please call our Technical Helpline on  
020 8758 0338 (Mon-Fri)*

*Issue2*





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>