 


## Wii™ Slim Induction Charger Kit with rechargeable battery packs



### Package contents

- Recharging station (1)
- Rechargeable battery packs for Wii remotes (2)
- AC power adapter (1)
- *Quick Start Guide*

 
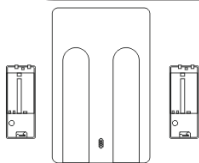 


### Features


- Increases playing time of standard Wii controllers
- 100% compatible with standard Wii controllers
- Recharge Wii controllers without removing the protective skins or Motion Plus™ modules from the controllers
- Recharging status indicator lights

### Installing the rechargeable battery packs

- 1 Remove any protective skins from your Wii remotes, then remove the batteries from the battery compartments.

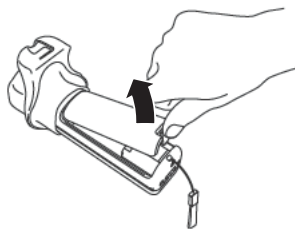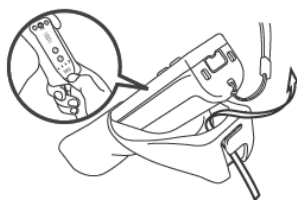

 - 2 Insert the new battery packs into the battery compartments, front end first.
- 3 If using protective skins, slide them back onto the remotes. Your induction charger can recharge the remotes even while the skins are on.

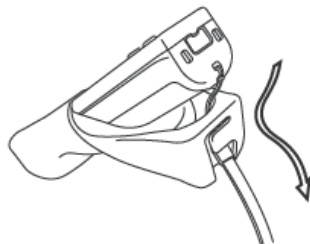


RF-GWII1121 / RF-GWII1126


QUICK START GUIDE

### Attaching the AC power adapter

 - 1 Plug the power adapter into an AC power outlet and the back of the recharging station.

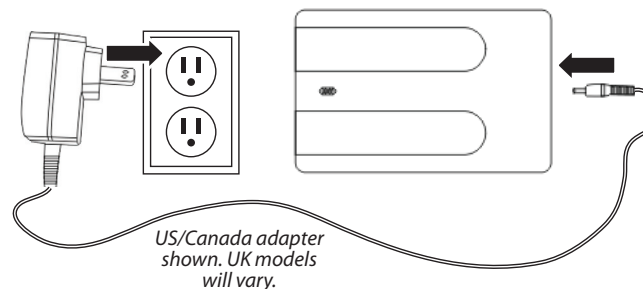


 - 2 Slide the switch on the front of the charger to turn it on.

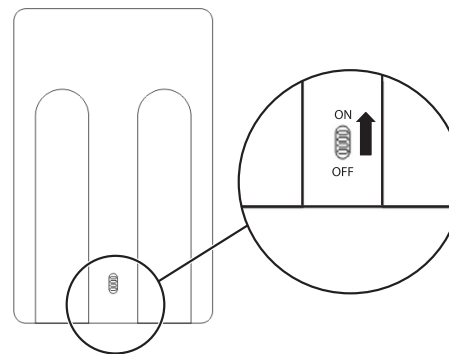


## Recharging

 - 1 Place your remotes with the new battery packs onto the induction charger. Make sure that you place them lengthwise and in the center of their holders.

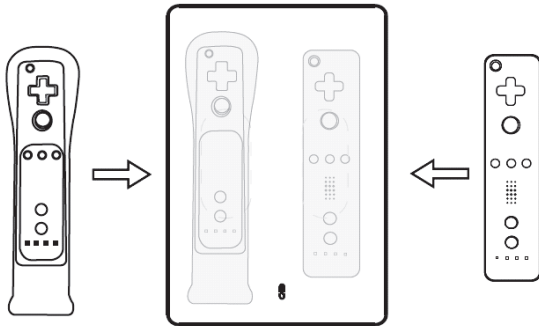

 - 2 As soon as the charger detects your new battery packs, it begins charging them and the charging indicator lights turn red. When charging is complete, the indicators turn green.

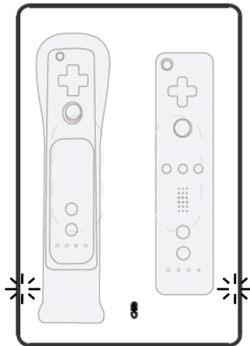

## Troubleshooting

Before contacting technical support for help, check the following:

### If the remote doesn't work when using the battery pack:

- Re-install the battery pack. Make sure it is locked in place.
- Use another charged battery pack to determine whether the controller is damaged or the battery pack's charge is low.
- Try to recharge the battery pack.
- Make sure that the surrounding temperature is between 41°F and 86°F (5°C~30°C).

### If the recharging station doesn't charge the controllers:

- Make sure that the battery pack is correctly installed on the Wii controller.
- Make sure that you have connected the AC power adapter to the recharging station and an AC power outlet.
- If the battery pack has been stored unused for a long time, it may have become over-discharged. The recharging station may not be able to recover the battery.
- Make sure that the surrounding temperature is between 41° and 86°F (5°C~30°C).

### If battery life seems short and charging takes a long time:

- Make sure that the surrounding temperature is between 41° and 86°F (5°C~30°C).
- Battery life may decrease over time. After 500 recharges, battery life may be only 70% of the battery life when new.

## 90-day limited warranty

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

Contact Rocketfish: For customer service please call 1-800-620-2790

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2010 BBY Solutions, Inc.

All rights reserved. ROCKETFISH is a trademark of 2010 BBY Solutions, Inc. Registered in some countries. Wii is a trademark of Nintendo of America, Inc. All other products and brand names are trademarks of their respective owners.

ENGLISH 10-0768

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>