 


## Please read before setting up your system.

Every Rocketboost network must contain at least one hub device, which directs network data traffic and helps devices join the network. The network can have only one hub, which can be enabled by using the hub switch on the back of all Rocketboost transmitters. See your *User Guide* for instructions on joining devices to the network.


## Package contents:



Wireless receiver



IR remote

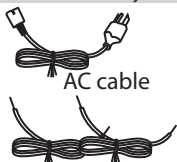

AC cable


3 ft. speaker cable (2)



Quick Setup





User Guide

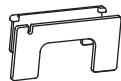

Cable spool

## Receiver

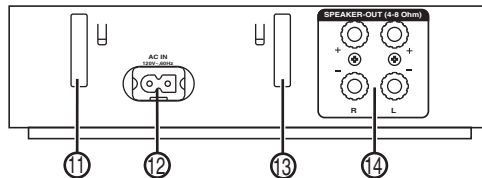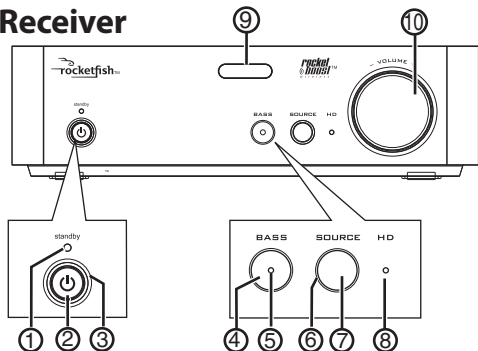

- |                        |                               |
|------------------------|-------------------------------|
| 1 Standby LED          | 11 Removable cable spool slot |
| 2 Power/Join button    | 12 AC IN connector            |
| 3 Power/Join indicator | 13 Removable cable spool slot |
| 4 Bass button          | 14 SPEAKER OUT jacks          |
| 5 BASS indicator       |                               |
| 6 SOURCE indicator     |                               |
| 7 SOURCE button        |                               |
| 8 HD indicator         |                               |
| 9 IR sensor            |                               |
| 10 VOLUME knob         |                               |


## Step 1 Preparing the remote control

**To activate the battery:**

Remove the tab from the bottom of the remote control to enable the battery.



## Step 2 Connecting the receiver

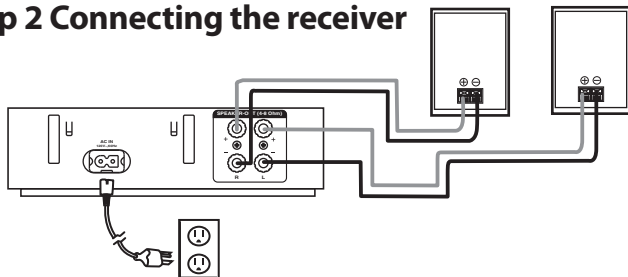

Connect the right surround speaker to the right speaker terminal of the receiver, using the supplied three-foot speaker cable. Connect the red speaker cord to the red (+) terminals, and the black speaker cord to the black (-) terminals. Repeat to connect the left speaker.

## Step 3 Establishing communication

**To power on and switch to joining mode:**

1 Press and hold the button on the hub unit (the hub will be identified by a solid green power LED or flashing green if there are no other devices connected to the network) for more than three seconds to put the unit into joining mode.

The unit will stay in joining mode for about 30 seconds.

- The Power/Join indicator starts blinking fast.

2 Press and hold the button on the Rocketfish receiver for more than 3 seconds to put the unit into joining mode.


The unit will stay in joining mode for 30 seconds.

The Power/Join indicator starts blinking quickly. When connected, both units will show a solid LED for successful connection.

- If the Power/Join indicator blinks at a slower rate, the link is not successful. Retry the joining operation.

See your *User Guide* for additional information.

For surround sound application  
7.1 Surround Sound\*

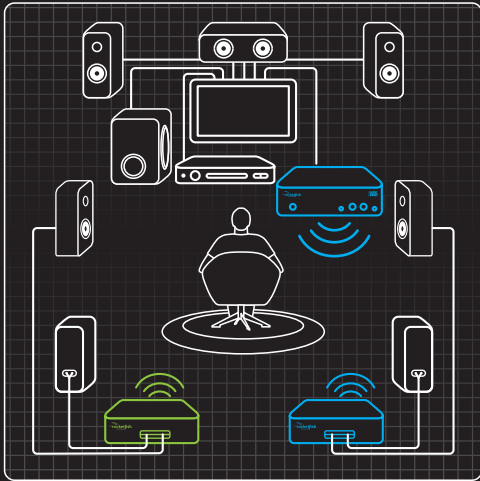


\*Requires 7.1 AV Receiver

- INCLUDED
- NOT INCLUDED: RF-RBKIT TO SUPPORT SURROUND SOUND

Tip: When connecting rear and surround channels you can see which device you are connecting to over the air by pressing the Source button. The sender's LED will blink for a few seconds showing the connection between the transmitter and receiver. This makes it easier to configure rears and surrounds without relying on AVR test patterns.

For distributing music throughout your home

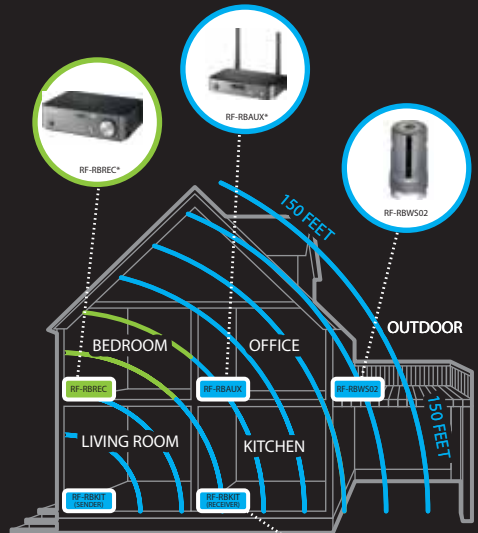

\*Upgrades your existing audio products to wireless

- INCLUDED
- NOT INCLUDED: OTHER ROCKETBOOST PRODUCTS (CAN CONNECT UP TO 9 ROOMS WITH ONE SENDER)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>