 


Welcome

Congratulations on your purchase of another high-quality Rocketfish Gaming product. This starter kit can make your gaming more trouble-free and fun, and it can help your Nintendo® DSi™ game console last longer, too! All Rocketfish Gaming products are designed for years of trouble-free performance.

 
Package contents

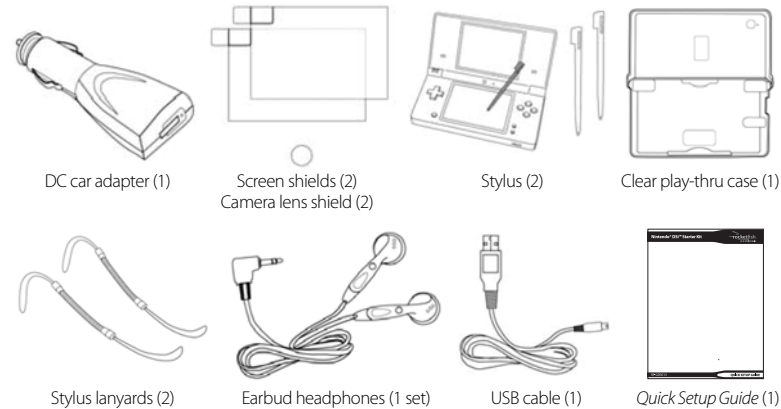


Using the USB car charger

1 Connect the DC car adapter to your Nintendo DSi using the included USB cable. Make sure that both plugs are facing the correct direction before you insert them into the connectors, or you may damage the connector's pins.

Caution: Make sure that the plug is facing the correct direction before you connect it to your console, or you may damage the connector's pins.

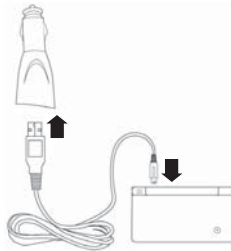

 2 Insert the DC car adapter into a standard 12V DC car cigarette lighter or accessory socket. Make sure that the plug is fully inserted into the socket. The charge indicator LED on your console turns orange while recharging, then turns off when fully charged.

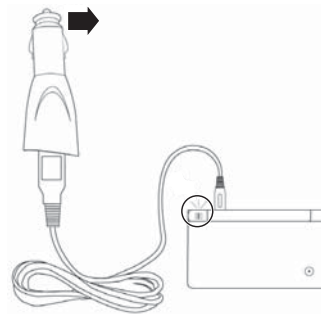

3 When your console is fully charged, unplug the car charger and disconnect it from your game console. Make sure that you pull on the charger housing, not the power cord itself.

Applying the screen and camera shields

 
Shields provide a tough, durable, transparent surface, while keeping the LCD screens and camera lens clean and unscratched.

1 Clean the screens before installing the screen shields.

2 Remove the adhesive backing from the screen shield and carefully attach it to the screen.

3 Use any straight, rounded edge to smooth bubbles out of the shield from one side to the other.


4 Carefully attach the camera lens shield to the camera lenses on the interior and exterior of the DSi.

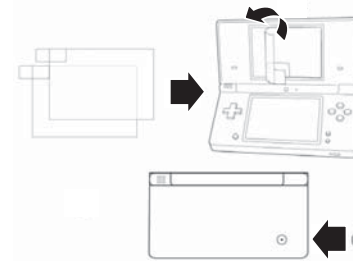

Installing the clear play-thru case

The play-thru case's cover helps to protect your console from dirt, scratches, and damage from drops. It also allows complete access to all controls, the touch screen, and the stylus.

 
• Carefully slide your game console into the case.

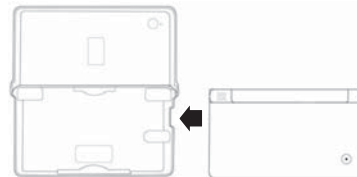

Using the earbuds

With the earbud headphones, you can more easily hear game sounds, without disturbing others.

 - Insert the earbud's plug into the headphone connector on your console.

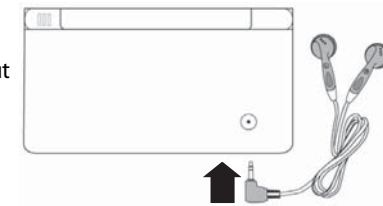


Warning: Make sure that the volume is turned down before connecting the earbuds. Otherwise, you may damage your hearing.

Using your stylus and lanyard

Your new stylus, with an attached lanyard, is perfect for replacing the original stylus, if it gets lost or damaged. The lanyard makes it easy to remove and hold onto the stylus.

To attach a lanyard to a stylus:

 - 1** Feed one end of the lanyard through the lanyard hole in the stylus.
- 2** Feed the other end of the lanyard through the lanyard loop that was fed through the hole, then pull to tighten.

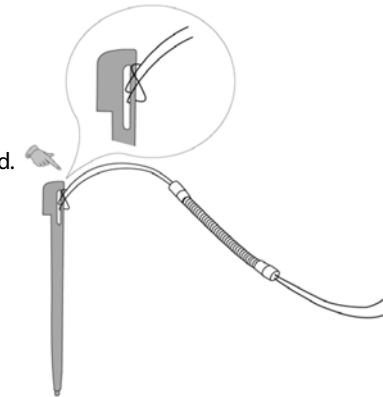

90-day limited warranty

Visit www.rocketchfishproducts.com.

© 2009 Best Buy Enterprise Services, Inc.

All rights reserved. ROCKETFISH is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>