

Congratulations on your purchase of a new Rocketfish Rapid Fire Wireless Controller. This controller was designed with input from gamers and includes some exciting new features:

 
- A modified design: better stick placement; a responsive, one-piece directional pad; improved handle ergonomics, and one-button Rapid Fire
- TouchSense®, dual rumble motors for lifelike vibration
- Wireless connectivity to your PS3™ console
- Power up your PS3™ console directly from the controller
- A built-in, rechargeable NiMH battery

Package contents

- Wireless controller with a built-in, rechargeable battery
- 9 ft. (2.74 m) USB charging cable

Product features


Top

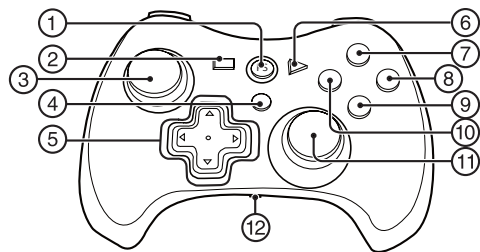

#	Description
1	PS button
2	Select button
3	Left stick
4	Rapid Fire button
5	Directional pad
6	Start button

#	Description
7	△ button
8	○ button
9	× button
10	□ button
11	Right stick/R3 button
12	Power switch

 Back

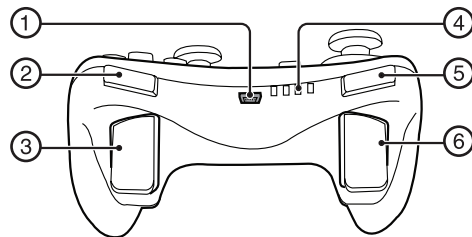

#	Description
1	USB port
2	R1 button
3	R2 button

 
#	Description
4	Port indicators
5	L1 button
6	L2 button

Charging the battery

Before you use the controller for the first time, or after you have not used it for a long time, you must charge the battery. (If the controller will not be used for long periods of time, the battery should be recharged at least once every six months.) It takes approximately 3.5 hours to fully charge the battery.

To charge the battery


- 1 Insert the mini-USB plug on the charging cable into the USB port on the front of the controller.

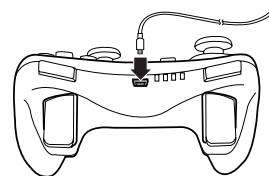

IMPORTANT: Make sure that the min-USB plug is aligned correctly with the port before inserting into the plug to avoid damaging either the port or the plug.

NOTE: Recharging a battery that has not been fully discharged shortens its life.

 
- 2 Insert the USB plug into the USB port on your PS3, which must be plugged in and drawing power.
- 3 Turn on your PS3. The battery starts charging and the PS button in the middle of the controller lights blue. When the battery is fully charged, the PS light turns off.

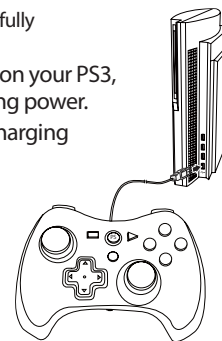

Pairing your controller

Before you use your controller, you need to pair it with your PS3 console.

 - 1 Connect the USB cable between your controller and PS3 console.
- 2 Turn on the controller, then press its PS button. When the PS3 recognizes your controller, all the port indicators flash slowly.

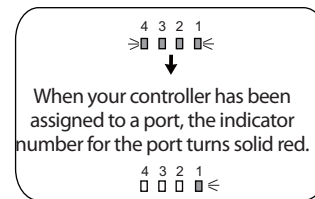

- 3 Press the PS button again to assign a port number.

 
Notes:

- Pairing and assigning controller numbers can only be done when the system is turned on.
- When a paired controller is used with another PS3 system, the pairing with the original system is cleared. Pair the controller with the system again if the controller has been used with another system.
- If the controller or the system is turned off, the port indicators on the controller turn off and the assigned number is cleared.

Programming the Rapid Fire button

You can program the Rapid Fire button to perform a series of moves.

- 1 Press and hold the **Rapid Fire** button, the PS button flashes in red.
- 2 Do not release the **Rapid Fire** button. Press the button(s) you want to set to turbo.

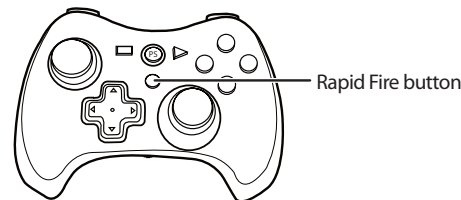

- 3 Release all the buttons. The **Rapid Fire** button is programmed.



Notes:

- You can set different speeds of the **Rapid Fire** function. There are three speed levels.
- The default speed is Quick when you first press the **Rapid Fire** button.
- Press again the **Rapid Fire** button, the PS button will flash slower and the **Rapid Fire** speed is Medium.
- Press the **Rapid Fire** button for the third time, the **Rapid Fire** speed will be Slow and the PS button will flash slowly.
- Press again, the **Rapid Fire** function will be turned off.

Warnings:

- Some medical studies have suggested that long periods of repetitive motion may be linked to certain types of physical discomfort or injuries. You should take frequent breaks during game play. If you feel aching, numbness, or tingling in your arms, wrists, or hands, consult a qualified health professional.
- Do not use the Rapid Fire Wireless Controller if you have respiratory, heart, or other physical ailments that limit your physical activity. If you have any doubts, consult a qualified health professional.
- The Rapid Fire Wireless Controller is not intended for use by small children. It may contain small pieces that may pose a choking hazard.
- The Rapid Fire Wireless Controller can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.
 - Do not operate the Rapid Fire Wireless Controller within 9 inches (23 cm) of a pacemaker.
 - If you have a pacemaker or other implanted medical device, do not use the Rapid Fire Wireless Controller without first consulting your doctor or the manufacturer of your medical device.
 - Follow all regulations regarding use of wireless devices in locations such as hospitals, airports, and on board aircraft. Operation in those locations may interfere with or cause malfunctions of equipment, with resulting injuries to persons or damage to property.

Safety information:

- Do not disassemble any of the Rapid Fire Wireless Controller components. Refer all servicing to qualified personnel only.
- Do not place or store the Rapid Fire Wireless Controller in a humid area and do not expose it to water or rain.
- Read all instructions before operating the Rapid Fire Wireless Controller. Use the Rapid Fire Wireless Controller only as instructed. Failure to follow these instructions may void the warranty.

Battery warnings:

The Rapid Fire Wireless Controller contains rechargeable Ni-MH batteries. Leakage of ingredients contained within the battery, or the combustion products of the ingredients, can cause personal injury as well as damage to your Rapid Fire Wireless Controller. If battery

leakage occurs, avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery comes into contact with your eyes, immediately flush thoroughly with water and see a doctor.

To avoid battery leakage:

- Do not expose battery to excessive physical shock, vibration, or liquids.
- Do not disassemble, attempt to repair or deform the battery.
- Do not dispose of battery in a fire.
- Do not touch the terminals of the battery, or cause a short between the terminals with a metal object.
- Do not peel or damage the battery label.

FCC/regulatory notices

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

90-Day limited warranty

Visit www.rocketfishproducts.com for details

PS3™ is a trademark of Sony Computer Entertainment Inc.
Immersion is a trademark of Immersion Corporation
© 2009 Best Buy Enterprise Services, Inc. All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>