



Owner's Manual

USING THE UNIT SAFELY	3
IMPORTANT NOTES.....	5
Starting Out.....	6
Main Features	6
Button Descriptions.....	6
Before You Play	7
Connecting the Power Cord	7
Opening and Closing the Lid	7
About the Volume knob	8
Turning the Power On and Off	8
Connecting Headphones	8
About the Pedals	9
Listening to the Demo Songs	10
Playing Back and Stopping the Demo Song.....	10
Playing the Keyboard.....	12
Performing with Piano Sound.....	12
Performing with Various Instrument Sounds.....	12
Layering Two Instrument Sounds— Dual Play.....	13
Adding Reverberation to the Sound — Reverb Effect.....	15
Changing Keyboard Touch Sensitivity.....	16
Convenient Functions	17
Transposing without Changing Your Fingering—Key Transpose	17
Changing the Volume Balance in Dual Play	17
Adjusting the Reference Pitch — Master Tuning	18
Connecting to Audio Equipment.....	19
Connecting MIDI Devices	20
Using MIDI	20
Making Connections	20
Set the MIDI Channel	21
Local On/Off	21
Omni On/Off	22
Appendices.....	23
Troubleshooting	23
Specifications	24
Functions Assigned to the Keyboard	24
MIDI Implementation Chart	25
INDEX.....	26

Before using this unit, carefully read the sections entitled: "IMPORTANT SAFETY INSTRUCTIONS" (p. 2), "USING THE UNIT SAFELY" (p. 3), and "IMPORTANT NOTES" (p. 5). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2002 ROLAND CORPORATION
 All rights reserved. No part of this publication may be reproduced in any form
 without the written permission of ROLAND CORPORATION.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
ATTENTION: RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

WARNING - When using electric products, basic precautions should always be followed, including the following:

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with a dry cloth. 7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. | <ol style="list-style-type: none"> 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11. Only use attachments/accessories specified by the manufacturer. 12. Never use with a cart, stand, tripod, bracket, or table except as specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 13. Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. |
|---|--|



For the U.K.



IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.



BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.
Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.







USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices










 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols







	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING


WARNING


- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open or perform any internal modifications on the unit. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.
- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 
- The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the unit. 
- Use only the attached power-supply cord. 
- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards! 


WARNING


- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist. 
- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Protect the unit from strong impact. (Do not drop it!) 
- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 


⚠ CAUTION


- The unit should be located so that its location or position does not interfere with its proper ventilation. 


- Always grasp only the plug on the power-supply cord when plugging into, or unplugging from, an outlet or this unit. 


- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 


- Never climb on top of, nor place heavy objects on the unit. 


- Never handle the power cord or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit. 

- If you need to move the instrument, take note of the precautions listed below. At least two persons are required to safely lift and move the unit. It should be handled carefully, all the while keeping it level. Make sure to have a firm grip, to protect yourself from injury and the instrument from damage. 
 - Check to make sure the knob bolts securing the unit to the stand have not become loose. Fasten them again securely whenever you notice any loosening.
 - Disconnect the power cord.
 - Disconnect all cords coming from external devices.
 - Raise the adjusters on the stand (p. 9).
 - Close the lid.

- Before cleaning the unit, turn off the power and unplug the power cord from the outlet (p. 7). 

- Whenever you suspect the possibility of lightning in your area, pull the plug on the power cord out of the outlet. 

- Be careful when opening/closing the lid so you do not get your fingers pinched (p. 7). Adult supervision is recommended whenever small children use the unit. 

- Should you remove the screws fastening the stand, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

IMPORTANT NOTES

In addition to the items listed under “IMPORTANT SAFETY INSTRUCTIONS” and “USING THE UNIT SAFELY” on pages 2 and 3, please read and observe the following:

Power Supply

- Do not use this unit on the same power circuit with any device that will generate line noise (such as an electric motor or variable lighting system).
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.
- To avoid possible breakdown, do not use the unit in a wet area, such as an area exposed to rain or other moisture.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not put anything that contains water (e.g., flower vases) on the unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.
- Do not allow objects to remain on top of the keyboard or pedal board. This can be the cause of malfunction, such as keys ceasing to produce sound.
- Do not paste stickers, decals, or the like to this instrument. Peeling such matter off the instrument may damage the exterior finish.

Maintenance

- To clean the unit, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- A small amount of heat will radiate from the unit during normal operation.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- Do not grasp the lid when moving and installing the piano.
- When you need to transport the unit, pack it in shock-absorbent material. Transporting the unit without doing so can cause it to become scratched or damaged, and could lead to malfunction.
- Use a cable from Roland to make the connection. If using some other make of connection cable, please note the following precautions.
 - Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.
- The pedals of this unit are made of brass. Brass eventually darkens as the result of the natural oxidization process. If the brass becomes tarnished, polish it using commercially available metal polisher.

Starting Out

Main Features

■ Authentic Piano Performances

High-quality concert grand piano tones, combined with the Progressive Hammer Action keyboard, which provides more realistic piano touch, with a heavier feel in the low end and a lighter feel in the upper notes, let you enjoy truly authentic piano performances.

■ Five Tones for Use in a Wide Variety of Musical Genres

The DP-1000 features not only piano tones, but four different internal tones that you can use in a variety of musical genres.

■ Includes High-Quality Reverb

 
The DP-1000's reverb function can add rich reverberation (sound that is reflected off the walls of a room) to the instrument sounds, making it sound as if you are playing in a concert hall.

■ Compact and Flat Design goes well with any interior

Closing the keyboard lid creates a flat surface.

Its compact, simple design fits in with almost any room decor.

Button Descriptions

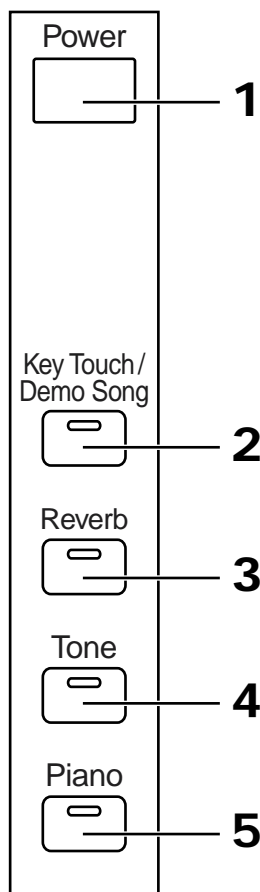

1. [Power] Switch

Turns the DP-1000's power on and off (p. 8).

2. [Key Touch/Demo Song] Button

This button is held down while other designated keys are pressed to start the Demo Songs playing, and can be used in making various settings on the DP-1000 (p. 10, 15-18, 21, 22).



The keys that are used in combination with this button appear as the "Functions Assigned to the Keyboard" (p. 24).

3. [Reverb] Button

Pressing this button adds reverberation to the sound (p. 15).

4. [Tone] Button

Pressing this button gives you tones the non-piano tones when you play the keyboard (p. 12).

5. [Piano] Button

 
Pressing this button gives you tones the piano tones when you play the keyboard (p. 12).

Before You Play

Connecting the Power Cord

* To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

1. Connect the supplied power cord to the AC Inlet socket on the rear panel of the unit.

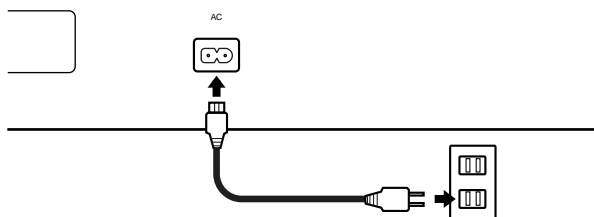


2. Plug the other end of the power cord into a wall outlet.

Opening and Closing the Lid


* Use both hands to open and close the lid. Although the DP-1000's lid is designed to close slowly even if you release your hands, it will slam down rapidly if you release the lid after it's been only partially opened.

Opening the Lid

 1. When opening the lid, grasp the lid with your hands and gently lift it upwards.

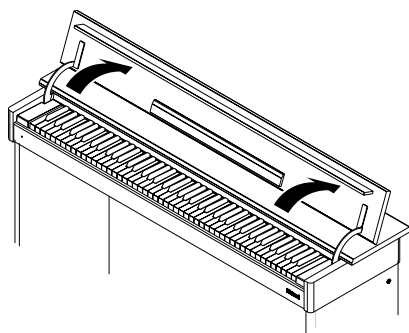


 2. Fold down the blind, and fold out the music stand, as shown below.

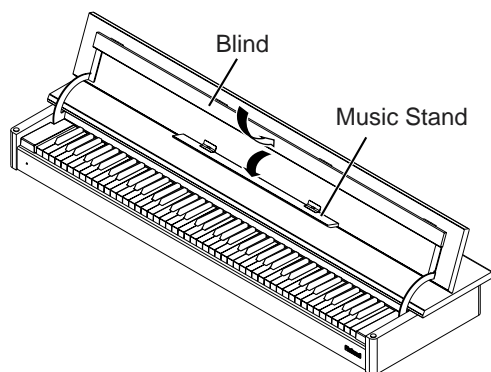


Closing the Lid

 1. When closing the lid, be sure to fold down the music stand, and fold out the blind.

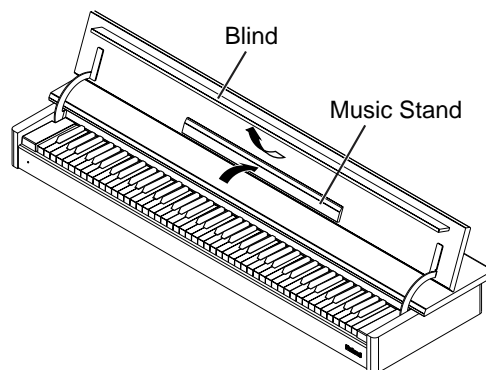

 
2. When closing the lid, grasp the lid with your hands and gently lower it down.

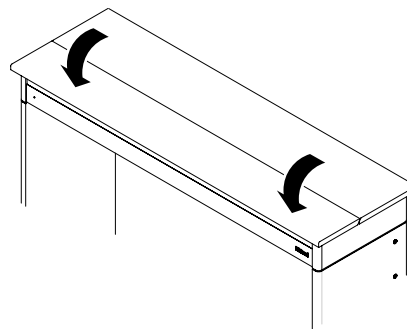

- * Make sure an adult is on hand to provide assistance when young children are playing the DP-1000.
- * For safety, transport the keyboard only with the lid in the closed position. Do not grasp the lid when moving and installing the piano.

NOTE

 
When opening and closing the lid, be very careful not to catch your finger in the lid.

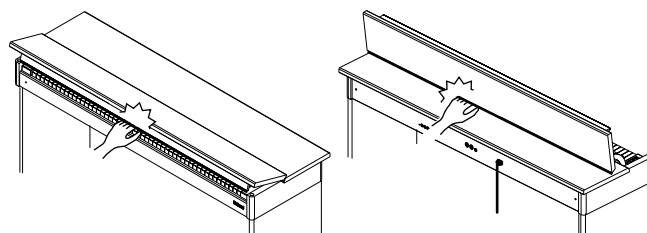

About the Volume Knob

The **VOLUME** knob adjusts the overall volume.

 The **VOLUME** knob is located at the far left of the piano's lower panel.

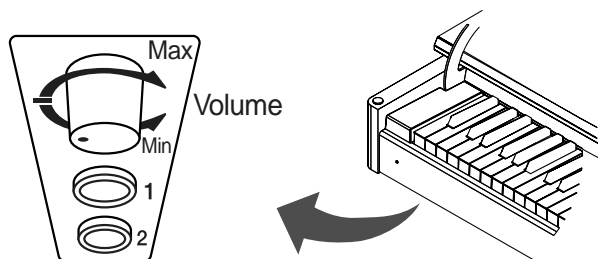

* The **VOLUME** knob "clicks" to make the knob easy to stop when center position is reached.

 
* To protect your ears when using headphones for extended periods, take care not to listen at excessively high volume.

Turning the Power On and Off


* Once the connections have been completed, turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

■ Turning On the Power

1. Before switching the power on, turn the volume all the way down.

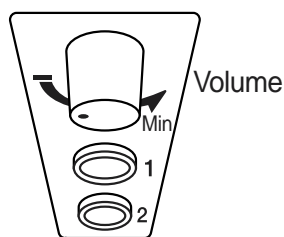

 2. Press the [Power] switch.




Several seconds after the power is turned on, the keyboard will produce sound when played. Adjust the volume appropriately.


* Always make sure to have the volume level turned down before switching on power. Even with the volume all the way down, you may still hear some sound when the power is switched on, but this is normal, and does not indicate a malfunction.

■ Turning Off the Power

 1. Before switching the power off, turn the volume all the way down.

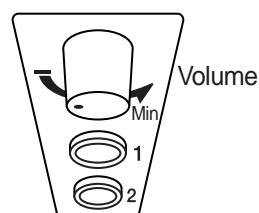

 2. Press the [Power] switch.



The power is turned off.

 
Connecting Headphones

The DP-1000 features two headphone jacks. This allows two people to listen through headphones simultaneously, making it very useful for lessons and when performing piano pieces for four hands. Additionally, this allows you to play without having to worry about bothering others around you, even at night.

1. Connect the headphones to either of the headphone jacks on the underside of the DP-1000, on the left.

Sound will no longer be heard from the DP-1000's speakers.

2. Adjust the headphones volume with the DP-1000's Volume knob.

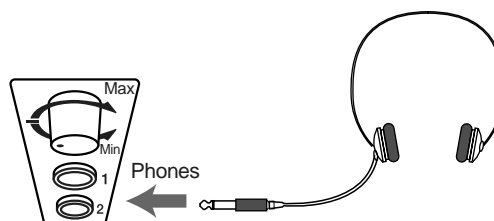


■ Precautions to Take When Using Headphones

* To avoid damaging or severing the headphone cord, be sure to handle the headphones by holding the phones themselves, and grasping the plug and not the cord when pulling the headphone plug.

* Connecting the headphones when the volume of connected equipment is turned up may result in damage to the headphones. Connect the headphones only after turning the volume down completely.

* Listening at excessively high volume levels will not only damage the headphones, but may also cause hearing loss. Listen at appropriate levels.

 About the Pedals

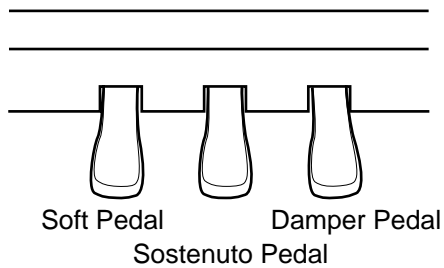

Soft Pedal

This pedal softens the sound.

Playing with the soft pedal depressed produces a sound that is not as strong as when otherwise played with the equivalent strength.

Sostenuto Pedal

With the sostenuto pedal, only the sound played at the moment the pedal is pressed is sustained.

Damper Pedal

 
Use this pedal when you want the sound to linger.

While the damper pedal is depressed, the sound from the keyboard continues to linger/remain for an extended period, even when you remove your fingers from the keys.

About the Adjuster

After you have moved this piano, or when you feel it is unstabled, lower the adjuster at the bottom of the pedal board as follows:

- Lower the adjuster so that it is firmly in contact with the floor. If there is a gap between the adjuster and the floor, the unit may malfunction when the pedal is pressed. In particular when the instrument is placed on a carpeted floor, you must lower the adjuster so that it presses strongly against the floor.

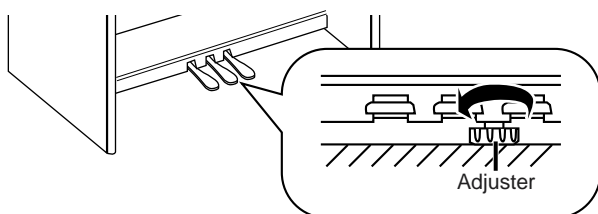

Listening to the Demo Songs

Playing Back and Stopping the Demo Song

Playing Back the Demo Song

 
While holding down the [Key Touch/Demo Song] button, press any of the keys within the area where “Demo Song” is printed.

Four demo songs are assigned to one key.

While holding down the [Key Touch/Demo Song] button, press a relevant key enough times to select the song you want, while cycling through the four song choices available at that key.

For example, to play back from song “1-3,” hold down the [Key Touch/Demo Song] button and press the E1 (the lowest “E”) key three times.

If you are already playing back song “1-1,” hold down the [Key Touch/Demo Song] button and press the E1 (the lowest “E”) key two times to play Song “1-3.”

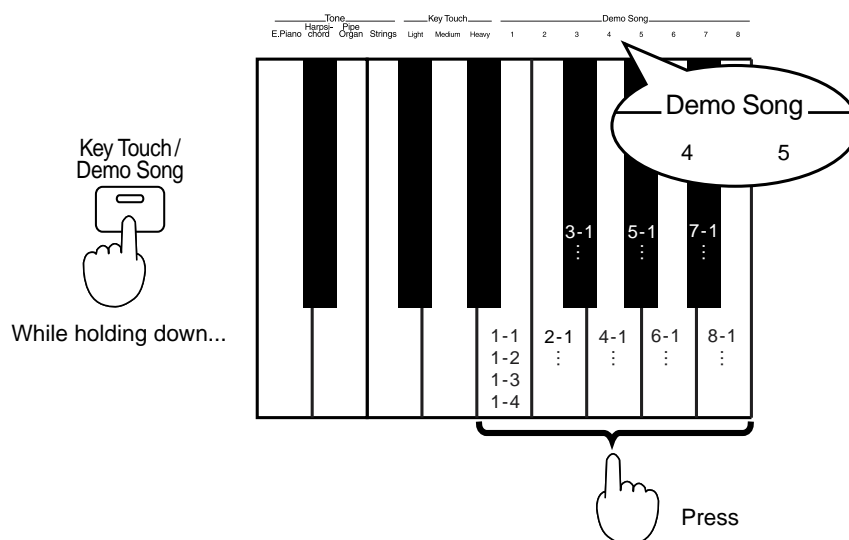


The button indicator blinks, and the song starts to play.

Stopping the Demo Song

Press the [Key Touch/Demo Song] button.

 The button indicator stops blinking and goes off, and playback of the Demo Song stops.

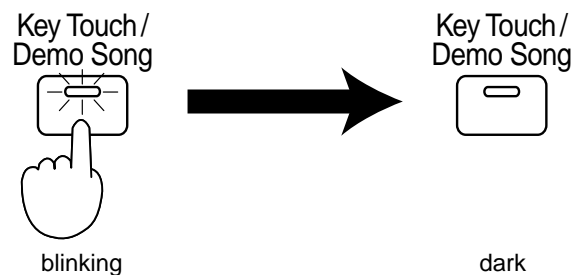

When one song is finished, the next song automatically begins to play. Subsequent Demo Songs are automatically played one after another until you stop them playing.

List of Demo Songs

No.	Title	Composer	Copyright
1-1	Intro	J. Maul	© 1991, 1999 Roland UK
1-2	Je Te Veux	E. Satie	© 1997 Roland Corporation
1-3	Golliwog's Cakewalk	C. Debussy	© 1996 Roland Corporation
1-4	"Fröhlicher Landmann" from "Album Für Die Jugend" Op. 68	R. Schumann	© 1996 Roland Corporation
2-1	Bagatelle "Für Elise" WoO. 59	L. v. Beethoven	© 1994 Roland Corporation
2-2	Arabesque No. 1 in E-Major	C. Debussy	© 1994 Roland Corporation
2-3	Salut D'Amour Op. 12	E. Elgar	© 1996 Roland Corporation
2-4	"Troika Drive: November" from "The Seasons," Op. 37	P. Tchaikovsky	© 1996 Roland Corporation
3-1	A Maiden's Prayer	T. Badarzewska	© 1996 Roland Corporation
3-2	"Promenade" from "Tableaux d'une exposition"	M. Musorgsky	© 1995 Roland Corporation
3-3	On Wings Of Song	F. Mendelssohn	© 1996 Roland Corporation
3-4	Moment musicaux No. 3, Op. 94-3	F. Schubert	© 1994 Roland Corporation
4-1	No. 14 "La Styrienne" from "25 Easy Studies" Op. 100"	F. Burgmüller	© 1992 Roland Corporation
4-2	Turkisch March (Piano Sonate No. 11 in A Major, 3rd Movement "Alla Turca")	W. A. Mozart	© 1994 Roland Corporation
4-3	Rondo Brillante "Aufforderung Zum Tanz" in D-flat Major, Op. 65"	C. M. v. Weber	© 1994 Roland Corporation
4-4	"Frühlingslied" from "Lieder Ohne Worte Heft 5," Op. 62-6	F. Mendelssohn	© 1996 Roland Corporation
5-1	Cantata BWV. 147 (Jazz Arranged)	J. S. Bach / Naoki Nishi	© 1993 Roland Corporation
5-2	Gymnopedie No. 1	E. Satie	© 1997 Roland Corporation
5-3	Fantasie-Impromptu Op.66	F. Chopin	© 1994 Roland Corporation
5-4	Etude No. 5 in G-flat Major "Black Keys," Op. 10-5	F. Chopin	© 1990 Roland Corporation
6-1	Etude No.3 in E Major "Chanson De L'Adieu," Op. 10-3	F. Chopin	© 1992 Roland Corporation
6-2	Mazurka No.5 in B-flat Major, Op. 7-1	F. Chopin	© 1995 Roland Corporation
6-3	Valse No. 6 in D-flat Major, Op. 64-1 "Petit Chien"	F. Chopin	© 1990 Roland Corporation
6-4	Nocturne No. 2 in E-flat Major, Op. 9-2	F. Chopin	© 1993 Roland Corporation
7-1	Fly Free	J. Maul	© 1992 Roland Corporation
7-2	Piano Sonata No. 14 in C-sharp Minor, "Moonlight" 1st Movement	L. v. Beethoven	© 1998 Roland Corporation
7-3	"Berceuse" from "Dolly," Op. 56	G. Fauré	© 1995 Roland Corporation
7-4	Slavonic Dance No. 10, Op. 72-2	A. Dvořák	© 1998 Roland Corporation
8-1	Mood/Ending	J. Maul	© 1991, 1999 Roland UK
8-2	3-Romances Sans Paroles No. 3, Op. 17	G. Fauré	© 1996 Roland Corporation
8-3	"Clair de lune" from "Suite Bergamasque"	C. Debussy	© 1990 Roland Corporation
8-4	"Träumerei" from "Scenes From Childhood" Op. 15	R. Schumann	© 1997 Roland Corporation

* All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.

* No data for the music that is played will be output from MIDI OUT.

 
Playing the Keyboard

Performing with Piano Sound

The DP-1000 lets you enjoy performing with high-quality concert grand piano tone.

When you press the [Piano] button, the button indicator is lit.

You can play using the piano tone.

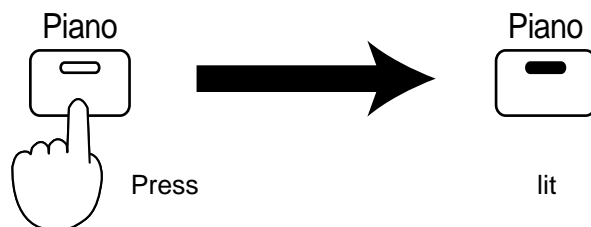


The keyboard is set to this piano tone when the power is turned on.

Performing with Various Instrument Sounds

The DP-1000 also includes four other tones: E.Piano (Electric Piano), Harpsichord, Pipe Organ and Strings. You can assign any one of these four tones to the [Tone] button.

 Try Pressing the [Tone] Button

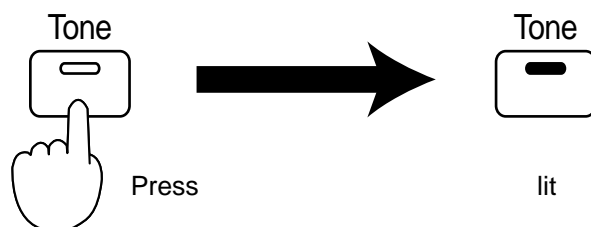

When the power is turned on, E.Piano (Electric Piano) is assigned to the [Tone] button.

When you press the [Tone] button, the button indicator is lit.

 
The electric piano tone is produced when you play the keyboard.

Try Changing the Tone Assigned to the [Tone] Button

Any of the four tones may be assigned to the [Tone] button. By assigning the tone you prefer to the [Tone] button beforehand, you can perform with the instrument sound you want just by pressing the [Tone] button.

- 1. While holding down the [Tone] button, press the key with the name of the tone you want to use from among the keys indicated as "Tone" keys.**

The [Tone] button indicator blinks, indicating the tone selected with the pressed key.

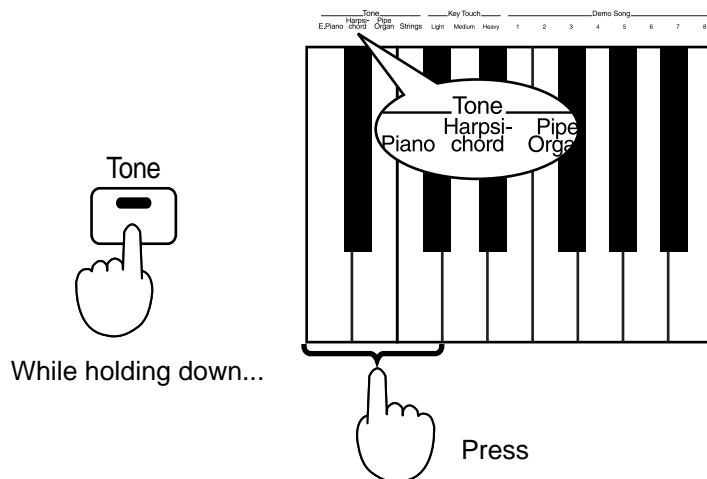

2. After releasing the button, play the keyboard.

The button indicator stops blinking and stays on, indicating that the tone selected in Step 1 has been assigned to the [Tone] button.



 
When assigning tones to the [Tone] button, the tone is set by first selecting the tone in Step 1 (indicator blinks), then playing the keyboard in Step 2 (indicator is lit). You can also set the tone by pressing the blinking [Tone] button instead of playing the keyboard. If you don't want to set the tone, then press the [Piano] button.

Layering Two Instrument Sounds— Dual Play


Playing with two different tones on the keyboard simultaneously is called “Dual Play.”

Layering the Piano tones and Strings tones

1. First, assign the Strings tone to the [Tone] button.

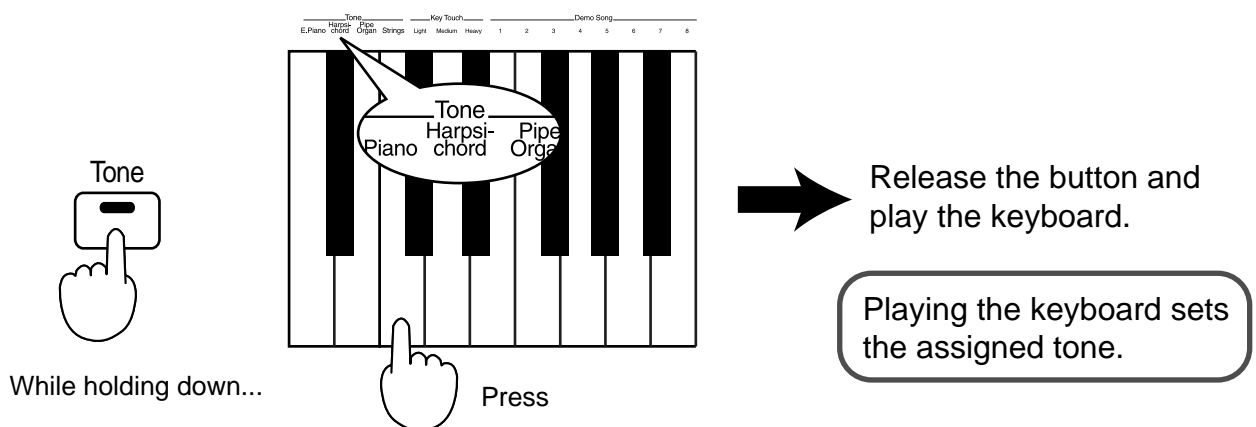

 2. While holding down the [Piano] button, press the [Tone] button.

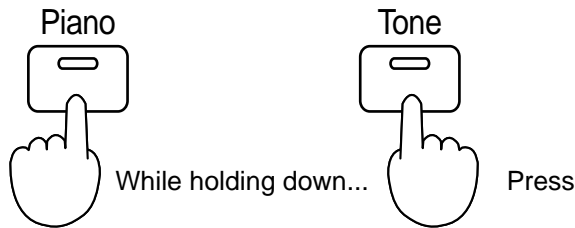


Both button indicators are lit. When you play the keyboard, both the Piano and Strings tones are layered.

Reverting to a Single Instrument Tone

Press either the [Piano] button or the [Tone] button.

 
Only the button indicator for the button that was pressed stays on, and only that instrument sound is produced.

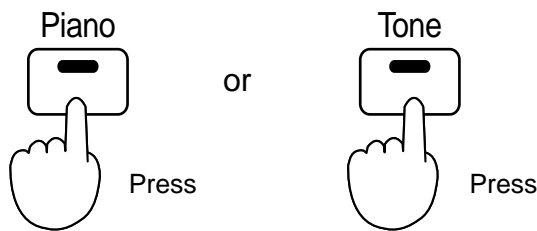

Layering the Harpsichord and Strings Tones

You can perform with two tones assigned to the [Tone] button layered together (other than the piano tone).

 While holding down the [Tone] button, simultaneously press the Harpsichord and Strings keys from among the keys marked as "Tone" keys.

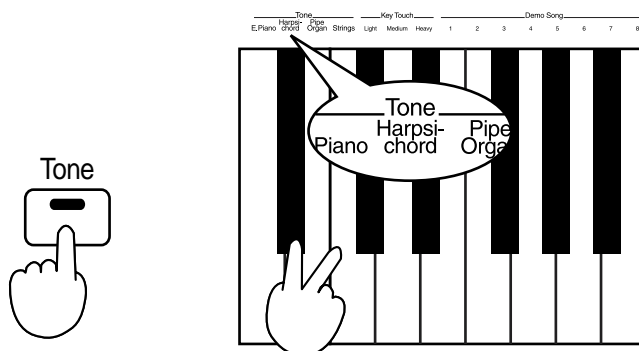

While holding down... Press simultaneously

NOTE

Tones composed of two separate layered tones ("Dual" tones) cannot be assigned to the [Tone] button. When the [Tone] button is pressed, the single previously assigned tone is restored.

MEMO

 
You can adjust the volume balance between the two selected tones in Dual Play. Please refer to "Changing the Volume Balance in Dual Play" (p. 17).

Adding Reverberation to the Sound — Reverb Effect


The DP-1000 allows you to add reverberation to what you play on the keyboard. With the reverb effect, you can get a pleasant reverberation, making it sound as if you were performing in a concert hall or similar space.

1. Press the [Reverb] button; the button indicator lights.

Reverberation is added to the sound.

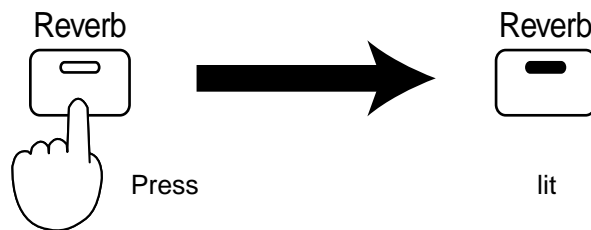

 2. Press the [Reverb] button once more; the button indicator goes off, and the reverb effect is no longer added to the sound.

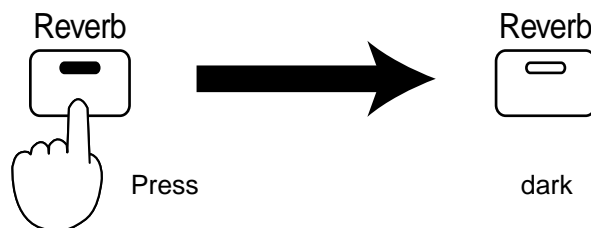

Changing the Reverb Type

The DP-1000 features eight reverb types, 1-8, allowing you to select the preferred reverb sound.

The higher the reverb type number, the deeper the effect is.

 
The reverb is reset to type 4 when the power is switched on.

To change the reverb type, hold down the [Key Touch/Demo Song] button and press one of the keys C3-G3 (corresponding to reverb types 1-8).

<Ex.> Selecting Reverb Type 6

While holding down the [Key Touch/Demo Song] button, press the F3 key (the fourth white key below Middle C).


Refer to "Functions Assigned to the Keyboard" (p. 24).

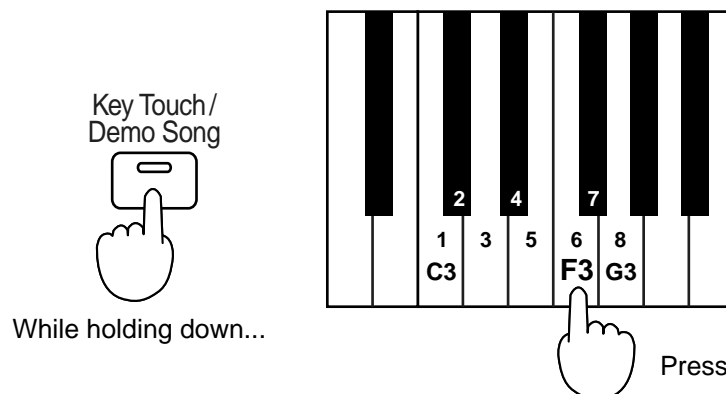

Changing Keyboard Touch Sensitivity

You can select from three touch sensitivity levels: Light, Medium, and Heavy. When the Keyboard is turned on, the response is set to “Medium.”

 While holding down the [Key Touch/Demo Song] button, press the key indicating the preferred touch sensitivity.

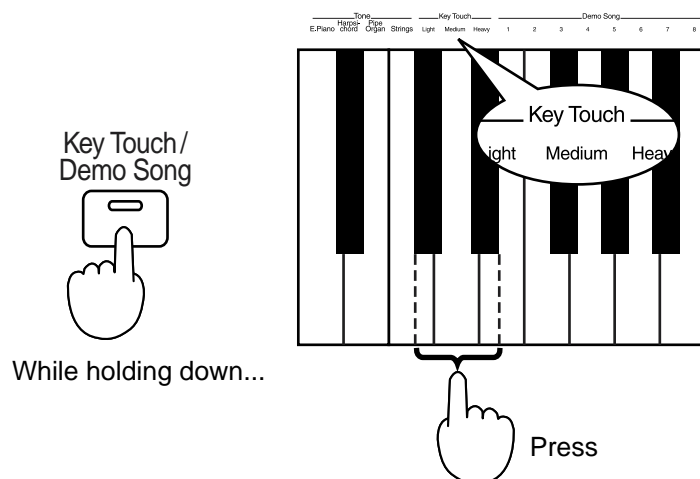

Types	Meaning
Medium	Normal setting, providing the most natural touch, closest to that of an acoustic piano.
Heavy	With this setting, to play fortissimo the keys must be played much more strongly than normally, as if the keys had become heavier. Adds even more emotion when you play with lots of dynamics. This is useful for players who use a strong touch and for drill work.
Light	With this setting, fortissimo can be produced using much less force than normal, thus making the keys seem lighter. This setting makes it easy to play, even for children.

Convenient Functions

Transposing without Changing Your Fingering—Key Transpose

You can play in a different key-without changing the keys you are playing. This function is called “Key Transpose.” When you are accompanying a singer, you can use Key Transpose to match the vocal pitch of the singer, allowing you to transpose easily while using the same printed music (keyboard fingering).

Key transpositions remain in effect until the keyboard’s power is turned off.

* *The transposition setting is effective only on sounds performed on the DP-1000’s keyboard. This setting is not effective on tones from external MIDI messages played on the DP-1000.*

 
<Ex.> Using the C Major Keys to Play a Song in E Major

1. While holding down the [Key Touch/Demo Song] button, press the tonic (root) of the key to which you want to transpose.


Use the C2–B2 notes to select the tonic.

Refer to “Functions Assigned to the Keyboard” (p. 24).

Here, press the E2 key.

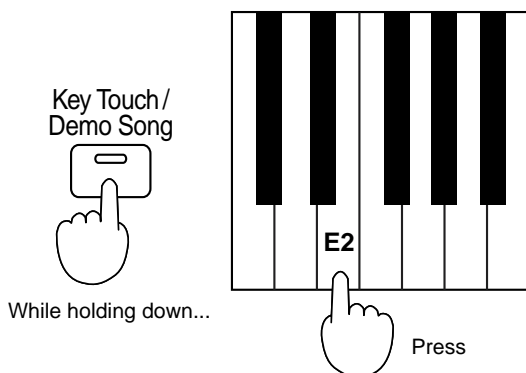

 2. To return to the previous condition, while holding down the [Key Touch/Demo Song] button, press the C2 key.

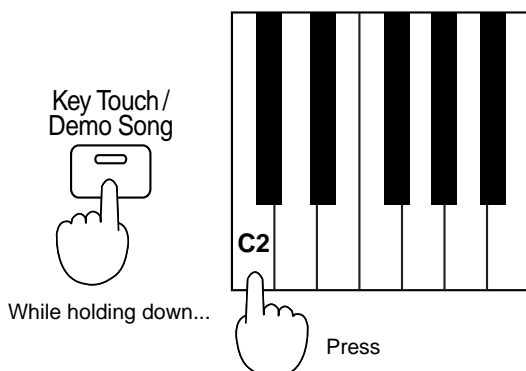


Changing the Volume Balance in Dual Play

You can change the volume balance between the two layered sounds in Dual Play (p. 13).

When the Keyboard is turned on, the response is set to “Standard.”

This setting remains in effect until the keyboard’s power is turned off.

 While holding down the [Key Touch/Demo Song] button, press the corresponding note (C7–E7).

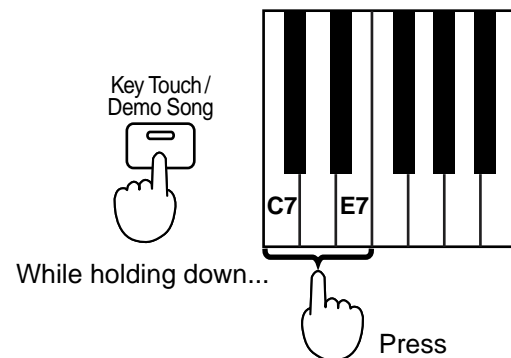

Key	Description
C7	One of the two layered tones sounds louder.
C#7	One of the two layered tones sounds somewhat louder.
D7	Standard
D#7	The other of the two layered tones sounds somewhat louder.
E7	The other of the two layered tones sounds louder.

Adjusting the Reference Pitch — Master Tuning

In situations such as when playing in ensemble with other instruments, you can adjust the DP-1000's reference pitch to that of another instrument.

Middle A is generally used as the standard reference pitch for tuning instruments. When performing in ensemble with other instruments, the ensemble will not sound good if the instruments are not in tune with each other. This tuning of all the instruments to a reference pitch is called "Master Tuning."

 


The reference pitch is reset to 440 Hz when the power is switched on, with 440 Hz played by Middle A (A4).

■ Lowering/ raising the Reference Pitch

While holding down the [Key Touch/Demo Song] button, press the "C4" note to lower the reference pitch, or the "D4" note to raise it.

Refer to "Functions Assigned to the Keyboard" (p. 24).

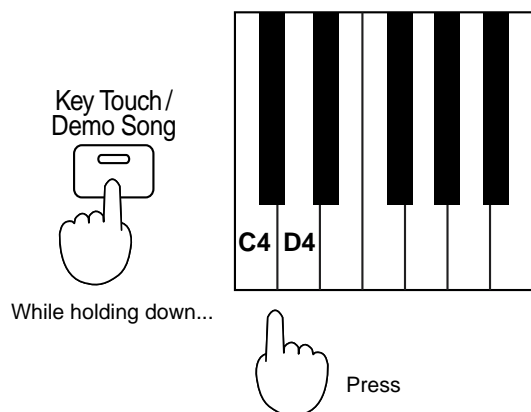


Each time you press the "C4" key, the pitch will fall by 0.1 Hz. If you continue holding the key, the pitch will continue falling.

Each time you press the "D4" key, the pitch will rise by 0.1 Hz. If you continue holding the key, the pitch will continue rising.

■ Setting the Reference Pitch to 440 Hz

While holding down the [Key Touch/Demo Song] button, press the "C#4" key on the keyboard.

 Refer to "Functions Assigned to the Keyboard" (p. 24).

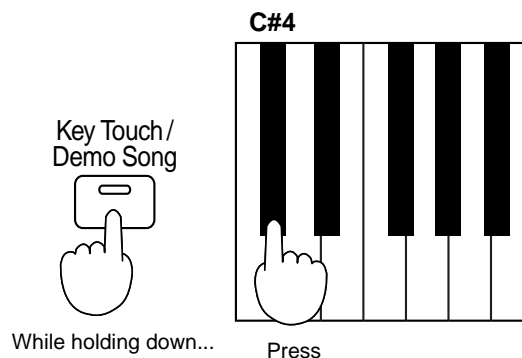


The reference pitch will be set to 440 Hz. This is the most commonly used setting. The A4 (Middle A) key will sound at 440 Hz.

■ Setting the Reference Pitch to 442 Hz

While holding down the [Key Touch/Demo Song] button, press the "D#4" key on the keyboard.

 Refer to "Functions Assigned to the Keyboard" (p. 24).

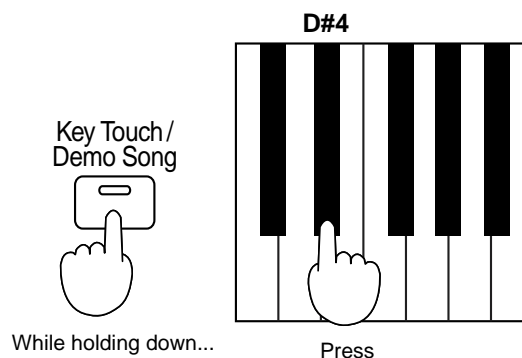


The standard pitch will be set to 442 Hz. This setting is often used for concert pianos. The A4 (Middle A) key will sound at 442 Hz.

Connecting to Audio Equipment

When you connect the DP-1000 to audio equipment, you can play the sounds from the DP-1000 through the speakers on the audio equipment or record your performances on a tape recorder or other recording device.

 ■ Connectors



Output Jacks

You can connect audio equipment using audio cables (sold separately) and play the sounds from the DP-1000 through the speakers on the connected equipment or record your performances on a tape recorder or other recording device.

Input Jacks

You can connect another sound source, such as audio equipment or an electronic instrument using audio cables (sold separately) and play the sounds from the connected device through the speakers on the DP-1000.

■ Making the Connections

 
* To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

1. Turn the volume all the way down on the DP-1000 and the device you're about to connect.
2. Turn off the power to both devices.
3. Use audio cables (sold separately) to make the connection.

* When connecting a monaural device, you must connect it to the L (Mono) jack of the DP-1000, and leave the R jack unused.

* Once the connections have been completed, turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

○ Playing Sounds from the DP-1000 Through the Speakers on Audio Equipment or Recording Your Performances on a Recording Device

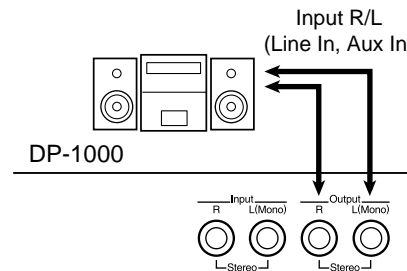


1. Turn on the power to the DP-1000.
2. Turn on the power to the other connected equipment.
3. Adjust the volume level on the DP-1000 and the connected device.

○ When Recording DP-1000 Performances on a Recording Device

1. Connect the DP-1000 and other audio equipment.
2. Start recording with the connected device.
3. Play the DP-1000.
4. When the performance ends, stop recording on the connected equipment.

 ○ Playing Audio Equipment Sounds Through the Speakers on the DP-1000

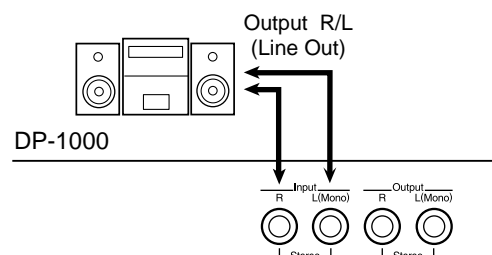

1. Turn on the power to the connected equipment.
2. Turn on the power to the DP-1000.
3. Adjust the volume level on the DP-1000 and the connected device.

* Raising the volume level of the connected device too high will not only damage the DP-1000's speakers, but may also cause hearing loss. Listen at appropriate levels.

 
Connecting MIDI Devices

Please read this section if you are planning to use the DP-1000's MIDI functions, connecting it to another MIDI device. When connected to one of Roland's MT Series devices or other such instrument, you can play the many MT Series internal tones with the DP-1000's keyboard, as well as record the performances.

Using MIDI

■ About MIDI

MIDI, short for "Musical Instrument Digital Interface," was developed as a standard for the exchange of performance data between electronic instruments and computers. The DP-1000 is equipped with MIDI connectors to allow such exchange of performance data with external equipment and devices. Connecting the keyboard to other devices with these jacks provides you with an even greater variety of ways to use your keyboard.

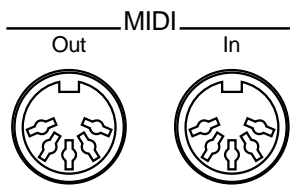

MIDI Connectors on the rear panel

MIDI Out Connector

Performance information such as the output from the keyboard or pedal is sent out here to the MIDI connectors of external equipments.

 
MIDI In Connector

MIDI messages sent from connected external equipment are input here, then DP-1000 can output sounds, exchange tones, and perform other operations.


Making Connections

* To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

1. Turn off the DP-1000.

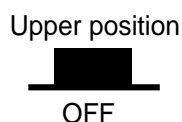

 2. Connect the MIDI connectors on the external MIDI device and DP-1000 with MIDI cables.

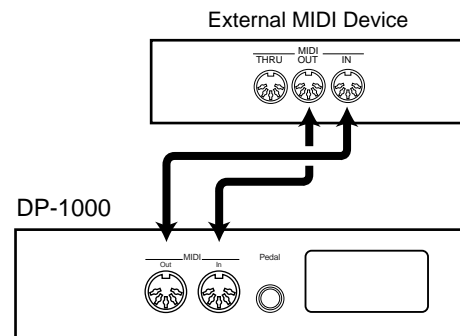

3. Turn on the power to the devices.

4. Adjust the volume level on the DP-1000 and the connected devices.

5. If necessary, set the MIDI channel, Local on/off, etc.

■ Sending and Receiving Program Change Messages

When you press the DP-1000's [Piano] button or [Tone] button to change tones, a Program Change Message with the corresponding Program Number is sent via the MIDI Out connector. Furthermore, a Program Change Message received via the MIDI In connector changes the tone to the one with the corresponding Program Number.

Switching Tones with Program Change Messages

Here, with the DP-1000 connected to an external MIDI sequencer, when recording and playing back songs, if after pressing the sequencer's Record button to start you press the DP-1000's [Tone] button and then begin to play, a Program Change message for that tone is recorded by the sequencer. When you then play back using the sequencer, regardless of the DP-1000's mode, the tone is changed in accordance with the Program Change messages recorded by the sequencer, allowing you to play back with the tones used during recording. In addition, Program Change messages from tone changes made while the recording is in progress are also recorded, meaning you can also record songs with tone changes made during the performance.

Program Numbers for each of the DP-1000's tones are shown below.

Program Number	Tone
1	Piano
4	Harpsichord
6	Electric Piano
8	Pipe Organ
9	Strings
11	Piano + Harpsichord
13	Piano + Electric Piano
15	Piano + Pipe Organ
16	Piano + Strings
24	Harpsichord + Electric Piano
26	Harpsichord + Pipe Organ
27	Harpsichord + Strings
33	Electric Piano + Pipe Organ
34	Electric Piano + Strings
37	Pipe Organ + Strings

* Any Program Number other than those listed above that are received by the DP-1000 are ignored.

 
* 11-37 are in Dual Play mode (p. 13).

Set the MIDI Channel

MIDI features sixteen MIDI channels, numbered 1-16. Even after the MIDI cables are connected, the connected devices must be set to use the same MIDI channels, otherwise no sound will be produced. When the DP-1000 is turned on, Channel "1" is selected.


To make the setting, while holding down the [Key Touch/Demo Song] button, press any key from C5 to D#6.

The sequence of keys C5-D#6 corresponds to MIDI Channels 1-16. Refer to "Functions Assigned to the Keyboard" (p. 24).

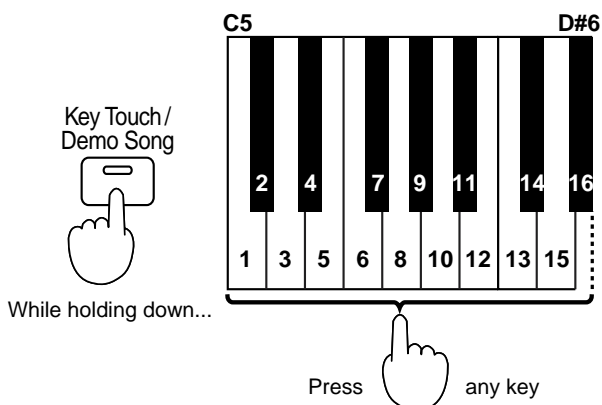

<Ex.> Set the MIDI Channel to 10

 
While holding down the [Key Touch/Demo Song] button, press the key of A5.

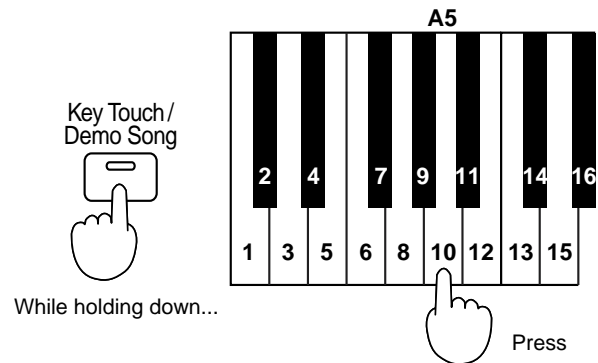

Here the DP-1000's MIDI channel for sending/receiving is both set to 10.


Local On/Off

 With the keyboard connected to a MIDI sequencer, keyboard performances can be recorded to the sequencer; the sequencer can also be used to play back performances.

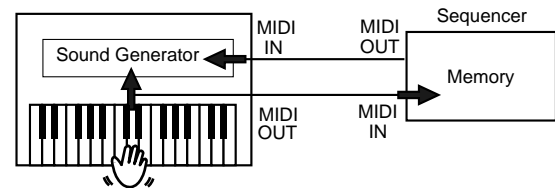


With the sequencer's "Thru" function on, the same notes may be sounded twice.

 This is because the keyboard's performance data arrives at the sound generator via two different routes, (1) and (2). This can cause the sound to become strange, and also puts strain on the instrument's polyphonic capabilities. To prevent this from happening, route (1) must be separated, by means of what is called "Local Off."

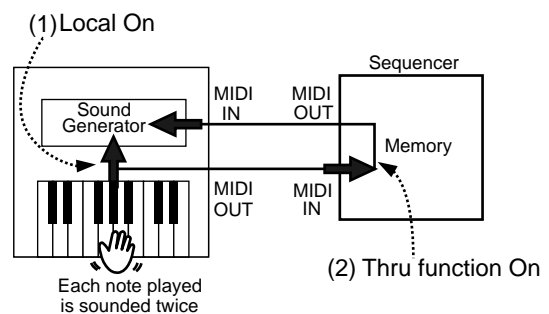


■ Switching Local On/Off

 
1. Local On is set when the power is switched on.
2. While holding down the [Key Touch/Demo Song] button, press the second key from the far right (B7).

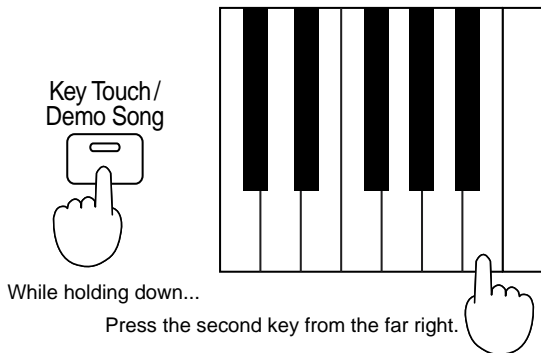


This sets Local Off.

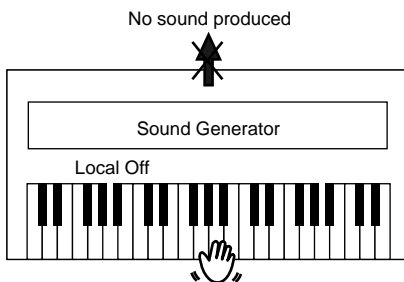 

 3. Once more, while holding down the [Key Touch/Demo Song] button, press the farthest key to the right (C8).

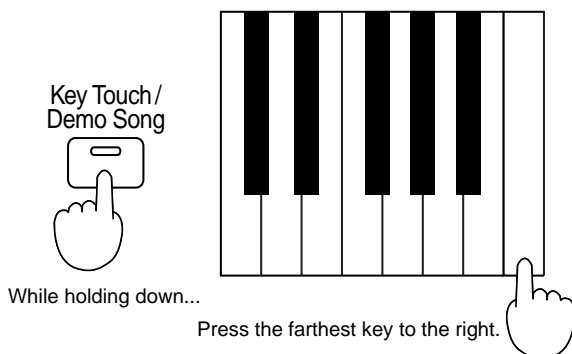

This sets Local On.

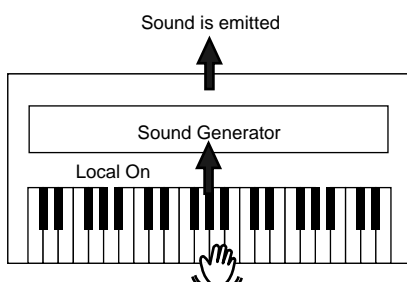 

Omni On/Off

 
When set to Omni On, the DP-1000 will sound as a result of received MIDI messages, no matter which channel the messages arrive on.

When set to Omni Off, the DP-1000 will recognize only the messages that arrive on the MIDI channel that has been selected, as explained under "Set the MIDI Channel" (p. 21).

■ Switching Omni On/Off

1. Omni On is automatically set when the power is switched on.
2. While holding down the [Key Touch/Demo Song] button, press the key of A7 to turn the setting On, or the key of G7 to turn the setting Off.

Refer to "Functions Assigned to the Keyboard" (p. 24).

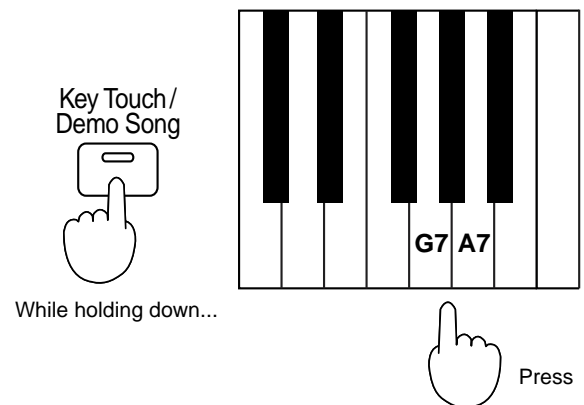

Troubleshooting

If you are encountering any problems with the equipment, please read the section below before determining that there has been any malfunction.

The piano cannot be switched on

- Is the power cord properly connected? (p. 7)

No sound is produced

- Is the Volume knob set to the minimum position? (p. 8)
- Are headphones connected? (p. 8)
When headphones are connected, the keyboard's speaker stops playing.
- Is Local On/Off set to "Off?" (p. 21)

Two sounds are produced when the keyboard is played

- Is the keyboard in Dual Play mode? (p. 13)

The pitch of the keyboard sounds incorrect

- Is the Master Tuning setting correct? (p. 18)
- Is the Key Transpose setting correct? (p. 17)

The pedals are not functioning, or function intermittently

- Are the pedals connected properly?
Make sure the pedal cord is securely connected to the pedal jack on the back of the unit.

I can hear strange sounds when opening and closing the keyboard lid

- During normal operation, you may hear faint sounds when opening and closing the keyboard lid.

The volume level of the instrument connected to the Input jacks is too low

- Could you be using a connection cable that contains a resistor?
Use a connection cable that does not contain a resistor.

■ When using external sound devices

No sound of external devices is produced

- Is the power to all equipment turned on?
- Is the volume setting in the external sound generator lowered?
- Are the MIDI connections between DP-1000 and the external MIDI device correct? (p. 20)
- Is the MIDI channel setting correct? (p. 21)
- Is the Omni On/Off setting correct? (p. 22)

■ When using MIDI sequencers

No sound of DP-1000 is produced

- Are the MIDI connections between DP-1000 and the MIDI sequencer correct? (p. 20)
- Is the MIDI channel setting correct? (p. 21)
- Is the Omni On/Off setting correct? (p. 22)

Strange sounds (or two sounds) are produced when the DP-1000 is played

 
- With the sequencer's "Thru" function on, the same notes may be sounded twice. Set the DP-1000 to Local off. (p. 21)

Specifications

- Keyboard
88 keys (hammer action mechanism)
- Maximum Polyphony
64 voices
- Keyboard Touch Sensitivity
Light, Medium, Heavy
- Keyboard Modes
Whole
Dual
- Tones
Piano, Electric Piano, Harpsichord, Strings, Pipe Organ
- Effects
Reverb (8 types)
- Key Transposition
-6+5 (in units of semitone)
- Master Tune
415.3–466.2 Hz (adjustable in increments of 0.1 Hz)
- Connectors
Output Jacks (L/Mono, R)
Input Jacks (L/Mono, R)
Headphones Jack (stereo) x 2
MIDI Connectors (In, Out)
Pedal Connector
- Pedals
Damper, Sostenuto, Soft
- Speakers
12 cm x 2
- Rated Power Output
15 W x 2
- Power Supply
117 V
- Power Consumption
35 W
- Dimensions (including Piano Stand)
(with the keyboard lid opened)
1439 (W) x 459 (D) x 968 (H) mm
56-11/16 (W) x 18-1/8 (D) x 38-1/8 (H) inches
(with the keyboard lid closed)
1439 (W) x 459 (D) x 774 (H) mm
56-11/16 (W) x 18-1/8 (D) x 30-1/2 (H) inches
- Weight (including Piano Stand)
56.5 kg
125 lbs
- Accessories
Owner's Manual, Power Cord

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Functions Assigned to the Keyboard

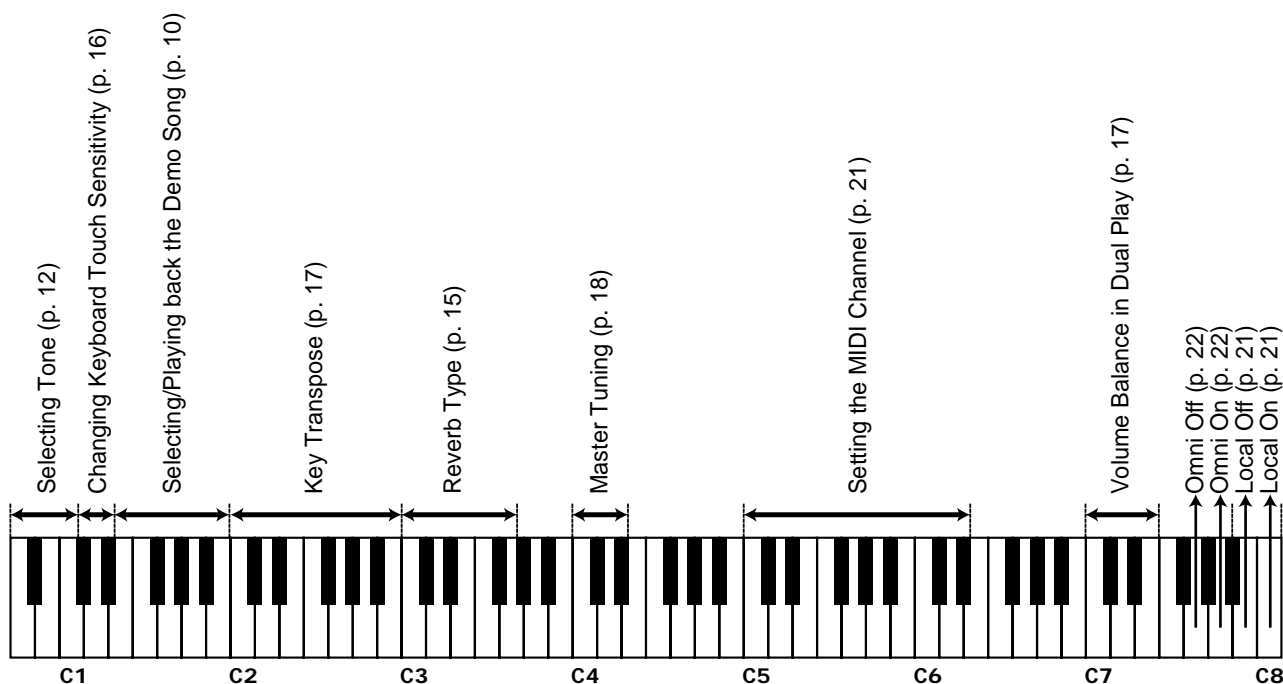

MIDI Implementation Chart

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1 1 –16	1 1 –16	
Mode Default Messages Altered	Mode 1 x *****	Mode 1 OMNI ON/OFF	
Note Number : True Voice	15–113 *****	0 –127 15–113	
Velocity Note On Note Off	O x 8n v = 64	O x	
After Touch Key's Channel's	x x	x x	
Pitch Bend	x	x	
Control Change 6, 38 7 11 64 66 67 91 100, 101	O x x O O O O O	O O *1 O *1 O *1 O *1 O *1 O O	Data entry Volume Expression Hold 1 Sostenuto Soft Reverb RPN LSB, MSB
Prog Change : True Number	O (0 –36) *****	O (0 –127) 0–36	
System Exclusive	O	O	
System Common : Song Position : Song Select : Tune Request	x x x	x x x	
System Real Time : Clock : Commands	x x	x x	
Aux Messages : All Sound Off : Reset All Controllers : Local On/Off : All Notes Off : Active Sensing : System Reset	x x x x O x	x O O O (123 –127) O x	
Notes	*1 These message can affect only MIDI notes.		

Mode 1 : OMNI ON, POLY

Mode 2 : OMNI ON, MONO

O : Yes

Mode 3 : OMNI OFF, POLY

Mode 4 : OMNI OFF, MONO

X : No

* A separate publication titled "MIDI Implementation" is also available. It provides complete details concerning the way MIDI has been implemented on this unit. If you should require this publication (such as when you intend to carry out byte-level programming), please contact the nearest Roland Service Center or authorized Roland distributor.

INDEX

Numerics

440 Hz	18
442 Hz	18

A

Audio Equipment	19
-----------------------	----

B

button	17
--------------	----

C

Connecting (Audio Equipment)	19
Connecting (MIDI Devices)	20

D

Damper Pedal	9
Demo Songs	10
Dual Play	13, 17

E

E.Piano (Electric Piano)	12
--------------------------------	----

H

Harpsichord	12
Headphones	8

I

Input Jacks	19
-------------------	----

K

.....	17
Key Touch/Demo Song button	10, 15–18, 21
Key Transpose	17
Keyboard Touch Sensitivity	16

L

Lid	7
Local On/Off	21

M

Master Tuning	18
MIDI	20
MIDI Channel	21
music stand	7

O

Omni On/Off	22
Output Jacks	19

P

Pedals	9
Piano	12
Piano button	12

Pipe Organ	12
Power Cord	7
Power switch	8
Program Change	20

R

Reference Pitch	18
Reverb button	15
Reverb Effect	15

S

Soft Pedal	9
Sostenuto Pedal	9
Strings	12

T

Tone button	12
-------------------	----

V

Volume	8
--------------	---



This product complies with the requirements of European Directives EMC 89/336/EEC and LVD 73/23/EEC.

For EU Countries

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For the USA

For Canada

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT

Al Fanny Trading Office
9, EBN Hagar A1 Askalany Street,
ARD El Golf, Heliopolis,
Cairo 11341, EGYPT
TEL: 20-2-417-1828

REUNION

Maison FO - YAM Marcel
25 Rue Jules Hermann,
Chaudron - BP79 97 491
Ste Clotilde Cedex,
REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA

That Other Music Shop (PTY) Ltd.
11 Melle St., Braamfontein,
Johannesburg, SOUTH AFRICA

P.O.Box 32918, Braamfontein 2017
Johannesburg, SOUTH AFRICA
TEL: (011) 403 4105

Paul Bothner (PTY) Ltd.

17 Werdmuller Centre,
Main Road, Claremont 7708
SOUTH AFRICA

P.O.Box 23032, Claremont 7735,
SOUTH AFRICA
TEL: (021) 674 4030

ASIA

CHINA

Beijing Xinghai Musical Instruments Co., Ltd.
6 Huangmunchang Chao Yang
District, Beijing, CHINA
TEL: (010) 6774 7491

Shanghai Xingtong Acoustics Equipment CO., Ltd.

5F. No.1500 Pingliang Road
New East Club Plaza, Shanghai,
CHINA
TEL: (021) 5580-0800

HONG KONG

Tom Lee Music Co., Ltd. Service Division
22-32 Pun Shan Street, Tsuen
Wan, New Territories,
HONG KONG
TEL: 2415 0911

INDIA

Rivera Digitec (India) Pvt. Ltd.
409, Nirman Kendra Mahalaxmi
Flats Compound Off. Dr. Edwin
Moses Road, Mumbai-400011,
INDIA
TEL: (022) 498 3079

INDONESIA

PT Citra IntiRama
Jl. Cideng Timur No. 15J-150
Jakarta Pusat
INDONESIA
TEL: (021) 6324170

KOREA

Cosmos Corporation
1461-9, Seocho-Dong,
Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA

BENTLEY MUSIC SDN BHD
140 & 142, Jalan Bukit Bintang
55100 Kuala Lumpur, MALAYSIA
TEL: (03) 2144-3333

PHILIPPINES

G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

SINGAPORE

Swee Lee Company
150 Sims Drive,
SINGAPORE 387381
TEL: 846-3876

CRISTOFORI MUSIC PTE LTD

Blk 3014, Bedok Industrial Park E,
#02-2148, SINGAPORE 489980
TEL: 243 9555

TAIWAN

ROLAND TAIWAN ENTERPRISE CO., LTD.
Room 5, 9th. No. 112 Chung Shan
N.Road Sec.2, Taipei, TAIWAN,
R.O.C.
TEL: (02) 2561 3339

THAILAND

Theera Music Co., Ltd.
330 Verng NakornKasem, Soi 2,
Bangkok 10100, THAILAND
TEL: (02) 2248821

VIETNAM

Saigon Music
138 Tran Quang Khai St.,
District 1
Ho Chi Minh City
VIETNAM
TEL: (08) 844-4068

AUSTRALIA/NEW ZEALAND

AUSTRALIA

Roland Corporation Australia Pty., Ltd.
38 Campbell Avenue
Dee Why West. NSW 2099
AUSTRALIA
TEL: (02) 9982 8266

NEW ZEALAND

Roland Corporation Ltd.
32 Shaddock Street, Mount Eden,
Auckland, NEW ZEALAND
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA

Instrumentos Musicales S.A.
Av.Santa Fe 2055
(1123) Buenos Aires
ARGENTINA
TEL: (011) 4508-2700

BRAZIL

Roland Brasil Ltda
Rua San Jose, 780 Sala B
Parque Industrial San Jose
Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

COSTA RICA

JUAN BANSBACH Instrumentos Musicales
Ave.1. Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: 258-0211

CHILE

Comercial Fancy II S.A.
Rut.: 96.919.420-1
Natanelli Cox #739, 4th Floor
Santiago - Centro, CHILE
TEL: (02) 688-9540

EL SALVADOR

OMNI MUSIC
75 Avenida Norte y Final
Alameda Juan Pablo II,
Edificio No.4010 San Salvador,
EL SALVADOR
TEL: 262-0788

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar
de los Padres 01780 Mexico D.F.
MEXICO
TEL: 688-0480

PANAMA

SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY

Distribuidora De Instrumentos Musicales
J.E. Olear y ESQ. Manduvira
Asuncion PARAGUAY
TEL: (021) 492-124

PERU

VIDEO Broadcast S.A.
Portinari 199 (ESQ. HALS),
San Borja, Lima 41,
REP. OF PERU
TEL: (01) 4758226

URUGUAY

Todo Musica S.A.
Francisco Acuna de Figueroa 1771
C.P.: 11.800
Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA

Musicland Digital C.A.
Av. Francisco de Miranda,
Centro Parque de Cristal, Nivel
C2 Local 20 Caracas
VENEZUELA
TEL: (212) 285-8586

EUROPE

AUSTRIA

Roland Austria GES.M.B.H.
Siemensstrasse 4, P.O. Box 74,
A-6063 RUM, AUSTRIA
TEL: (0512) 26 44 260

BELGIUM/HOLLAND/ LUXEMBOURG

Roland Benelux N. V.
Houtstraat 3, B-2260, Oevel
(Westerlo) BELGIUM
TEL: (014) 575811

DENMARK

Roland Scandinavia A/S
Nordhavnsvej 7, Postbox 880,
DK-2100 Copenhagen
DENMARK
TEL: (039)16 6200

FRANCE

Roland France SA
4, Rue Paul Henri SPAAK,
Parc de l'Esplanade, F 77 462 St.
Thibault, Lagny Cedex FRANCE
TEL: 01 600 73 500

FINLAND

Roland Scandinavia As, Filial Finland
Lauttasareentie 54 B
Fin-00201 Helsinki, FINLAND
TEL: (9) 682 4020

GERMANY

Roland Elektronische Musikinstrumente HmbH.
Oststrasse 96, 22844 Norderstedt,
GERMANY
TEL: (040) 52 60090

GREECE

STOLLAS S.A. Music Sound Light
155, New National Road
Patras 26442, GREECE
TEL: (061) 43-5400

HUNGARY

Intermusica Ltd.
Warehouse Area 'DEPO' Pf.83
H-2046 Torokbalint, HUNGARY
TEL: (23) 511011

IRELAND

Roland Ireland
Audio House, Belmont Court,
Donnybrook, Dublin 4,
Republic of IRELAND
TEL: (01) 2603501

ITALY

Roland Italy S. p. A.
Viale delle Industrie 8,
20020 Arese, Milano, ITALY
TEL: (02) 937-78300

NORWAY

Roland Scandinavia Avd. Kontor Norge
Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo
NORWAY
TEL: 273 0074

POLAND

P. P. H. Brzostowicz
UL. Gibraltarska 4,
PL-03664 Warszawa POLAND
TEL: (022) 679 44 19

PORTUGAL

Tecnologias Musica e Audio, Roland Portugal, S.A.
Cais Das Pedras, 8/9-1 Dto
4050-465 PORTO
PORTUGAL
TEL: (022) 608 00 60

ROMANIA

FBS LINES
Piata Libertatii 1,
RO-4200 Gheorgheni
TEL: (095) 169-5043

RUSSIA

MuTek
3-Bogatyrskaya Str. 1.k.1
107 564 Moscow, RUSSIA
TEL: (095) 169 5043

SPAIN

Roland Electronics de España, S. A.
Calle Bolivia 239, 08020
Barcelona, SPAIN
TEL: (93) 308 1000

SWEDEN

Roland Scandinavia A/S SWEDISH SALES OFFICE
Danvik Center 28, 2 tr.
S-131 30 Nacka SWEDEN
TEL: (08) 702 0020

SWITZERLAND

Roland (Switzerland) AG Musitronic AG
Gerberstrasse 5, Postfach,
CH-4410 Liestal, SWITZERLAND
TEL: (061) 927-8383

UKRAINE

TIC-TAC
Mira Str. 19/108
P.O. Box 180
295400 Munkachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

Roland (U.K.) Ltd.
Atlantic Close, Swansea
Enterprise Park, SWANSEA
SA7 9FJ,
UNITED KINGDOM
TEL: (01792) 700139

MIDDLE EAST

BAHRAIN

Moon Stores
No.16, Bab Al Bahrain Avenue,
P.O.Box 247, Manama 304,
State of BAHRAIN
TEL: 211 005

CYPRUS

Radex Sound Equipment Ltd.
17, Diagorou Street, Nicosia,
CYPRUS
TEL: (02) 66-9426

IRAN

MOCO, INC.
No.41 Nike St., Dr.Shariyati Ave.,
Roberoye Cerahe Mirdamad
Tehran, IRAN
TEL: (021) 285-4169

ISRAEL

Halilit P. Greenspoon & Sons Ltd.
8 Retzif Ha'aliya Hashnya St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN

AMMAN Trading Agency
245 Prince Mohammad St.,
Amman 1118, JORDAN
TEL: (06) 464-1200

KUWAIT

Easa Husain Al-Yousifi
Abdullah Salem Street,
Safat, KUWAIT
TEL: 243-6399

LEBANON

A. Chahine & Fils
Gerge Zeidan St., Chahine Bldg.,
Achrafieh, P.O.Box: 16-5857
Beirut, LEBANON
TEL: (01) 20-1441

QATAR

Al Emadi Co. (Badie Studio & Stores)
P.O. Box 62,
Doha, QATAR
TEL: 4423-554

SAUDI ARABIA

aDawlah Universal Electronics APL
Corniche Road, Aldossary Bldg.,
1st Floor, Alkhobar,
SAUDI ARABIA

P.O.Box 2154, Alkhobar 31952
SAUDI ARABIA
TEL: (03) 898 2081

SYRIA

Technical Light & Sound Center
Bldg. No. 47,
Khaled Ebn Al Walid St.
Damascus, SYRIA
TEL: (011) 221-1230

TURKEY

Barkat muzik aletleri ithalat ve ihracat Ltd Sti
Siraselviler Caddesi Siraselviler
Pasaji No:74/20
Taksim - Istanbul, TURKEY
TEL: (0212) 2499324

U.A.E.

Zak Electronics & Musical Instruments Co. L.L.C.
Zabeel Road, Al Sherooq Bldg.,
No. 14, Grand Floor, Dubai, U.A.E.
TEL: (04) 3360715

NORTH AMERICA

CANADA

Roland Canada Music Ltd. (Head Office)
5480 Parkwood Way Richmond
B. C., V6V 2M4 CANADA
TEL: (604) 270 6626

Roland Canada Music Ltd. (Toronto Office)
Unit 2, 109 Woodbine Downs
Blvd, Etobicoke, ON
M9W 6Y1 CANADA
TEL: (0416) 213 9707

U. S. A.

Roland Corporation U.S.
5100 S. Eastern Avenue
Los Angeles, CA 90040-2938,
U. S. A.
TEL: (323) 890 3700

As of January 1, 2002 (Roland)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>