
It's a Fact...

The HP-7 is a perfect blend of craftsmanship and technology for all piano lovers. The HP-7 includes:

- 24 CD-quality GM2/🎹 sounds
- 64-note polyphony
- 88-key progressive hammer action keyboard with escapement
- 2-track recorder with built-in metronome
- Reverb, Chorus, Sympathetic Resonance
- Special 4-speaker sound system

Selecting Tones

Use the following procedure to select a tone:

1. Press a tone button (e.g. Piano, E.Piano, Organ, etc.) in the TONE section (located to the left of the screen.)
2. Press the VARIATION button in the TONE section to hear an alternate tone.

Note: Each time you press the VARIATION button, the button's indicator will change color. Each color represents a different tone.

Refer to the Owner's Manual, pg. 15 for more information.

Selecting Dual Tones

Use the following procedure to select dual tones:

1. Simultaneously press two tone buttons (e.g. Piano + Strings, E.Piano + Organ, etc.) in the TONE section (located to the left of the screen.)
2. Press the VARIATION button in the TONE section to hear an alternate dual tone.
3. Hold down the TRANSPOSE button (located to the left of the screen) and press the SPLIT button.
4. Use the [+] and [-] buttons (located under the screen) to adjust the volume balance between the tones.
5. Press the TRANSPOSE or the SPLIT button.

Refer to the Owner's Manual, pg. 16 for more information.

Selecting Split Tones

Use the following procedure to select split tones:

1. Select a right-hand tone as described under "Selecting Tones."
2. Press the SPLIT button (located to the left of the screen.)
3. Press the VARIATION button in the TONE section (located to the left of the screen) to hear an alternate left-hand tone.

Note: Each time you press the VARIATION button, the button's indicator will change color. Each color represents a different left-hand tone.

Refer to the Owner's Manual, pp. 17–18 for more information.

Adjusting the Piano Sound

Use the following procedure to adjust the piano sound:

1. Press the HAMMER button in the PIANO CUSTOMIZE section (located to the right of the screen) to adjust "Hammer Response."
2. Press the LID button to adjust "Lid Height" (tone.)

Note: Each time you press the HAMMER or LID button, the button's indicator will change color. Each color represents a different adjustment level.

Refer to the Owner's Manual, pg. 24 for more information.

Playing a Demo Song

Use the following procedure to play a demo song:

1. Press the SONG/TEMPO button (located to the right of the screen.)
2. Use the [+] and [-] buttons (located under the screen) to locate a song.
3. Press the PLAY [▶] button (located to the right of the screen) to play the song; press the PLAY [▶] button again to silence the piano.

Refer to the Owner's Manual, pp. 13–14 for more information.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>