

## TURN ON THE SYSTEM

- Turn vehicle ignition to **ON** or **ACC**.
- Press **POWER** on the front display (FIG 1) or wireless remote (FIG 2) to turn on each system.

### FRONT CONTROL PANEL



FIG 1 Power Enter Mode Speaker AUX AV Input USB Port

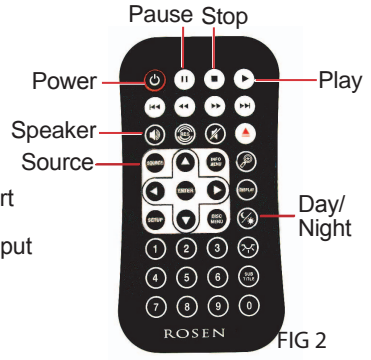


FIG 2

## PLAY A DVD OR CD

- Press and release the **MODE** button on the front control panel (FIG 1) or the **SOURCE** button on the remote control (FIG 2) until "DVD PLAYER" appears.
- Press on the bottom of the display to pivot and access the DVD/CD slot.
- With the label facing away from you, insert a disc into the disc slot (FIG 3). Do not force disc into slot. If a DVD/CD menu appears on the screen, press **PLAY** (FIG 2) or **ENTER** (FIG 1) as instructed on the screen. Most discs will load and play automatically.
- To obtain the best viewing angle adjust the display angle as needed. (FIG 3)



FIG 3

## USE THE HEADPHONES

- Turn on by pressing the **OFF/ON** button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries have a charge and are inserted properly.
- The headphones each have a two-position slide switch labeled "CH.A/CH.B." They must have a clear line of sight to the headrest monitor and must be switched to the designated A/B channel to operate properly.
- To adjust the volume use the knob on the ear



FIG 4


## PLAY INTERNAL VIDEO GAMES

- Press the **MODE** button on the front control panel (or **SOURCE** on the remote control) until "INTERNAL GAME" appears on the screen.
- Turn ON and set the game controller to channel "A" or channel "B" depending on which unit you will play on.
- Use the game controller's left and right arrow keys to choose a game.
- Press the **START** button on the game controller to choose the game.
- Use the "A & B" buttons for fire, jump or other action.
- Press **RESET** to return to the main menu.

Note: If the flashing LED stays illuminated, replace the batteries.



## LISTEN OVER VEHICLE SPEAKERS

- Press the **SPEAKER**  on the remote (FIG 2) or on the front control panel (FIG 1). "SPEAKER SOUND ON FM \_\_\_.\_ PRESS LEFT OR RIGHT TO ADJUST" will appear on the screen as shown at right.
- Turn vehicle's radio on, and tune to the FM frequency displayed on screen. If radio interference is heard, try another frequency (see pages 13 & 15 in your Owner's Manual for more information).



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>