




USB 2.0 4 PORT HUB RHUB120

User Manual

Features

- Fully compliant with USB2.0 and USB 1.1
- Specification Support transfer rate of 480Mbps、 12Mbps、 1.5Mbps
- Compliant with EHCI/UHCI/OHCI
- Fully Plug & Play and Hot Swapping support
- Bus Powered, work without any external power
- 1 LED indicator to indicate POWER ON
- Compact, pocket, lightweight.
- Lower power consumption

 Intruccion of appearance

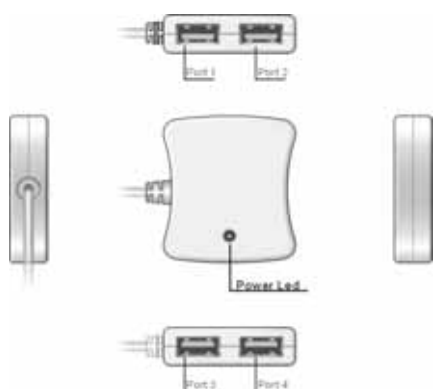

Specification:

Speed	480/12/1.5 Mbps	Power Mode	Bus
Compliant	USB Spec. 2.0 / 1.1	Cable Length(M)	60cm
Connector Downstream	USB Type A Female X 4	Dimension (L x W x H)	50x45x13 mm
LED	1		

Op. temperature: 0 to 70 .

Weight: 42g

System Requirement

 
- Pentium II 300MHZ(or higher) including USB 1.1 or USB 2.0 Port
- Windows 98Se/Windows 2000/Windows Me/
- Windows XP/Mac OS X

Attention


1. Please don't sun the USB 2.0 HUB. Please don't keep the USB 2.0 HUB neighboring the electronics which is running with high current.
2. Please don't disassemble and repair the USB 2.0 HUB.
Keep contacting the retailer in case of assistance is needed.

Hardware Connection Guide

1. Please plug USB cable connector A to USB port on Laptop/PC first.

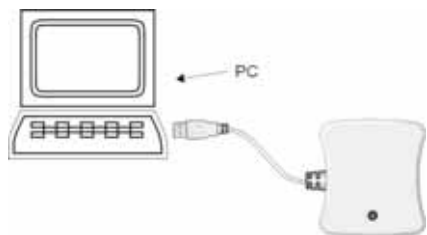

 2. The USB 2.0 HUB will work well after you followed above connection guide.

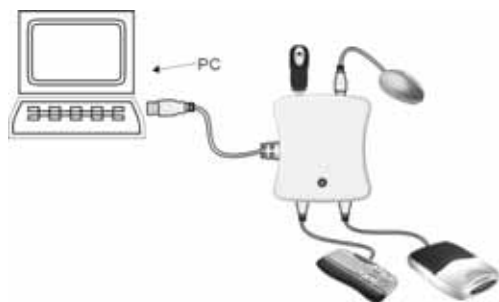

Thank you for purchasing a quality Rosewill Product.

Please register your product at : www.rosewill.com for complete warranty information and future support for your product.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>