1. Overview

Thank you for choosing Rosewill's 802.11n Wireless USB adapter – RWND-N1501UB / RWND-N1502UBE. This chapter is to introduce you more about this Wireless Adapter.

1.1 Package Content

Before getting started, please verify that your package includes the following items: 1.Rosewill RWND-N1501UB / RWND-N1502UBE 802.11n Wireless USB Adapter x 1 2.Resource CD x 1, including:

Wireless Utility and Driver

User Manual

Quick Installation Guide

Note:

Wireless N Adapter

Quick Installation Guide

RNWD-N1501UB/RNWD-N1502UBE

osewill

Make sure that the package contains the above items. If any of the listed items are damaged or missing, please contact with your distributor.

1.2 Product Specification

Chipset	Ralink RT5370
Standard	IEEE 802.11b/g/n
Bus Type	USB 2.0/1.1 Interface
Frequency Band	2.4GHz ISM (Industrial Scientific Medical Band)
Data Rate	11b: 1/2/5.5/11Mbps;
	11g: 6/9/12/24/36/48/54Mbps
	11n: up to 150Mbps
Output Power	11n:14dBm+/-1.5dBm
	11g:14dBm+/-1.5dBm
	11b:16dBm+/-1.5dBm
Security	WEP 64/128, WPA, WPA-PSK, WPA2,
	WPA2-PSK, TKIP/AES
OS support	Windows 2K/XP/Vista/7 (32/64bit); Linux Kernel 2.4
	and 2.6 series; Mac OS 10.5/10.6/10.7
Temperature	Operating: 32 ~ 104°F (0~40°C);
	Storage: -4 ~ 167°F (-20~75°C)
Humidity	Operating: 10% ~ 90% (Non-Condensing);

Storage: 5% ~ 95% (NDrownload from Www.Somanuals.com. All Manuals Search And Download

1.3 System Requirement

You must have at least the following • A laptop computer/desktop PC with an available USB port • At least a 300MHz processor and 32MB of memory • Windows OS for Win2000, XP, Vista, 7; Mac OS X 10.5~10.6; or Linux OS under Kernel 2.4 and 2.6 series • A CD-ROM Drive

USB controller properly installed and working in the computer
 A 802.11n

 802.11g or 802.11b Wireless (and) Access Point/Router (for infrastructure Mode) or another 802.11n
 802.11g or 802.11b wireless (and) adapter (for Ad-Hoc; Peer-to-Peer networking mode).

2. Installation Guide

2.1 Hardware Installation

Please first connect the RWND-N1501UB / RWND-N1502UBE with the USB cable, then insert into the USB slot of your PC or NB.
If the following window popup, please click Cancel or Close:
Under Win XP



Under Windows Vista/Win7





2.2 Installing Drivers and/or Utility

Please insert the CD into your CD-rom drive



Click on the Driver for Windows OS in the CD to install driver and utility for Windows

2

rganize = 1	ndude in library Share with New folder	35	• 🖪 \varTheta
favortes	Name	Date modified	Туре
	UM.QIG	5/7/2012 4/24 PM	File folder
Libraries	RNWD-N1501UB.RNWD-N1502UBE Linux. OS. software 2	5/7/2012 1/55 PM	8Z2 File
	RNWD-N1501UB RNWD-N1502UBE MAC OS settorere 4	5/7/2012 1:57 PM	DMG File
🗏 Computer	RNWD-N1501U8_RNWD-N1502U8E_Win_OS_software_3.2	5/7/2012 1:53 PM	Application
🗣 Network			
	· ·		,

3



Thank you for purchasing a quality Rosewill Product. Please register your product at: **www.rosewill.com** for complete warranty information and future support for your product.

6

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com