

## Owner's Manual

# RMB-1077

## Seven-Channel Power Amplifier



## Important Safety Information

**WARNING: There are no user serviceable parts inside. Refer all servicing to qualified service personnel.**

**WARNING: To reduce the risk of fire or electric shock, be sure that the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.**

**Do not allow foreign objects to get into the enclosure. If the unit is exposed to moisture, or a foreign object gets into the enclosure, immediately disconnect the power cord from the wall. Take the unit to a qualified service person for inspection and necessary repairs.**

Read all the instructions before connecting or operating the component. Keep this manual so you can refer to these safety instructions.

Heed all warnings and safety information in these instructions and on the product itself. Follow all operating instructions.

Clean the enclosure only with a dry cloth or a vacuum cleaner.

**You must allow 10 cm or 4 inches of unobstructed clearance around the unit.** Do not place the unit on a bed, sofa, rug, or similar surface that could block the ventilation slots. If the component is placed in a bookcase or cabinet, there must be ventilation of the cabinet to allow proper cooling.

Keep the component away from radiators, heat registers, stoves, or any other appliance that produces heat.

The unit must be connected to a power supply only of the type and voltage specified on the rear panel of the unit.

Connect the component to the power outlet only with the supplied power supply cable or an exact equivalent. Do not modify the supplied cable in any way. Do not attempt to defeat grounding and/or polarization provisions. Do not use extension cords.

Do not route the power cord where it will be crushed, pinched, bent at severe angles, exposed to heat, or damaged in any way. Pay particular attention to the power cord at the plug and where it exits the back of the unit.


The power cord should be unplugged from the wall outlet if the unit is to be left unused for a long period of time.

Immediately stop using the component and have it inspected and/or serviced by a qualified service agency if:


- The power supply cord or plug has been damaged.
- Objects have fallen or liquid has been spilled into the unit.
- The unit has been exposed to rain.
- The unit shows signs of improper operation
- The unit has been dropped or damaged in any way

Please use Class 2 Wiring when connecting the speaker terminals of the unit to ensure proper insulation and minimize the risk of electrical shock.


Place the unit on a fixed, level surface strong enough to support its weight. Do not place it on a moveable cart that could tip over.

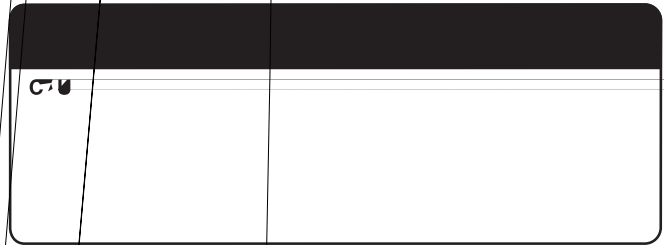



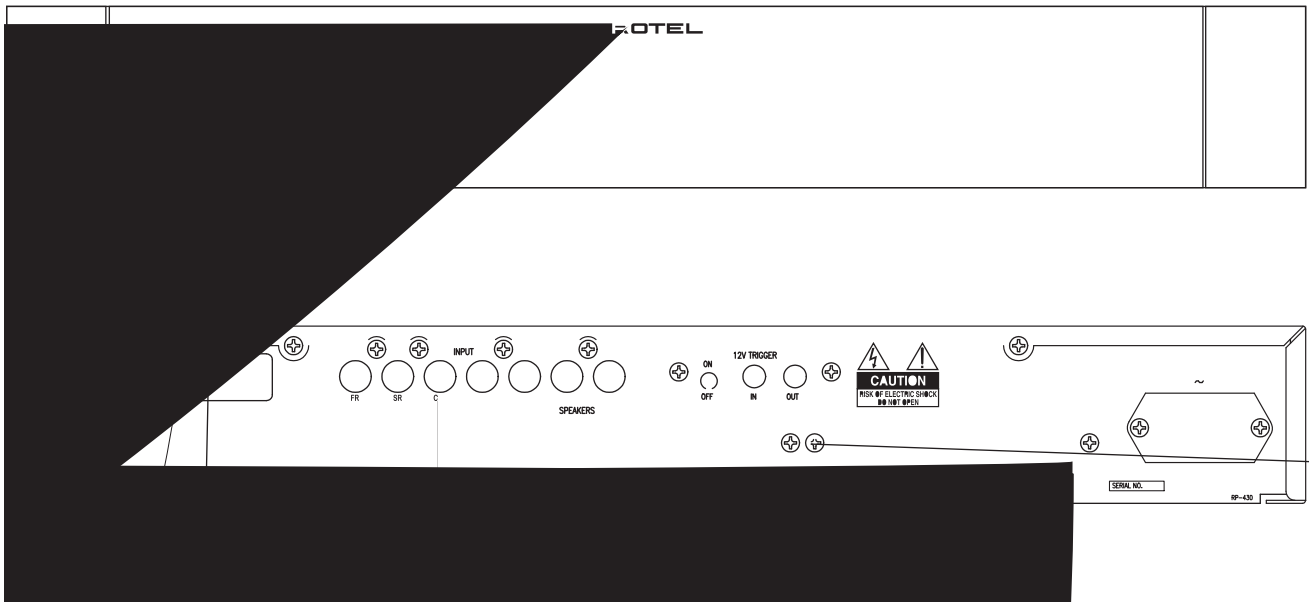



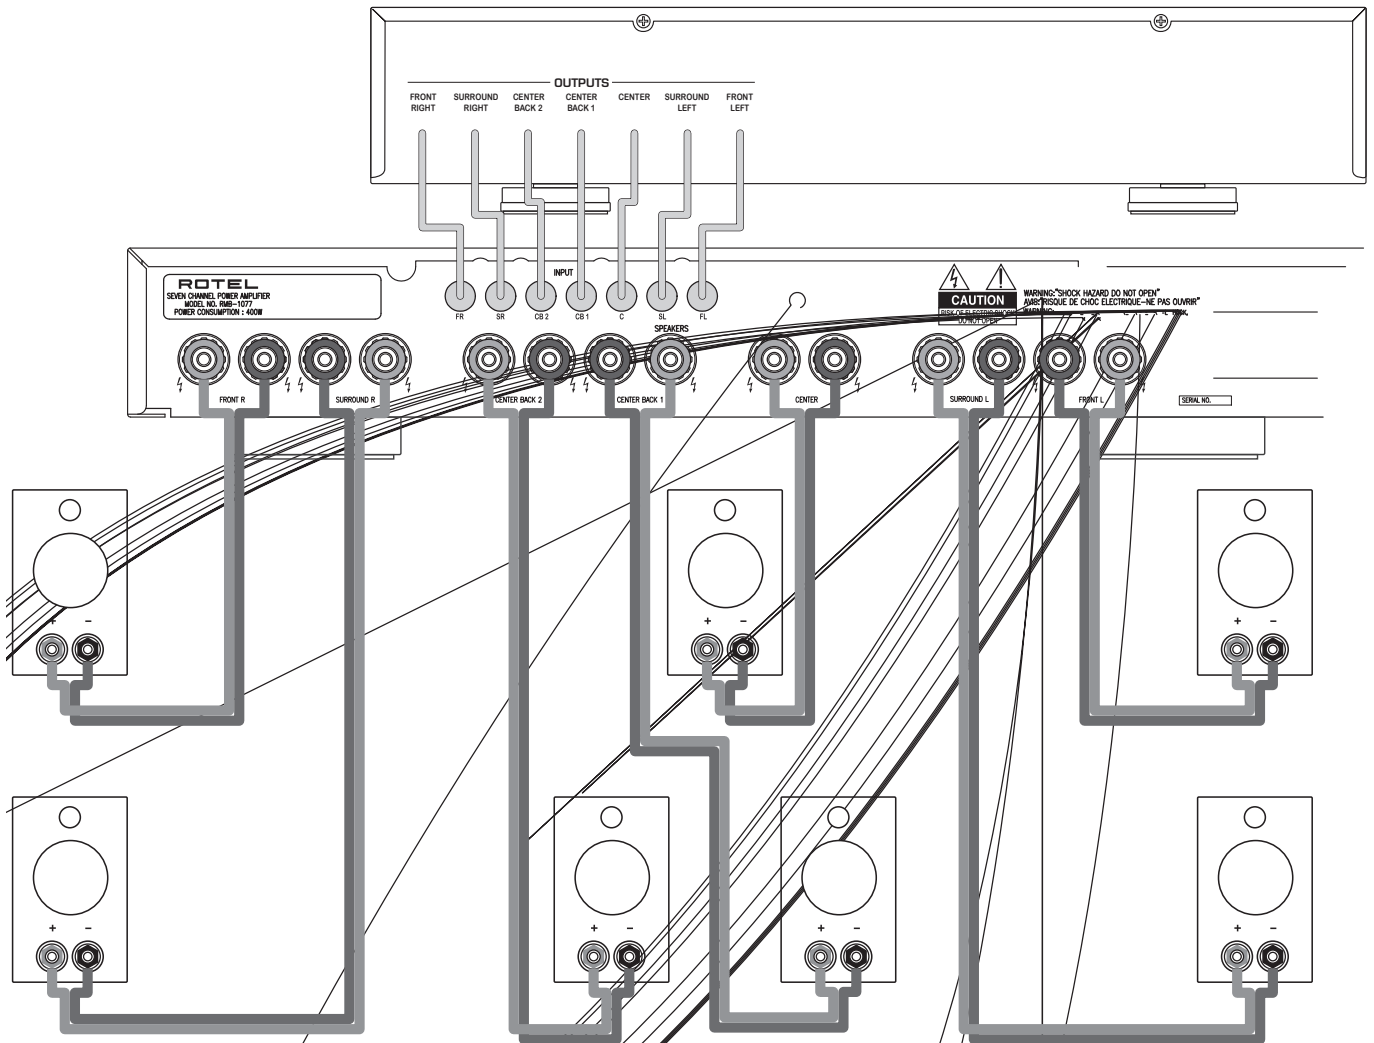

**As a safety precaution, this unit requires double insulated.**



**Figure 2: Input and Output Connections**  
**Anschlussdiagramm**  
**Prises d'entrées et de sorties**  
**Schema di collegamento**  
**Conexiones de Entrada y de Salida**  
**De in- en uitgangsaansluitingen**  
**In- och utgångar**  
**Подключение входов и выходов**



## Contents

|                                                                                                                                                                                                |          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| <b>Important Safety Information</b> .....                                                                                                                                                      | <b>2</b> |
| Figure 1: Controls and Connections                                                                                                                                                             | 3        |
| Figure 2: Input and Output Connections                                                                                                                                                         | 4        |
| <b>About Rotel</b> .....                                                                                                                                                                       | <b>5</b> |
| <b>Getting Started</b> .....                                                                                                                                                                   | <b>5</b> |
| Operating Features                                                                                                                                                                             | 5        |
| A Few Precautions                                                                                                                                                                              | 5        |
| Placement                                                                                                                                                                                      | 5        |
| <b>AC Power and Control</b> .....                                                                                                                                                              | <b>6</b> |
| AC Power Input                                                                                                | 6        |
| Power Switch and Indicator   | 6        |
| Turn On/Off Mode Selector                                                                                     | 6        |
| +12V Trigger Input and Output                                                                                 | 6        |
| <b>Protection Indicators</b>  .....                                                                           | <b>6</b> |
| <b>Input Signal Connections</b>  .....                                                                        | <b>7</b> |
| <b>Speakers</b> .....                                                                                                                                                                          | <b>7</b> |
| Speaker Selection                                                                                                                                                                              | 7        |
| Speaker Wire Selection                                                                                                                                                                         | 7        |
| Polarity and Phasing                                                                                                                                                                           | 7        |
| Speaker Connections                                                                                           | 7        |
| <b>Troubleshooting</b> .....                                                                                                                                                                   | <b>8</b> |
| Front Panel Power Indicator Is Not Lit                                                                                                                                                         | 8        |
| No Sound                                                                                                                                                                                       | 8        |
| Protection Indicator Is Lit                                                                                                                                                                    | 8        |
| <b>Specifications</b> .....                                                                                                                                                                    | <b>8</b> |

## About Rotel

A family whose passionate interest in music led them to manufacture high fidelity components of uncompromising quality founded Rotel over 40 years ago. Over the years that passion has remained undiminished and the goal of providing exceptional value for audiophiles and music lovers regardless of their budget, is shared by all Rotel employees.

The engineers work as a close team, listening to, and fine tuning each new product until it reaches their exacting musical standards. They are free to choose components from around the world in order to make that product the best they can. You are likely to find capacitors from the United Kingdom and Germany, semiconductors from Japan or the United States, and toroidal power transformers manufactured in Rotel's own factory.

Rotel's reputation for excellence has been earned through hundreds of good reviews and awards from the most respected reviewers in the industry, who listen to music every day. Their comments keep the company true to its goal – the pursuit of equipment that is musical, reliable and affordable.

All of us at Rotel thank you for buying this product and hope it will bring you many hours of enjoyment.

## Getting Started

Thank you for purchasing the Rotel RMB-1077 Seven-Channel Power Amplifier. When used in a high-quality music or home theater system, your Rotel amplifier will provide years of musical enjoyment.

The RMB-1077 is a sophisticated seven-channel power amplifier. Its digital amplifier circuitry, switching power supply, premium components, and Rotel's Balanced Design ensure superb sound quality. High current capability allows the RMB-1077 to drive difficult speaker loads with ease.

### Operating Features

- Seven amplifier channels.
- User selectable power on/off configuration: manual or controlled by remote 12 volt trigger signal.
- Protection circuitry with front panel indicators.

### A Few Precautions

Please read this manual carefully. In addition to installation and operating instructions, it provides information on various RMB-1077 system configurations. Please contact your authorized Rotel dealer for answers to any questions you might have. In addition, all of us at Rotel welcome your questions and comments.

Save the RMB-1077 shipping carton and packing material for future use. Shipping or moving the RMB-1077 in anything other than the original packing material may result in severe damage to your amplifier.

Be sure to keep the original sales receipt. It is your best record of the date of purchase, which you will need in the event warranty service is ever required.

### Placement

The RMB-1077 generates heat as part of its normal operation. The heat sinks and ventilation openings in the amplifier are designed to dissipate this heat. The ventilation slots in the top cover must be unobstructed. There should be 10 cm (4 inches) of clearance around the chassis, and reasonable airflow through the installation location, to prevent the amplifier from overheating. Likewise, remember the weight of the amplifier when you select an installation location. Make sure that the shelf or cabinet can support its weight.

## AC Power and Control

### AC Power Input **B**

The RMB-1077 is supplied with the proper AC power cord. Use only this cord or an exact equivalent. Do not use an extension cord. A heavy duty multi-tap power outlet strip may be used, but only if it is rated to handle the current demand of the RMB-1077.

Be sure the Power Switch on the front panel of the RMB-1077 is turned off. Then, plug one end of the cord into the AC power connector **B** on the back panel of the amplifier. Plug the other end into an appropriate AC outlet.

Your RMB-1077 is configured at the factory for the proper AC line voltage in the country where you purchased it (USA: 120 volts/60 Hz, Europe: 230 volts/50 Hz). The AC line configuration is noted on a label on the back panel.

**NOTE:** Should you move your RMB-1077 to another country, it is possible to configure your amplifier for use on a different line voltage. Do not attempt to perform this conversion yourself. Opening the enclosure of the RMB-1077 exposes you to dangerous voltages. Consult a qualified technician or the Rotel factory service department for information.

If you are going to be away from home for an extended period of time, it is a sensible precaution to unplug your amplifier.

### Power Switch and Indicator **1 2**

The Power Switch is located on the front panel. To turn the amplifier on (or to activate either of the optional automatic power-on modes), push the switch in. The LED indicator above the switch will light, indicating that the amplifier is turned on. To turn the amplifier off, push the button again and return it to the out position.

### Turn On/Off Mode Selector **5**

The RMB-1077 can be turned on and off automatically by using its "12V Trigger" system. The Turn On/Off Mode Selector switch is used to select which method is used.

- With the switch in the OFF position, the amplifier is turned on or off manually using the front panel power switch.
- With the switch in the 12V TRIG. position, the amplifier is turned on automatically when a 12 volt trigger signal is applied to the 3.5mm Jack labeled IN. The front panel POWER SWITCH overrides this function. It must be ON for the +12V trigger to work. Turning the switch OFF cuts power to the amplifier, regardless of whether or not a trigger signal is present.

### +12V Trigger Input and Output **6**

The jack labeled IN is for connecting the 3.5mm Plug/Cable carrying a +12 volt trigger signal to turn the amplifier on and off. To use this feature the adjacent switch **5** must be set in the 12V TRIG position (see previous section). This input accepts any control signal (AC or DC) ranging from 3 volts to 30 volts.

The jack labeled OUT is for connecting another 3.5mm plug/cable to provide a 12V trigger signal to other components. The 12V output signal is available whenever a +12 volt trigger signal is applied to the IN connector.

## Protection Indicators **3**

Thermal and protection circuits protect the amplifier against potential damage in the event of extreme or faulty operating conditions. Unlike many designs, the RMB-1077's protection circuit is independent of the audio signal and has no impact on sonic performance. Instead, the protection circuit monitors the temperature of the output devices and shuts down the amplifier if safe limits are exceeded.

In addition, the RMB-1077 includes overcurrent protection which operates only when load impedances drop too low. This protection is independent for each of the seven channels.

Should a faulty condition arise, the amplifier will stop playing and the PROTECTION LED on the front panel will light.

If this happens, turn the amplifier off, let it cool down for several minutes, and attempt to identify and correct the problem. When you turn the amplifier back on, the protection circuit will automatically reset and the PROTECTION LED should go out.

In most cases, the protection circuitry activates because of a fault condition such as shorted speaker wires, or inadequate ventilation leading to an overheating condition. In very rare cases, highly reactive or extremely low impedance speaker loads could cause the protection circuit to engage.

## Input Signal Connections 4

See Figure 2

The RMB-1077 has standard unbalanced RCA-type input connectors, the type used on nearly all audio equipment. There is an RCA input for each of the seven amplifier channels. These RCA inputs accept audio signals from preamplifiers or surround sound processors. Use high quality audio interconnect cables for best performance.

## Speakers

The RMB-1077 has seven sets of speaker connection terminals, one for each amplifier channel.

### Speaker Selection

The nominal impedance of the loudspeaker(s) connected to each channel of the RMB-1077 in the various operating modes should be no lower than 4 ohms.

### Speaker Wire Selection

Use insulated two-conductor stranded wire to connect the RMB-1077 to the speakers. The size and quality of the wire can have an audible effect on the performance of the system. Standard speaker wire will work, but can result in lower output or diminished bass response, particularly over longer distances. In general, heavier wire will improve the sound. For best performance, you may want to consider special high-quality speaker cables. Your authorized Rotel dealer can help in the selection of appropriate cables for your system.

### Polarity and Phasing

The polarity – the positive/negative orientation of the connections – for every speaker and amplifier connection must be consistent so all the speakers will be in phase. If the polarity of one connection is mistakenly reversed, bass output will be very weak and stereo imaging degraded. All wire is marked so you can identify the two conductors. There may be ribs or a stripe on the insulation of one conductor. The wire may have clear insulation with different color conductors (copper and silver). There may be polarity indications printed on the insulation. Identify the positive and negative conductors and be consistent with every speaker and amplifier connection.

### Speaker Connections 7

See Figure 2

The RMB-1077 has two color coded terminals for each amplifier channel. These speaker terminals accept bare wire, connector lugs, or “banana” type connectors (except in the European Community countries where their use is not permitted).

Route the wires from the RMB-1077 to the speakers. Give yourself enough slack so you can move the components to allow access to the speaker connectors.

If you are using banana plugs, connect them to the wires and then plug into the backs of the speaker connectors. The collars of the speaker connectors should be screwed in all the way (clockwise).

If you are using terminal lugs, connect them to the wires. If you are attaching bare wires directly to the speaker connectors, separate the wire conductors and strip back the insulation from the end of each conductor. Be careful not to cut into the wire strands. Unscrew (turn counterclockwise) the speaker connector collar. Place the connector lug around the shaft, or insert the bundled wire into the hole in the shaft. Turn the collars clockwise to clamp the connector lug or wire firmly in place.

---

**NOTE:** Be sure there are no loose wire strands that could touch adjacent wires or connectors.

---



## Troubleshooting

Most difficulties in audio systems are the result of poor or wrong connections, or improper control settings. If you encounter problems, isolate the area of the difficulty, check the control settings, determine the cause of the fault and make the necessary changes. If you are unable to get sound from the RMB-1077, refer to the suggestions for the following conditions:

### Front Panel Power Indicator Is Not Lit

No main power to the RMB-1077. Check AC power connections at the amplifier and the AC outlet. Check the front panel power switch. Make sure that it is set to the ON position. If using 12V trigger power-on, make sure that a trigger signal is present at rear panel 12V TRIG IN jack.

### No Sound

If the amp is getting AC power, but is producing no sound, check the PROTECTION INDICATOR on the front panel. If lit, see below. If not, check all of your connections and control settings on associated components. Make sure that your input connections and speaker connections match your system configuration.

### Protection Indicator Is Lit


The front panel PROTECTION INDICATOR light when the RMB-1077 protection circuits have shut off the amplifier. Typically, this occurs only when the amplifier has overheated, when there is faulty speaker wiring, or after a period of extreme use. Turn off the system and wait for the amp to cool. Then push the front panel power switch in and out to reset the protection devices. If the problem is not corrected or reoccurs, there is a problem with the system or the amplifier itself.

## Specifications

|                                                          |                                                                                                     |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Power Configurations</b> (FTC)                        | 7 x 100 Watts                                                                                       |
| <b>Watts/Channel</b><br>8 ohm load, 20-20 kHz, 0.03% THD | 100 watts, all channels driven, with 20KHz filter,                                                  |
| <b>Total Harmonic Distortion</b> (20Hz-20kHz, 8 ohms)    |                                                                                                     |
| Continuous Rated Power                                   | < 0.03%                                                                                             |
| One-Half Rated Power                                     | < 0.03%                                                                                             |
| One Watt per Channel                                     | < 0.03%                                                                                             |
| <b>Power Output</b> (4 Ohms, 0.09% THD)                  | 200 watts                                                                                           |
| <b>Intermodulation Distortion</b> 60 Hz:7 kHz, 4:1       | < 0.03%                                                                                             |
| <b>Damping Factor</b> (8 ohms)                           | 400                                                                                                 |
| <b>Amp Gain</b>                                          | 27.4dB                                                                                              |
| <b>Input Sensitivity/Impedance</b>                       | 1.2 V / 8.3 k ohms                                                                                  |
| <b>Frequency Response</b>                                | 10 - 80 KHz (±3dB)                                                                                  |
| <b>Signal to Noise Ratio (IHF A)</b>                     | 105 dB                                                                                              |
| <b>Power Requirements</b>                                |                                                                                                     |
| USA                                                      | 120 Volts, 60 Hz                                                                                    |
| Europe                                                   | 230 Volts, 50 Hz                                                                                    |
| <b>Power Consumption</b>                                 | 400 Watts                                                                                           |
|                                                          | 70 Watts - Idling                                                                                   |
|                                                          | 3 Watts - Standby                                                                                   |
| <b>Dimensions</b> (W x H x D)                            | 432 x 72 x 415 mm                                                                                   |
|                                                          | 17 <sup>1</sup> / <sub>8</sub> x 27 <sup>7</sup> / <sub>8</sub> x 16 <sup>3</sup> / <sub>8</sub> in |
| <b>Panel Height</b> (for rack mounting)                  | 60 mm, 2 <sup>3</sup> / <sub>8</sub> in                                                             |
| <b>Weight</b> (net)                                      | 7.8 kg, 17.2 lb.                                                                                    |

All specifications are accurate at the time of printing.  
Rotel reserves the right to make improvements without notice.



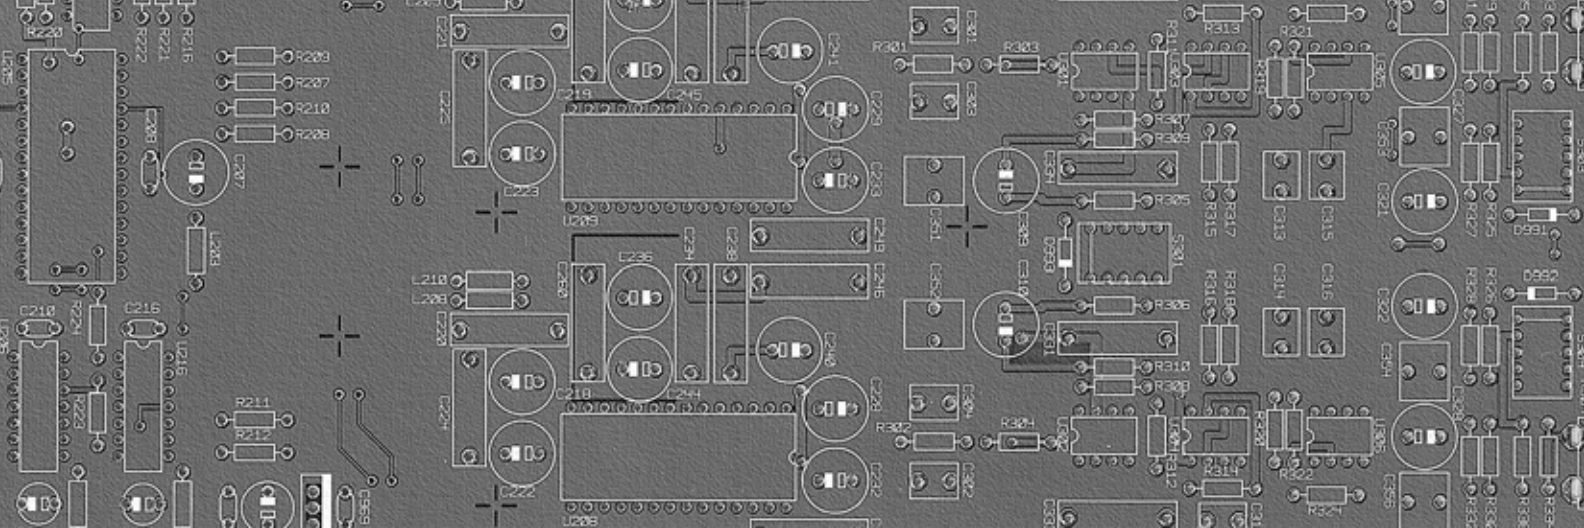

**ROTEL®**

The Rotel Co. Ltd.  
10-10 Shinsen-Cho  
Shibuya-Ku  
Tokyo 150-0045  
Japan

Phone: +81 3-5458-5325  
Fax: +81 3-5458-5310

Rotel of America  
54 Concord Street  
North Reading, MA 01864-2699  
USA

Phone: +1 978-664-3820  
Fax: +1 978-664-4109

Rotel Europe  
Dale Road  
Worthing, West Sussex BN11 2BH  
England

Phone: +44 (0)1903 221 600  
Fax: +44 (0)1903 221 525

Rotel Deutschland  
Kleine Heide 12  
D-33790 Halle/Westf.  
Germany  
Phone: +49 05201-87170  
Fax: +49 05201-73370

[www.rotel.com](http://www.rotel.com)

082 OMRMB-1077 081805

English • Français • Deutsch • Italiano • Español • Nederlands • Svenska • Russian

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>